

PHILIPS

LCD monitor

B Line

22 (21.5" / 54.6 cm diag.)

1920 x 1080 (Full HD)

221B8LHEB



Clear image, efficient performance

for maximum productivity

Get your best work done with the Philips 22" Full HD monitor. Crisp and vivid Full HD gives you the space and clarity to see your work. Features like height-adjustment, Flicker-free and LowBlue mode make work easy-on-the-eyes.

Brilliant performance

- SmartImage presets for easy optimized image settings
- 16:9 Full HD display for crisp detailed images

Features for the way you work

- Built-in stereo speakers for multimedia
- HDMI ensures universal digital connectivity

Sustainable Eco-design

- Zero power consumption with 0 watt hard switch
- Designed to meet environmental standards

Designed for comfortable productivity

- SmartErgoBase enables people-friendly ergonomic adjustments
- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity


Highlights

SmartImage



SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

16:9 Full HD display

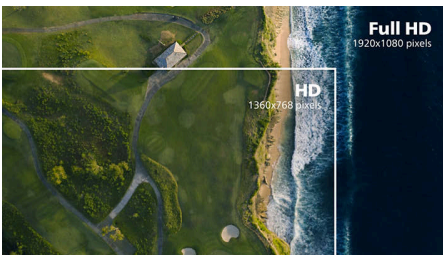

Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed


for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

Flicker-free technology




Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

SmartErgoBase

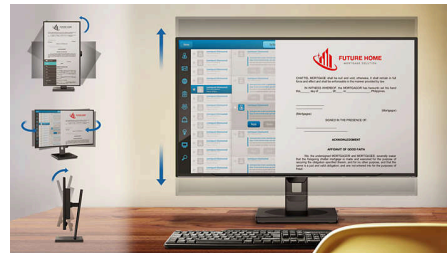

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height adjustable stand guarantees the optimal viewing level, reducing the physical strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.

EasyRead mode

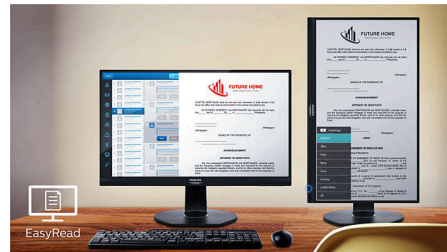

EasyRead mode for a paper-like reading experience

Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

Designed for sustainability

Designed for sustainability, and reduced operating costs, this monitor meets environmental standards. Such as: ENERGY STAR, EPEAT, TCO Certified. For more information on certification, please visit: ENERGY STAR: <https://www.energystar.gov/> EPEAT: <https://www.epeat.net/> TCO Certified: <https://tcocertified.com/>

Zero power consumption

At the flick of the 0 watt hard switch which is conveniently located at the back, you can completely cut-off your monitor from AC power. This results in zero power consumption reducing your carbon footprint even further



Specifications

Picture/Display

Panel Size: 21.5 inch / 54.6 cm
Aspect ratio: 16:9
LCD panel type: TFT-LCD (TN)
Backlight type: W-LED system
Pixel pitch: 0.248 x 0.248 mm
Optimum resolution: 1920 x 1080 @ 60Hz
Brightness: 250 cd/m²
Display colors: 16.7 M
Color gamut (typical): NTSC 72% (CIE1931)
Contrast ratio (typical): 1000:1
SmartContrast: 50,000,000:1
Response time (typical): 1 ms (Gray to Gray)*
Viewing angle: 170° (H) / 160° (V), @ C/R > 10
Picture enhancement: SmartImage
Effective viewing area: 476.64 (H) x 268.11 (V)
Scanning Frequency: 30 - 83 kHz (H) / 50 - 76 Hz (V)
sRGB
Flicker-free
Pixel Density: 102 PPI
LowBlue Mode
Display Screen Coating: Anti-Glare, 3H, Haze 25%
EasyRead
Adaptive sync (VRR)

Connectivity

Signal Input: VGA (Analog), HDMI 1.4
Sync Input: Separate Sync, Sync on Green
Audio (In/Out): PC audio-in, Headphone out

Convenience

Built-in Speakers: 2 W x 2
Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
User convenience: SmartImage, Input, Brightness, Menu, Power On/Off
OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
Other convenience: Kensington lock, VESA mount (100x100mm)
Control software: SmartControl

Stand

Height adjustment: 130 mm
Pivot: -/+ 90 degree
Swivel: -175/+175 degree
Tilt: -5/30 degree

Power

ECO mode: 8.5 W (typ.)
Power supply: Built-in, 100-240VAC, 50-60Hz
Off mode: Zero watts with Zero switch
On mode: 13.27 W (typ.) (EnergySta test method)
Standby mode: < 0.3 W (typ.)
Power LED indicator: Operation - White, Standby mode- White (blinking)
Energy Label Class: E

Dimensions

Packaging in mm (WxHxD): 565 x 490 x 184 mm
Product without stand (mm): 504 x 304 x 47 mm
Product with stand(max height): 504 x 477 x 206 mm

Weight

Product with packaging (kg): 6.34 kg
Product with stand (kg): 4.45 kg
Product without stand (kg): 2.55 kg

Operating conditions

Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
Temperature range (operation): 0°C to 40°C °C
Relative humidity: 20%-80 %
Temperature range (storage): -20°C to 60°C °C
MTBF (demonstrated): 70,000 hrs (excluded backlight)

Sustainability

Environmental and energy: EnergyStar 8.0, EPEAT*, TCO Certified Edge, RoHS, WEEE
Post consumer recycled plastic: 85%
Recyclable packaging material: 100 %
Specific Substances: PVC / BFR free housing, Mercury free

Compliance and standards

Regulatory Approvals: CE Mark, FCC Class B, SEMKO, cETLus, CU-EAC, PSB, EPA, UKRAINIAN, TUV Ergo, TUV/GS, RCM, TUV/ISO9241-307, CB

Cabinet

Finish: Texture
Foot: Black
Front bezel: Black
Rear cover: Black

What's in the box?

Cables: D-Sub cable, HDMI cable, Audio cable, Power cable
Monitor with stand
User Documentation

