

Philips  
LCD monitor with Ultra  
Wide-Color

**E Line**  
24 (23.8"/60.5 cm diag.)  
1920 x 1080 (Full HD)

**246E9QSB**



## Stunning colour, stylish design

The Philips E line monitor features stylish design with extraordinary picture performance. A narrow border Full HD display with Ultra Wide-Color brings you to real true-to-life visuals. Enjoy superior viewing in a stylish design.

### Superb Picture Quality

- 16:9 Full HD display for crisp, detailed images
- IPS LED wide view technology for image and colour accuracy
- Ultra Wide-Color wider range of colours for a vivid picture

### Features designed for you

- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity
- Narrow-border display for a seamless appearance

### Greener every day

- Low power consumption saves energy bills
- Eco-friendly materials meet major international standards

**PHILIPS**


# Highlights

## Ultra Wide-Color Technology



Ultra Wide-Color Technology delivers a wider spectrum of colours for a more brilliant picture. The Ultra Wide-Color wider "colour gamut" produces more natural-looking greens, vivid reds and deeper blues. Bring media entertainment, images and even productivity more alive with vivid colours from Ultra Wide-Color Technology.

## IPS technology

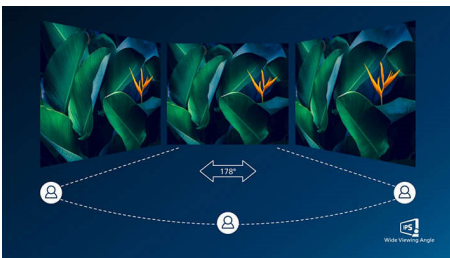


IPS displays use an advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays give you remarkably crisp images with vivid colours, making them ideal not only for Photos, movies and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

## 16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colours, expect a true-to-life picture.

## Ultra-narrow Border

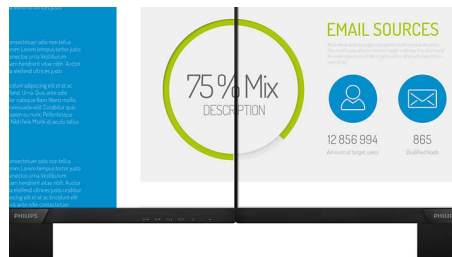

The new Philips displays feature ultra-narrow borders which allow for minimal distractions and maximum viewing size. Especially suited for multi-display or tiling setups like gaming, graphic design and professional applications, the ultra-narrow border display gives you the feeling of using one large display.

## Flicker-Free technology




Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

## LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

## EasyRead mode

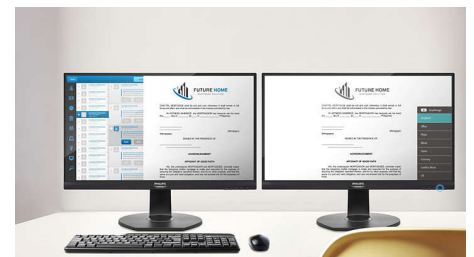

EasyRead mode for a paper-like reading experience

## Eco-friendly materials

"Philips is committed to using sustainable, eco-friendly materials across its monitor range. All body plastic parts, metal chassis parts and packing materials use 100% recyclable materials. In some selected models, we use up to 65% post-consumer recycled plastics. Strict adherence to RoHS standards ensures a substantial reduction or elimination of toxic substances like lead, for example. Mercury content in monitors with a CCFL backlight has been reduced significantly, and has been eliminated completely in monitors with an LED backlight.

## Low power consumption

Low power consumption saves energy bills



Ultra Wide Color



IPS Wide Viewing Angle



Full HD 1080p



Ultra Narrow Bezel



Flicker-free



LowBlue Mode



EasyRead



Ultra Narrow Bezel



Hg Free

# Specifications

## Connectivity

- Signal Input: VGA (Analogue), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

## Picture/Display

- Panel Size: 23.8 inch/60.5 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.275 x 0.275 mm
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colours: 16.7 M
- Colour gamut (typical): NTSC 108%\*, sRGB 129%\*
- Contrast ratio (typical): 1000:1
- SmartContrast: 20,000,000:1
- Response time (typical): 4 ms (Grey to Grey)\*
- Viewing angle: 178° (H)/178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage Lite
- Effective viewing area: 527.04 (H) x 296.46 (V)
- Scanning Frequency: 30–83 kHz (H)/50–76 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 93 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- EasyRead

## Convenience

- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu, Brightness, Input, SmartImage Lite
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (75 x 75 mm)

## Stand

- Tilt: -5/20 degree

## Power

- Power supply: External, 100–240 VAC, 50–60 Hz
- Off mode: < 0.3 W (typ.)
- On mode: 13.04 W (typ.) (EnergyStar test method)
- Standby mode: < 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)

## Dimensions

- Product with stand (mm): 540 x 416 x 190 mm
- Packaging in mm (W x H x D): 586 x 477 x 141 mm
- Product without stand (mm): 540 x 326 x 39 mm

## Weight

- Product with packaging (kg): 4.28 kg
- Product with stand (kg): 2.90 kg
- Product without stand (kg): 2.34 kg

## Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0 to 40 °C
- MTBF: 50,000 hrs (excluding backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20 to 60 °C

## Sustainability

- Environmental and energy: EnergyStar 8.0, RoHS, Mercury Free, WEEE
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: CE Mark, FCC Class B, CU-EAC, TUV/ISO9241-307, BSMI, MEPS, RCM, VCCI, CB, cETLus, ICES-003, TUV-BAUART, UKRAINIAN

## Cabinet

- Colour: Black / Silver
- Finish: Glossy

## What's in the box?

- Cables: D-Sub cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-04-24

Version: 4.0.1

EAN: 87 12581 75064 0

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.

\* Response time value equal to SmartResponse

\* NTSC Area based on CIE 1976

\* sRGB Area based on CIE1931

\* The monitor may look different from feature images.