



Philips Monitor
LCD monitor with
SmoothTouch

B Line

24 (23.8"/60.5 cm diag.)
1920 x 1080 (Full HD)

242B9TL

Brilliant interactive display with SmoothTouch

A sturdy, water-resistant and dust-resistant, anti-glare touchscreen monitor for flexible use anywhere, with articulating stand to fit angles you need. Offering simple and intuitive use across applications, greatly boosts productivity.

Brilliant interactive display

- SmoothTouch display for natural, fluid touch response
- 16:9 Full HD display for crisp, detailed images
- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity
- SmartContrast for rich black details
- Stylus for fluid and accurate performance with more control
- Monitor front surface meets IP65 for water and dust resistance
- Anti-glare coating (AG) for reducing the visual interference

Easy to experience

- HDMI ensures universal digital connectivity
- DisplayPort connection for maximum visuals
- VESA mount allows for flexibility
- USB 3.1 high-speed data transfer

PHILIPS

LCD monitor with SmoothTouch
B Line 24 (23.8"/60.5 cm diag.), 1920 x 1080 (Full HD)

242B9TL/00

Highlights

SmoothTouch



This Philips display uses Projected capacitive 10-point touch technology for fluid response. You can fully utilise the new capabilities of touch-based applications and bring your older applications to life. Touch-type with 10 fingers or play exciting interactive games with your friends. Collaborate with colleagues interactively at work or school environment and increase your productivity and efficiency.

Water- and dust-resistant



For less-than-perfect environments, you need a monitor that's designed to hold up to the splashes of water and dust that happen in the everyday world. Ingress Protection (IP) ratings defined in international standard IEC/EN 60529, are used to define levels of sealing effectiveness of electrical enclosures against intrusion from foreign bodies and moisture. This Philips display meets the international IP rating for water and dust resistance. It will hold up to the water splashes and dust that happen in the everyday world.

Anti-glare coating




Anti-Glare Coating, abbreviated AG, can reduce the glare of your touch monitor screen. This chemical process is made in the back of the touch glass and therefore you don't need an additional film to have comfort in your eyes. Images are crystal clear with pure colour and great clarity.

16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colours, expect a true-to-life picture.

SmartContrast

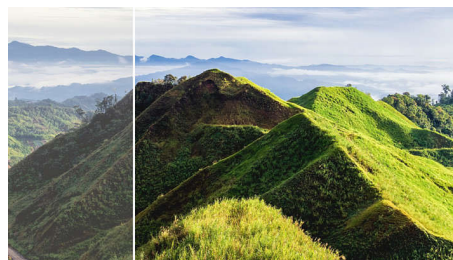

SmartContrast is a Philips technology that analyses the contents you are displaying, automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are

displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

Flicker-Free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

EasyRead mode



EasyRead mode for a paper-like reading experience



Specifications

Connectivity

- Signal Input: VGA (Analogue), DVI-D (digital, HDCP), DisplayPort 1.2, HDMI 1.4
- USB: USB 3.1 x 2 (1 w/fast charging)*
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

Picture/Display

- Panel Size: 23.8 inch/60.5 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.275 x 0.275 mm
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 250 cd/m²
- Display colours: 16.7 M
- Colour gamut (typical): NTSC 72% (CIE 1931)
- Contrast ratio (typical): 1000:1
- SmartContrast: 50,000,000:1
- Response time (typical): 5 ms (Grey to Grey)*
- Viewing angle: 178° (H)/178° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Effective viewing area: 527 (H) x 296.5 (V)
- Scanning Frequency: 30–85 kHz (H) / 48–75 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 93 PPI
- LowBlue Mode
- EasyRead

Touch

- Ingress protection: IP65 - front only
- Operating system: Windows 10 / 8.1 / 8 / 7; Android 7.1 / 7.0 / 6.0 / 5.0 / 4.4; certain Linux versions*
- Sealability: Touchscreen sealed to bezel; Touchscreen sealed to LCD
- Touch active area: 527 mm (H) x 296.5 mm (V)
- Touch glass hardness: 7 H
- Touch interface: USB
- Touch method: Stylus, Finger, Glove*
- Touch points: 10 points
- Touch technology: Projected capacitive
- Palm rejection area: >= 30 x 30 mm
- Touch glass coating: Haze: 5% -/+ 3%, Gloss: 80 -/+ 10

Convenience

- Built-in Speakers: 2 W x 2
- Plug and Play Compatibility: DDC/CI, sRGB, Windows 10 / 8.1 / 8 / 7

- User convenience: SmartImage, Input, Brightness, Menu, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)
- Control software: SmartControl

Stand

- Height adjustment: 184 (Horizontal), 75 (Vertical) mm
- Tilt: -5–90 degree
- Folding angle: 0–70 degrees

Power

- ECO mode: 11.5 W (typ.)
- Power supply: External, 100–240 VAC, 50–60 Hz
- Off mode: < 0.3 W (typ.)
- On mode: 15.68 W (typ.) (EnergyStar test method)
- Standby mode: < 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)
- Energy Label Class: E

Dimensions

- Packaging in mm (W x H x D): 620 x 433 x 168 mm
- Product without stand (mm): 554 x 338 x 50 mm
- Product with stand (max height): 554 x 413 x 227 mm

Weight

- Product with packaging (kg): 11.06 kg
- Product with stand (kg): 8.15 kg
- Product without stand (kg): 4.86 kg

Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40°C °C
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C
- MTBF (demonstrated): 70,000 hrs (excluded backlight)

Sustainability

- Environmental and energy: EnergyStar 8.0, EPEAT*, TCO Certified, RoHS, WEEE

- Recyclable packaging material: 100 %
- Specific Substances: PVC/BFR free housing, Mercury free

Compliance and standards


- Regulatory Approvals: CB, CE Mark, FCC Class B, SEMKO, UKRAINIAN, ICES-003, TUV/GS, TUV Ergo, CU-EAC, EAEU RoHS, cETLus

Cabinet

- Finish: Texture
- Foot: Black
- Front bezel: Black
- Rear cover: Black

What's in the box?

- Cables: D-Sub cable, HDMI cable, DP cable, USB-A to B cable, Audio cable, Power cable
- Monitor with stand
- User Documentation
- Accessory: Stylus touch pen x 1 (black)

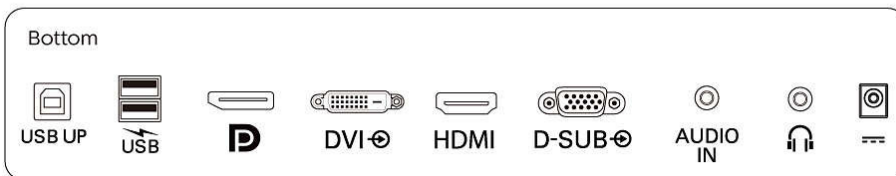

Issue date 2024-04-24

Version: 6.0.1

EAN: 87 12581 77117 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
* Glove material and thickness: Nitrile (0.15 mm), Cotton (0.31 mm), CPE (0.03 mm), PVC (0.12 mm)
* Response time value equal to SmartResponse
* Please refer to "SmoothTouch" in the user manual for more details on operating system support when using the touch function.
* Fast charging complies with USB BC 1.2 standard
* EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.
* The monitor may look different from feature images.