



Philips  
LED monitor

V Line  
23" (58.4 cm)

236V3LSB

## Enjoy great LED pictures in vivid colors

This attractive, slim display is a delight to use. Essential features like SmartContrast that ensures rich bright images makes it a great choice!

### Great picture quality

- LED technology for natural colors
- SmartContrast 10000000:1 for incredible rich black details
- 16:9 Full HD display for best viewing experience

### Design that complements any interior

- Attractive slim, glossy design
- Small footprint to blend into any lifestyle

### Greener everyday

- Mercury Free eco-friendly display
- Energy Star for energy efficiency and low power consumption

### Great convenience

- Easy display performance tuning with SmartControl Lite


# PHILIPS

# Highlights

## LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

## SmartContrast ratio 10000000:1

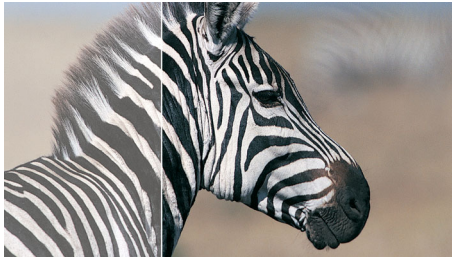

You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

## 16:9 Full HD



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD



Issue date 2022-04-21

Version: 3.0.2

12 NC: 8670 000 75704  
EAN: 87 12581 60159 1

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

# Specifications

## Picture/Display

- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Panel Size: 23 inch / 58.4 cm
- Effective viewing area: 509.18 (H) x 286.42 (V)
- Aspect ratio: 16:9
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Response time (typical): 5 ms
- Brightness: 250 cd/m<sup>2</sup>
- SmartContrast: 10,000,000:1
- Contrast ratio (typical): 1000:1
- Pixel pitch: 0.265x 0.265 mm
- Viewing angle: 170° (H) / 160° (V), @ C/R > 10
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

## Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

## Convenience

- User convenience: Auto, 4:3 / Wide, Brightness, Menu, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese, Turkish
- Other convenience: Kensington lock
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7

## Stand

- Tilt: -5/+20 degree

## Power

- On mode: 18.5 W (EnergyStar 5.0 test method)
- Standby mode: 0.5 W
- Off mode: 0.5 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50/60Hz

## Dimensions

- Product with stand (mm): 566 x 426 x 219 mm
- Product without stand (mm): 566 x 355 x 44 mm
- Packaging in mm (WxHxD): 614 x 440 x 112 mm

## Weight

- Product with stand (kg): 3.19 kg
- Product without stand (kg): 2.22 kg
- Product with packaging (kg): 4.54 kg

## Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- MTBF: 30,000 hour(s)

## Sustainability

- Environmental and energy: EnergyStar 5.0, EPEAT Silver, RoHS, Mercury Free
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, PSB, SASO, SEMKO, TUV Ergo, TUV/ GS, UL/cUL, WEEE

## Cabinet

- Color: Black
- Finish: Glossy (front bezel) /Texture (rear cover)