

Philips  
QHD LCD monitor

**E Line**  
27" (68.6 cm)  
2560 x 1440 (QHD)

**275E2FAE**



## Experience true colour, unconstrained visuals

The new Philips E line monitor with 4 sides, narrow border and cable management design offers a stylish enhancement to your workspace. Experience crystal-clear Quad HD visuals, 1 ms and AMD FreeSync™ technology for a smooth gaming action.

### Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- Built-in stereo speakers for multimedia
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity
- Tilt and height-adjust for an ideal viewing position
- Cable management reduces cable clutter for a neat workspace

### Good for Gaming

- 1 ms (MPRT) fast response for crisp images and smooth gameplay
- Effortlessly smooth gameplay with AMD FreeSync™ technology
- SmartImage game mode optimised for gamers

### Superb Picture Quality

- SmartContrast for rich black details
- IPS LED wide view technology for image and colour accuracy
- Crystal clear images with Quad HD 2560 x 1440 pixels

**PHILIPS**

QHD LCD monitor  
E Line 27" (68.6 cm), 2560 x 1440 (QHD)

275E2FAE/01


# Highlights

## 4-sided frameless



Extremely minimising 4 sided bezels on this virtually frameless display give a minimalist look and offer an expansive viewing experience. Expands your productivity and makes you focus on the vivid images with seamless visions. Significant wide view without distraction and even multi monitor set-up in pivot mode.

## CrystalClear images

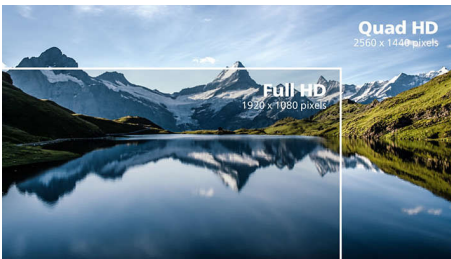


These Philips screens deliver Crystal Clear, Quad HD 2560 x 1440 or 2560 x 1080 pixel images. Utilising high-performance panels with a high-density pixel count, enabled by high bandwidth sources like USB-C, Displayport and HDMI, these new displays will make your images and graphics come alive. Whether you are a demanding professional who requires extremely detailed information for CAD-CAM solutions and uses 3D graphic applications, or a financial wizard working on huge spreadsheets, Philips displays will give you Crystal Clear images.

## Ultra-smooth gaming




Gaming shouldn't be a choice between choppy gameplay or broken frames. With the new Philips monitor it doesn't have to be. Get fluid, artefact-free performance at virtually any frame rate with AMD FreeSync™ technology, smooth, quick refresh and ultra-fast response time.

## 1 ms MPRT fast response

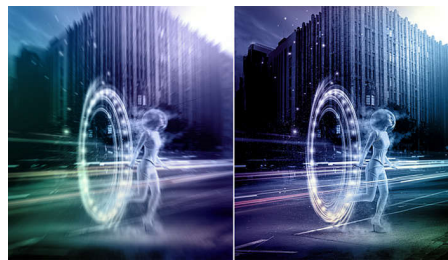

MPRT (motion picture response time) is a more intuitive way to describe response time, which directly refers to the duration between seeing blurry noise and clean, crisp images. The Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur and delivers sharper and more precise visuals to enhance your gaming experience. The best choice for playing thrilling and twitch-sensitive games.


## SmartImage Game mode

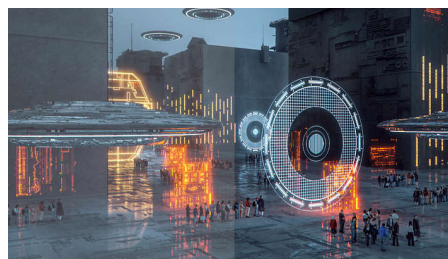

The new Philips gaming display has quick-access OSD fine-tuned for gamers, offering you


multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts the display with the fastest response time and high colour, along with image adjustments. "RTS" mode (Real-time strategy) has a special SmartFrame mode that enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customised settings based on different games, ensuring best performance.

## Flicker-Free technology

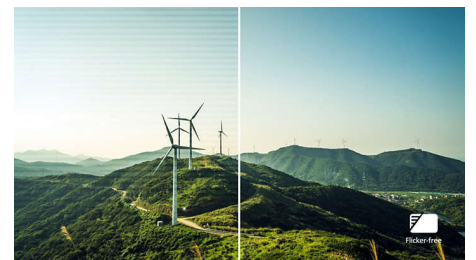

Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

## LowBlue Mode

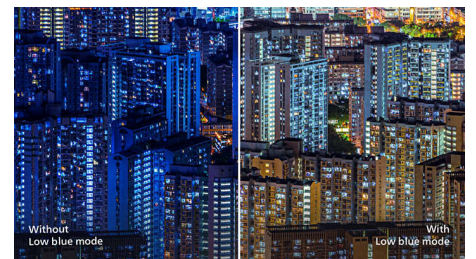

Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.



4-sided  
Frameless



Quad HD



AMD  
FreeSync



Fast Response  
1ms MPRT



SmartImage™  
Game



Flicker-free



LowBlue Mode



Built-in Speaker



Wide Viewing  
Angle



Wide Viewing  
Angle

# Specifications

## Connectivity

- Signal Input: DisplayPort x 1, HDMI x 2
- Sync Input: Separate Sync
- Audio (In/Out): Audio out

## Picture/Display

- Panel Size: 27 inch/68.6 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.2331 x 0.2331 mm
- Brightness: 350 cd/m<sup>2</sup>
- Display colours: 16.7 M
- Colour gamut (typical): NTSC 101.6%\*, sRGB 115.6%\*
- Contrast ratio (typical): 1000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 4 ms (Grey to Grey)\*
- Viewing angle: 178° (H)/178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage game
- Maximum resolution: 2560 x 1440 @ 75 Hz\*
- Effective viewing area: 596.74 (H) x 335.66 (V) mm
- Scanning Frequency: 30–144 kHz (H)/48–75 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 109 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- MPRT: 1 ms
- EasyRead
- AMD FreeSync™ technology

## Convenience

- Built-in Speakers: 3 W x 2
- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu, Volume, Input, SmartImage Game
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)

## Stand

- Height adjustment: 100 mm
- Tilt: -5/20 degree

## Power

- Power supply: External, 100–240 VAC, 50–60 Hz
- Off mode: 0.3 W (typ.)
- On mode: 18.55 W (typ.) (EnergyStar test method)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)
- Energy Label Class: F

## Dimensions

- Packaging in mm (W x H x D): 678 x 504 x 153 mm
- Product without stand (mm): 614 x 354 x 38 mm
- Product with stand (max height): 614 x 475 x 234 mm

## Weight

- Product with packaging (kg): 7.59 kg
- Product with stand (kg): 5.23 kg
- Product without stand (kg): 3.43 kg

## Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0 to 40 °C
- MTBF: 50,000 hrs (excluding backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20 to 60 °C

## Sustainability

- Environmental and energy: EnergyStar 8.0, TCO Certified, RoHS, Mercury Free
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: EPA, CB, TUV/ISO9241-307, TUV-BAUART, CU-EAC, EAEU RoHS, CE Mark, FCC Class B, ICES-003

## Cabinet

- Colour: Black
- Finish: Textured

## What's in the box?

- Cables: HDMI cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-04-06

Version: 5.0.1

EAN: 87 12581 76765 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.  
\* The maximum resolution works for either HDMI input or DP input.  
\* NTSC Area based on CIE 1976  
\* sRGB Area based on CIE1931  
\* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.  
\* The monitor may look different from feature images.