




Philips  
LCD widescreen monitor

19.1" wide  
WXGA+

190CW8FB

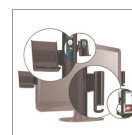

## Elegant Widescreen performance

With the first-ever SmartAccessory to personalize your workspace and help keep it neat plus SmartImage for the best-ever LCD performance and a large wide screen, the 190CW8 brings you premium display and the ultimate in convenience.

### Outstanding front of screen performance

- Big, wide screen: IM, write mail, watch videos on one screen
- SmartImage: For an optimized display experience
- SmartContrast: Dynamic, optimized contrast for visual clarity
- Optimize response time for different viewing requirements
- DVI-D input and HDCP support
- PerfectTune ensures top quality LCD display delivered to you
- Empowered for Windows Vista

### Great convenience

- SmartAccessory to personalize and organize your workspace
- Hassle-free display performance tuning with SmartControl II
- USB port for convenient peripheral connections

### Green design

- For your safety: Aerospace composite fire retardant case
- TCO'06 compliance for a better multimedia experience

# Highlights

## Widescreen design

A wide screen has a wider aspect ratio for displaying more entertainment or information to have more fun and get more done.

## SmartImage

SmartImage is an exclusive, leading edge Philips technology that analyzes the content displayed on your screen. Based on a scenario you select, SmartImage dynamically enhances the contrast, color saturation and sharpness of images and videos for ultimate display performance - all in real time with the press on a single button.

## SmartContrast

SmartContrast is Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and optimum contrast for more entertainment fun when viewing videos or playing games where dark hues are displayed; when you select the Economy mode, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

## SmartResponse

SmartResponse is exclusive Philips technology that adjusts response time to application requirements, delivering faster response times for gaming and videos or better color saturation for viewing photos and static images.

## HDCP ready

High-Bandwidth Digital Content Protection (HDCP) is a copyright protection system that is incorporated into the DVI connector. It helps stop unauthorized duplication of copyrighted content. HDCP allows you to play protected content media such as movies and concerts. It checks the signal to prevent piracy, allowing only legal copies of content to display.

## PerfectTune

PerfectTune is industry-leading, proprietary Philips testing and algorithm technology for monitor adjustment and fine tuning, an extensive process that ensures ultimate display performance in compliance with a standard four-times more stringent than Microsoft's Vista requirements from each and every monitor that leaves the factory - not just a few review samples. Only Philips goes to these lengths to deliver this exacting level of color accuracy and display quality in every new monitor.

## Windows Vista ready

Philips Vista-ready monitors are empowered for vibrant, exciting display of this new, visually sophisticated and demanding Windows operating system, designed to enhance your entertainment experience, make you more productive and help you control your computing experience at home and in the office, making viewing, finding and organizing information for work or play quick, efficient and easy.

## SmartAccessory

SmartAccessory is an innovative and friendly solution for easily and flexibly attaching peripherals like a webcam or stationery onto a monitor frame to keep your space tidy and organized. It is equipped with multifunction clips with a universal interface that attaches to the monitor frame and moves up and down or left and right to accommodate a variety of included or optional holders for stationery, small peripherals like webcams, conveniently locating work or personal items in your line of sight and at your fingertips.

## SmartControl II

SmartControl II is monitor-based software with an easy-to-use on-screen graphic interface that guides you through fine-tuning

resolution, color calibration and other display settings including brightness, contrast, clock & phase, position, RGB, white point and - on models with onboard speakers - volume adjustments.

## USB 2.0 port

The universal serial bus or USB is a standard protocol for linking PCs and peripherals. Because it delivers high speed at a low cost, USB has become the most popular method for connecting peripheral devices to a computer. A port located on a monitor directly in the user's line of sight provides easy, high-speed connectivity for USB devices at a convenient location. (USB 2.0 support is dependent on your PC's USB configuration; when connected to a PC that supports USB 2.0, your monitor is USB 2.0 compatible)

## Flame retardant cabinet

PC/ABS plastic composite is the industry's best and toughest flame-retardant casing material; and is a space-age compound deployed in the aerospace and automotive industries as well as in fire detectors that is compliant with most stringent fire safety standards.

## TCO'06-compliant for multimedia

TCO'06 - compliant monitors meet ergonomic, environmental and health standards for multimedia displays created by TCO - the Swedish Confederation of Professional Employees; TCO'06, the most stringent-ever, covers requirements for visual ergonomics in multimedia display, including health considerations as well as other features that characterize good quality displays. A TCO'06-compliant display's specifications must meet or exceed TCO'06 standards for visual ergonomics, emissions and energy conservation.



# Specifications

## Picture/Display

- LCD panel type: 1440 x 900 pixels, Anti-glare polarizer, RGB vertical stripe
- Panel Size: 19.1" / 48.1 cm
- Effective viewing area: 410.4 x 256.5 mm
- Pixel pitch: 0.285 x 0.285 mm
- Brightness: 300 cd/m<sup>2</sup>
- Contrast ratio (typical): 1000:1
- SmartContrast ratio (dynamic): 3500:1
- Display colors: 16.7 M
- Viewing angle: 160° (H) / 160° (V), @ C/R > 10
- Response time (typical): 5 ms
- SmartResponse: 2 ms (Gray to Gray)
- Maximum Resolution: 1440 x 900 @ 75 Hz
- Optimum Resolution: 1440 x 900 @ 60 Hz
- Video Dot Rate: 140 MHz
- Horizontal Scanning Frequency: 30 - 83 kHz
- Vertical Scanning Frequency: 56 - 76 Hz
- Picture enhancement: SmartImage
- sRGB

## Connectivity

- Signal Input: VGA (Analog), DVI-D
- USB: USB 2.0 x 1
- Video Sync Input Signal: Composite Sync, Separate Sync, Sync on Green

## Convenience

- User convenience: On-screen Display, SmartControl II
- Monitor Controls: SmartImage, Auto (Back), Input (Down), Brightness (Up), Menu (OK), Power On/Off
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Simplified Chinese, Spanish
- Other convenience: Kensington lock compatible
- Plug & Play Compatibility: DDC/CI, sRGB, Windows 98/ME/2000/XP/Vista

- Regulatory Approvals: CE Mark, EMC, Energy Star, FCC-B, UL, CSA
- Tilt: -5° to 20°

## Accessories

- Included Accessories: AC Power Cord, VGA cable
- User Manual

## Dimensions

- Box dimensions (W x H x D): 500 x 415 x 149 mm
- Box dimensions in inch (W x H x D): 19.7 x 16.3 x 5.9 inch
- Set dimensions (W x H x D): 452 x 371 x 78 mm
- Set dimensions in inch (W x H x D): 17.8 x 14.6 x 3.1 inch
- Set dimensions with stand (W x H x D): 452 x 375 x 183 mm
- Set dimensions with stand in inch (W x H x D): 17.8 x 14.8 x 5.4 inch
- MTBF: 50,000 (excl. CCFL 40,000) hrs
- Relative humidity: 20% - 80%
- Temperature range (operation): 0°C to 40°C
- Temperature range (storage): -20°C to 60°C
- Product weight (+stand): 3.8 kg
- Product weight (+stand) (lb): 8.4 lb
- Weight incl. Packaging: 5.3 kg
- Weight incl. Packaging (lb): 11.7

## Power

- Complies with: Energy Star
- Consumption (On mode): < 36 W (Typical)
- Consumption (economy mode): 27 W
- Consumption (Off Mode): < 1 W
- Power LED indicator: Operation - green, Stand by/sleep - Amber
- Power supply: Built-in, 100-240VAC, 50/60Hz



Issue date 2019-05-08

Version: 6.0.7

12 NC: 8670 000 31461  
EAN: 87 12581 34544 0

© 2019 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)