



LCD monitor with Ultra Wide-Color

- E Line
- 24 (23.8" / 60.5 cm diag.)
- 1920 x 1080 (Full HD)

246E9QJAB/89

Stunning color, stylish design

The Philips E line monitor features stylish design with extraordinary picture performance. A narrow border Full HD display with Ultra Wide-Color brings you to real true-to-life visuals. Enjoy superior viewing in a stylish design.

Benefits

Superb Picture Quality

- Ultra Wide-Color wider range of colors for a vivid picture
- IPS LED wide view technology for image and color accuracy
- 16:9 Full HD display for crisp detailed images
- Effortlessly smooth gameplay with AMD FreeSync™ technology

Features designed for you

- Narrow border display for a seamless appearance
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity

- HDMI ensures universal digital connectivity
- Built-in stereo speakers for multimedia
- DisplayPort connection for maximum visuals

Greener everyday

- Eco-friendly materials meet major international standards
- Low power consumption saves energy bills

PHILIPS


Features

Ultra Wide-Color Technology



Ultra Wide-Color Technology delivers a wider spectrum of colors for a more brilliant picture. Ultra Wide-Color wider "color gamut" produces more natural-looking greens, vivid reds and deeper blues. Bring media entertainment, images, and even productivity more alive and vivid colors from Ultra Wide-Color Technology.

IPS technology

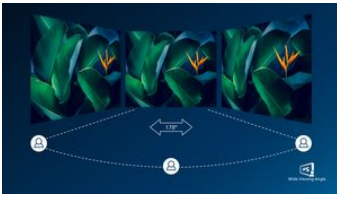

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

Ultra-smooth gaming



Gaming shouldn't be a choice between choppy gameplay or broken frames. With the new Philips monitor it doesn't have to be. Get fluid, artifact-free performance at virtually any framerate with AMD FreeSync™ technology, smooth quick refresh and ultra-fast response time.

UltraNarrow Border



The new Philips displays feature ultra-narrow borders which allow for minimal distractions and maximum viewing size. Especially suited for multi-display or

tiling setup like gaming, graphic design and professional applications, the ultra-narrow border display gives you the feeling of using one large display.

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

DisplayPort connection



DisplayPort is a digital link from PC to Monitor without any conversion. With higher capabilities than DVI standard, it is fully capable to support up to 15meter cables and 10.8 Gbps/sec data transfer. With this high performance and zero latency, you get the fastest imaging and refresh rates - making

DisplayPort the best choice for not only general office or home use, but also for the demanding gaming and movies, video editing and more. It also keeps interoperability in mind via use of various adapters.

Eco-friendly materials

"Philips is committed to use sustainable, eco-friendly materials across its monitor range. All body plastic parts, metal chassis parts and packing materials use 100% recyclable materials. In some selected models we utilize upto 65% post consumer recycled plastics. Strict adherence to RoHS standards ensure substantial reduction or elimination of toxic substances like Lead, for example. Mercury content in monitors with CCFL backlight has been reduced significantly, while eliminated in monitors with LED backlight completely.

Specifications

[field not found 'disclaimer_text']

Picture/Display

LCD panel type	IPS technology
AMD FreeSync™ technology	Yes
Backlight type	W-LED system
Panel Size	23.8 inch / 60.5 cm
Display Screen Coating	Anti-Glare, 3H, Haze 25%
Effective viewing area	527.04 (H) x 296.46 (V)
Aspect ratio	16:9
Maximum resolution	1920 x 1080 @ 75 Hz*
Pixel Density	93 PPI
Response time (typical)	4 ms (Gray to Gray)*
Brightness	250 cd/m ²
Contrast ratio (typical)	1000:1
SmartContrast	20,000,000:1
Pixel pitch	0.275 x 0.275 mm
Viewing angle	178° (H) / 178° (V) @ C/R > 10
Flicker-free	Yes
Picture enhancement	SmartImage game
Color gamut (typical)	NTSC 108%*, sRGB 129%*
Display colors	16.7 M
Scanning Frequency	30 - 83 kHz (H) / 50 - 76 Hz (V)
LowBlue Mode	Yes
sRGB	Yes

Connectivity

Signal Input	VGA (Analog) HDMI (digital, HDCP) DisplayPort x 1
Sync Input	Separate Sync Sync on Green
Audio (In/Out)	PC audio-in Headphone out

Convenience

Built-in Speakers	3 W x 2
User convenience	Power On/Off Menu Brightness Input SmartImage Game
OSD Languages	Brazil Portuguese Czech Dutch English Finnish French German Greek Hungarian Italian Japanese Korean Polish Portuguese Russian

Simplified Chinese	
Spanish	
Swedish	
Traditional Chinese	
Turkish	
Ukrainian	
Other convenience	Kensington lock VESA mount (75x75mm)
Plug & Play Compatibility	DDC/CI Mac OS X sRGB Windows 10 / 8.1 / 8 / 7

Stand

Tilt	-5/20 degree
------	--------------

Power

On mode	13.04 W (typ.) (EnergyStar test method)
Standby mode	< 0.5 W (typ.)
Off mode	< 0.3 W (typ.)
Power LED indicator	Operation - White Standby mode- White (blinking)
Power supply	External 100-240VAC, 50-60Hz

Dimensions

Product with stand (mm)	540 x 416 x 190 mm
Product without stand (mm)	540 x 326 x 39 mm
Packaging in mm (WxHxD)	586 x 477 x 141 mm

Weight

Product with stand (kg)	3.01 kg
Product without stand (kg)	2.45 kg
Product with packaging (kg)	4.51 kg

Operating conditions

Temperature range (operation)	0 to 40 °C
Temperature range (storage)	-20 to 60 °C
Relative humidity	20%-80 %
Altitude	Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
MTBF	50,000 hrs (excluding backlight) hour(s)

Sustainability

Environmental and energy	EnergyStar 8.0 RoHS Mercury Free WEEE
--------------------------	--

Recyclable packaging material 100 %

Compliance and standards

Regulatory Approvals CE Mark
FCC Class B
CU-EAC
TUV/ISO9241-307
RCM
BSMI
MEPS

Cabinet

Color
Finish

CB
cETLus
ICES-003
TUV-BAUART
UKRAINIAN

Black / Silver
Glossy

* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.

* The maximum resolution works for either HDMI input or DP input.

* Response time value equal to SmartResponse

* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.

* NTSC Area based on CIE1976

* sRGB Area based on CIE1931

* The monitor may look different from feature images.



data subject to change
2023, June 20

Version: 1.0.1
EAN: 8712581769901

© 2023 Koninklijke Philips N.V.
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com