

Philips Gaming Monitor
QHD LCD monitor

Momentum
27" (68.5 cm)
2560 x 1440 (QHD)

275M1RZN



Take gaming to the next level

This Momentum QHD gaming monitor delivers a new level of immersion. AMD FreeSync™, LowInput lag and 170Hz fast refresh rate offer smooth gaming. Nano IPS display delivers vibrant color and a wide viewing angle.

Features designed for gamers needs

- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity
- SmartImage game mode optimized for gamers
- Tilt, swivel and height-adjust for an ideal viewing position

Built for fast action

- 170Hz refresh rates for ultra-smooth, brilliant images
- AMD FreeSync™ Premium; tear free, stutter free, fluid gaming
- Low input lag reduces time delay between devices to monitor
- 1ms (MPRT) fast response for crisp image and smooth gameplay

Expand your viewing experience

- IPS Nano color technology extends gamut for vibrant visuals
- Crystalclear images with Quad HD 2560 x 1440 pixels
- High Dynamic Range (HDR) for more lifelike colorful visuals

PHILIPS

QHD LCD monitor
Momentum 27" (68.5 cm), 2560 x 1440 (QHD)


Highlights

IPS Nano color



For critical imaging, gaming and productivity needs, Nano IPS display provides precise color accuracy across a wide viewing angle without color shift. Richer reds, lusher greens, and deeper blues. Ultra Wide-Color with IPS Nano Color technology uses KSF enhanced phosphor nanoparticles to absorb excess light created by the screen to produce amazing color. True-to-life color. Our display panels achieve up to 98% coverage of the DCI-P3 color gamut standard for color purity as defined by The Society of Motion Pictures and Television Engineers for cinematic picture quality.

AMD FreeSync™ Premium

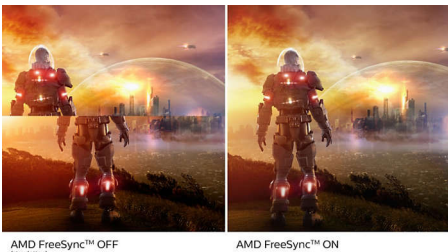

Gaming shouldn't be a choice between choppy gameplay or broken frames. AMD FreeSync™ Premium equips serious gamers with a fluid, tear-free gameplay experience at peak performance. There are no compromises, game confidently with a high refresh rate, low framerate compensation, and low latency.

170Hz Gaming



You play intense, competitive gaming. You demand display with lag free, ultra-smooth images. This Philips display redraws the screen image up-to 170 times per second, effectively faster than a standard display. A lower frame rate can make enemies appear to jump from spot to spot on the screen, making them difficult targets to hit. With 170Hz frame rate, you get those critical missing images on the screen which shows enemy movement in ultra-smooth motion so you can easily target them. With ultra-low input lag and no screen tearing, this Philips display is your perfect gaming partner

1ms MPRT fast response




MPRT (motion picture response time) is more intuitive way to describe the response time, which directly refers the duration from seeing blurry noise to clean and crisp images. Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur, delivers sharper and precise visuals to enhance gaming

275M1RZN/75


experience. Best choice for playing thrilling and twitch-sensitive games.

Low Input Lag

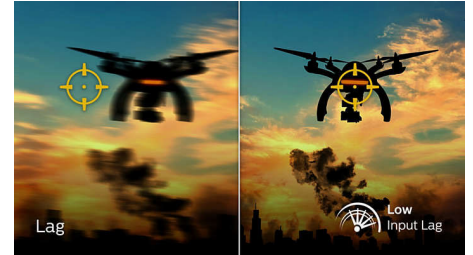

Input lag is the amount of time that elapses between performing an action with connected devices and seeing the result on screen. Low input lag reduces the time delay between entering a command from your devices to monitor, greatly improve on playing twitch-sensitive video games, particularly important to whom plays fast-paced, competitive games.

Crystalclear images

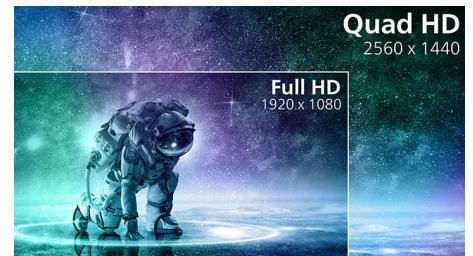

These Philips screens deliver Crystalclear, Quad HD 2560x1440 or 2560x1080 pixel images. Utilizing high performance panels with high density pixel count, enabled by high bandwidth sources like USB-C, Displayport, HDMI, these new displays will make your images and graphics come alive. Whether you are demanding professional requiring extremely detailed information for CAD-CAM solutions, using 3D graphic applications or a financial wizard working on huge spreadsheets, Philips displays will give you Crystalclear images.



Specifications

Connectivity

- Signal Input: HDMI 2.0 x 2, DisplayPort x 1
- Sync Input: Separate Sync
- Audio (In/Out): Headphone out

Picture/Display

- Panel Size: 27 inch / 68.5 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.2331 x 0.2331 mm
- Brightness: 350 cd/m²
- Display colors: Color support 1.07 billion colors
- Color gamut (typical): NTSC 110%*, sRGB 130%*, Adobe RGB 110%*
- Color gamut (min.): DCI-P3 Coverage: 98%*
- Contrast ratio (typical): 1000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 1 ms (Gray to Gray)*
- Viewing angle: 178° (H) / 178° (V), @ C/R & 10
- Picture enhancement: SmartImage game
- Maximum resolution: 2560 x 1440 @ 170 Hz* (DP -& 10; overclock); 2560 x 1440 @ 144 Hz (HDMI)
- Effective viewing area: 596.736 (H) x 335.664 (V) mm
- Scanning Frequency: HDMI: 30 - 230 kHz (H) / 48 - 144 Hz (V); DP: 30 - 255 kHz (H) / 48 - 170 Hz (V)
- sRGB
- Delta E: < 2 (sRGB)
- Flicker-free
- Pixel Density: 109 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- SmartUniformity: 97 ~ 102%
- MPRT: 1 ms
- Low Input Lag
- AMD FreeSync™ technology: Premium
- HDR: HDR ready

Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu/OK, Input/Up, Game Settings/Down, SmartImage game/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese,

- Swedish, Turkish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)

Stand

- Height adjustment: 130 mm
- Swivel: -/+ 35 degree
- Tilt: -5/20 degree

Power

- Power supply: External, 100-240VAC, 50-60Hz
- Off mode: 0.3 W (typ.)
- On mode: 46.2 W (typ.)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

- Packaging in mm (WxHxD): 730 x 475 x 224 mm
- Product without stand (mm): 614 x 370 x 75 mm
- Product with stand(max height): 614 x 567 x 251 mm

Weight

- Product with packaging (kg): 8.60 kg
- Product with stand (kg): 5.96 kg
- Product without stand (kg): 3.82 kg

Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40 °C
- MTBF: 50,000 (Excluded backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60 °C

Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

- Regulatory Approvals: CB, CE Mark, MEPS, RCM

Cabinet

- Color: Black
- Finish: Textured / Glossy



Issue date 2024-03-23

Version: 3.1.2

EAN: 87 12581 77656 5

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
* The maximum resolution works for DP input only.
* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
* Response time value equal to SmartResponse
* MPRT is to adjust brightness for blur reduction, so cannot adjust brightness while MPRT is turned on. To reduce motion blur, LED backlight will strobe synchronously with screen refresh, which may cause noticeable brightness change.
* MPRT is gaming-optimized mode. Turn on MPRT may cause noticeable screen flickering. It is recommended to turn off when you are not using the gaming function.
* BT, 709 / DCI-P3 Coverage based on CIE1976
* NTSC Area based on CIE1976
* sRGB Area based on CIE1931
* Adobe RGB Coverage based on CIE1976
* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.
* The monitor may look different from feature images.