

Professional Display Solutions

Q Line

32BDL3550Q



User Manual (English)

www.philips.com/welcome

Safety Instructions

Warnings and Precautions

KNOW THESE SAFETY SYMBOLS



SONO PARTI RIPARABILIDALL'UTENTE. PER L'ASSISTENZA, RIVOLGERSI A PERSONALE QUALIFICATO.

CAUTION:

J: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates high voltage is present inside. It is dangerous to make any kind of contact with any inside part of this product.



This symbol alerts you that important literature concerning operation and maintenance has been included with this product.

- CAUTION: FCC/CSA regulations state that any unauthorized changes or modifications to this equipment may void the user's authority to operate it.
- CAUTION: To prevent electric shock, match the wide blade of plug to the wide slot, and fully insert the plug.

TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

The Socket-outlet should be installed near the apparatus and be easily accessible.



Read and follow these instructions when connecting and using your Public Information Display:

- Unplug the display if you are not going to use it for an extensive period of time.
- Unplug the display if you need to clean it with a slightly damp cloth. The screen many be wiped with a dry cloth when the power is off. However, never use alcohol, solvents or ammonia-based liquids.
- Consult a service technician if the display does not operate normally when you have followed the instructions in this manual.
- The casing cover should be opened only by qualified service personnel.
- Keep the display out of direct sunlight and away from stoves or any other heat sources.
- Keep the display away from oil, otherwise the plastic cover may be damaged.

- Remove any object that could fall into the vents or prevent proper cooling of the display's electronics.
- Do not block the ventilation holes on the cabinet.
- Keep the display dry. To avoid electric shock, do not expose it to rain or excessive moisture.
- If turning off the display by detaching the power cable, wait for 6 seconds before re-attaching the power cable for normal operation.
- To avoid the risk of shock or permanent damage to the set do not expose the display to rain or excessive moisture.
- When positioning the display, make sure the power plug and outlet are easily accessible.
- IMPORTANT: Always activate a screen saver program during your application. If a still image in high contrast remains on the screen for an extended period of time, it may leave an 'after-image' or 'ghost image' on the front of the screen. This is a well-known phenomenon that is caused by the shortcomings inherent in LCD technology. In most cases the afterimage will disappear gradually over a period of time after the power has been switched off. Be aware that the after-image symptom cannot be repaired and is not covered under warranty.

Item	Min.	Max.	Unit			
Storage temperature	-20	65	°C			
Operation temperature	0	35	°C			
Glass Surface temperature (Operation)	0	65	°C			
Storage humidity	5	90	% RH			
Operating humidity	20	80	% RH			

Environmental absolute ratings

- Please confirm the distribution system in building installation shall provide the circuit breaker rated 120/240V, 20A (maximum).
- If provided with a 3-pin attachment plug on the power cord, plug the cord into a grounded (earthed) 3-pin outlet. Do not disable the power cord grounding pin, for example, by attaching a 2-pin adapter. The grounding pin is an important safety feature.
- Stability Hazard

The device may fall, causing serious personal injury or death. To prevent injury, this device must be securely attached to the floor/wall in accordance with the installation instructions.

Important Safety Instructions

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. The batteries (batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- 16. An all-pole MAINS SWITCH is used as the disconnect device, the location on the apparatus and the function of the switch shall be described, and the switch shall remain readily operable
- WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.
- WARNING: Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- **WARNING:** The batteries (batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- WARNING: The mains plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

WARNING: To prevent the spread of fire, keep candles or other open flames away from this product at all times.



WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

WARNING: The Class I apparatus shall be connected to a mains socket outlet with a protective earthing connection.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

- CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- CAUTION: Excessive sound pressure from earphones and headphones can cause hearing loss. Adjustment of the equalizer to maximum increases the earphone and headphone output voltage and the sound pressure level. Therefore, to protect your hearing, adjust the equalizer to an appropriate level.

For UL/CUL application: For use only with UL Listed Wall Mount Bracket with minimum weight/load: 5.31 Kg

For CB application: Unit without base weight: 5.31 Kg. The equipment and its associated mounting means still remain secure during the test.(Used wall mounting kit: 200x200/100x100 mm distance by using M4 screws of 10 mm long plus the thickness of the mounting bracket.

IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture(for example, cupboards or bookcases)without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

EU Declaration of Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU) and RoHS directive (2011/65/EU).

This product has been tested and found to comply with the harmonized standards for Information Technology Equipment, these harmonized standards published under Directives of Official Journal of the European Union.

Warning:

This equipment is compliant with Class A of EN55032/CISPR 32. In a residential environment this equipment may cause radio interference.

ESD Warnings

When user close to the monitor may cause the equipment discharge and reboot to the display of main menu.

Information for EAC	EAC
Month and year of manufacturing	please refer information in Rating label.
Name and location of manufacturer	ООО "Профтехника" Адрес: 3-й Проезд Марьиной рощи, 40/1 офис 1. Москва, 127018, Россия
Importer and information	Наименование организации: ООО "Профтехника" Адрес: 3-й Проезд Марьиной рощи, 40/1 офис 1. Москва, 127018, Россия Контактное лицо: Наталья Астафьева, +7 495 640 20 20 nat@profdisplays.ru

Federal Communications Commission (FCC) Notice (U.S. Only)



Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Use only an RF shielded cable that was supplied with the display when connecting this display to a computer device.

To prevent damage which may result in fire or shock hazard, do not expose this appliance to rain or excessive moisture.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Envision Peripherals Inc. 490 N McCarthy Blvd, Suite #120 Milpitas, CA 95035 USA

Polish Center for Testing and Certification Notice

The equipment should draw power from a socket with an attached protection circuit (a three-prong socket). All equipment that works together (computer, display, printer, and so on) should have the same power supply source.

The phasing conductor of the room's electrical installation should have a reserve short-circuit protection device in the form of a fuse with a nominal value no larger than 16 amperes (A).

To completely switch off the equipment, the power supply cable must be removed from the power supply socket, which should be located near the equipment and easily accessible.

A protection mark "B" confirms that the equipment is in compliance with the protection usage requirements of standards PN-93/T-42107 and PN-89/E-06251.

Wymagania Polskiego Centrum Badań i Certyfikacji

Urządzenie powinno być zasilane z gniazda z przyłączonym obwodem ochronnym (gniazdo z kołkiem). Współpracujące ze sobą urządzenia (komputer, monitor, drukarka) powinny być zasilane z tego samego źródła.

Instalacja elektryczna pomieszczenia powinna zawierać w przewodzie fazowym rezerwową ochronę przed zwarciami, w postaci bezpiecznika o wartości znamionowej nie większej niż 16A (amperów).

W celu całkowitego wyłączenia urządzenia z sieci zasilania, należy wyjąć wtyczkę kabla zasilającego z gniazdka, które powinno znajdować się w pobliżu urządzenia i być łatwo dostępne.

Znak bezpieczeństwa "B" potwierdza zgodność urządzenia z wymaganiami bezpieczeństwa użytkowania zawartymi w PN-93/T-42107 i PN-89/E-06251.

Pozostałe instrukcje bezpieczeństwa

- Nie należy używać wtyczek adapterowych lub usuwać kołka obwodu ochronnego z wtyczki. Jeżeli konieczne jest użycie przedłużacza to należy użyć przedłużacza 3-żyłowego z prawidłowo połączonym przewodem ochronnym.
- System komputerowy należy zabezpieczyć przed nagłymi, chwilowymi wzrostami lub spadkami napięcia, używając eliminatora przepięć, urządzenia dopasowującego lub bezzakłóceniowego źródła zasilania.
- Należy upewnić się, aby nie nie leżało na kablach systemu komputerowego, oraz aby kable nie były umieszczone w miejscu, gdzie można byłoby na nie nadeptywać lub potykać się o nie.
- Nie należy rozlewać napojów ani innych płynów na system komputerowy.
- Nie należy wpychać żadnych przedmiotów do otworów systemu komputerowego, gdyż może to spowodować pożar lub porażenie prądem, poprzez zwarcie elementów wewnętrznych.
- System komputerowy powinien znajdować się z dala od grzejników i źródeł ciepła. Ponadto, nie należy blokować otworów wentylacyjnych. Należy unikać kładzenia lużnych papierów pod komputer oraz umieszczania komputera w ciasnym miejscu bez możliwości cyrkulacji powietrza wokół niego.


Electric, Magnetic and Electromagnetic Fields ("EMF")

- 1. We manufacture and sell many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.
- 2. One of our leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
- 3. We are committed to develop, produce and market products that cause no adverse health effects.
- 4. We confirm that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
- 5. We play an active role in the development of international EMF and safety standards, enabling us to anticipate further developments in standardization for early integration in its products.

Information for U.K. only

WARNING - THIS APPLIANCE MUST BE EARTHED.

Important:

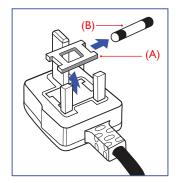

This apparatus is supplied with an approved moulded 13A plug. To change a fuse in this type of plug proceed as follows:


- 1. Remove fuse cover and fuse.
- 2. Fit new fuse which should be a BS 1362 5A,A.S.T.A. or BSI approved type.
- 3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate 3-pin plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

NOTE: The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

How to connect a plug

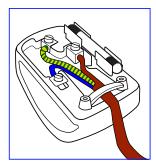

The wires in the mains lead are coloured in accordance with the following code:

BLUE – "NEUTRAL" ("N") BROWN – "LIVE" ("L") GREEN & YELLOW – "EARTH" ("E")

- 1. The GREEN & YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol or coloured GREEN or GREEN & YELLOW.
- 2. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
- 3. The BROWN wire must be connected to the terminal which marked with the letter "L" or coloured RED.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead – not simply over the three wires.

China RoHS

根据中国大陆《电器电子产品有害物质限制使用管理办法》,以下 部分列出了本产品中可能包含的有害物质的名称和含量。

	有害物质					
零部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴 联苯 (PBB)	多溴二 苯醚 (PBDE)
外壳	0	0	0	0	0	0
液晶显示屏	×	0	0	0	0	0
电路板组件*	×	0	0	0	0	0
电源适配器	×	0	0	0	0	0
电源线/连接线	×	0	0	0	0	0
遥控器	Х	0	0	0	0	0

本表格依据SI/T 11364 的规定编制。

*. 电路板组件包括印刷电路板及其构成的零部件,如电阻、 电容、集成电路、连接器等。

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超 出GB/T 26572规定的限量要求。

上表中打"×"的部件,应功能需要,部分有害物质含量超出 GB/T 26572规定的限量要求,但符合欧盟RoHS法规要求(属于 豁免部分)。

备注: 上表仅做为范例, 实际标示时应依照各产品的实际部件及 所含有害物质进行标示。



环保使用期限

在产品本体上标示的该标志表示环境保护使用期限为10年。

电子信息产品的环境保护使用期限是指电子信息产品中所含的有 害物质不会向外部泄漏或出现突然变异,并且电子信息产品的用 户在使用该电子信息产品时也不会对环境造成严重污染或对人 体、财产带来严重损害的期限。

在环境保护期限中,请按照使用说明书使用本产品。

本环境保护使用不覆盖易损件: 电池。

《废弃电子产品回收处理管理条例》提示性说明

为了更好地关爱及保护地球,当用户不再需要此产品或产品寿命 终止时,请遵守国家废弃电器电子产品回收处理相关法律法规, 将其交给当地具有国家认可的回收处理资质的厂商进行回收处 理,不当利用或者处置可能会对环境和人类健康造成影响。

警告 此为A级产品。在生活环境中,该产品可能会造成无线电干扰。 在这种情况下,可能需要用户对干扰采取切实可行的措施。



仅适用于非热带气候条件下安全使用:

汉文	仅适用于非热带气候条件下安全使用。
蒙古文	לא איניען איניאר אוייט אייני אייניאטע אייניאטע איינאטע איינא איינאטע איינא אייע איינא אייע איינא איי
藏 文	"&ંપલે જાણવા છુંગા વઠા ગા વિષ એવ પાલે જાણવા વિત્ર છેવ એન પ્લેન્સું નુ છુ જા બધુ જા ?
维 文	غەيرى ئىسسىق بەلباغ ھاۋا كىلىماتى شارائىتىدىلا بىخەتەر ئىشلەتكىلى بولىدۇ
壮 文	Dan hab yungh youq gij dienheiq diuzgen mbouj dwg diegndat haen× ancienz sawjyungh.
汉 文	"注意 如果电池更换不当会有爆炸危险 只能用同样类型或等效类型的电池来更换"
	᠆᠆ᠬ᠇ᠬ᠇ᡵ
蒙古文	ಹನ್ಸಾ√ ಹರ್ ನ್ ನರಗಿಗಳ 'ಹನಗಳ 'ಹನ್ಗರಿಗೆ ಇಗ್ರಾರ್ಥಿಂಡಿ 'ಗ್ರಾಹ್ಮಾನ
	(אביש אבאיש איז אם איז
藏 文	" ગબ્ધ્શેન્ ગ્રૅંગ ગ્રુત્ર પ્વટ્ટે તેષ દેશ્ય એન્ છુ જાત્ર લવત્ર ગયા લઘુદ પારે બેત્ર વિચેન્ ધાર્મ્સ્ય સ્ટ ત્રેગથઢા રહુદ થયા શુધ્ધ ગયા છુ થયા છુ શેર્થ્ય ગ્રિટ્સ વિચેન્ ગ્રિટ્સ વિચેન્સ છુ છે. આ ગ્રિટ્સ વિચેન્સ વિચેન્સ વ
维 文	دىققەت باتارىيىنى ئالماشتۇرۇش مۇۋاپىق بولمىسا پارتلاش خەۋپى بار ئوخشاش تىپلىق ياكى تەڭ ئۈنۈملۈك باتارىيىنى ئالماشتۇرۇڭ
壮 文	"Louzsim Danghnaeuz denyouz vuenh ndaej mbouj habdangq aiq miz gij yungyiemj fatseng bauqcaq Cijndaej yungh gij denyouz doengzyiengh loihhingz roxnaeuz daengjyauq loihl haenx vuenh"
汉 文	"接入本设备的有线网络天线必须与保护接地隔离,不然可能会引起着火等危险!"
蒙古文	একাপ প্রচরেরিয়ের্চার্র রুট রন্ট্রানার্চ বিভাগিতর্ত প্রদের রূপে ৫ স্ট্রান্ট বর্তার রে পির্টোর্ডের ব্যার্টার বিভাগি পর্যে প্রচাল্যদুননার পির্বেডরে ৭ পাণের বিরেশি র্জেই র্যুন্ট র্যামনর লম্বানু ক্রা পার্টেল্ডরে — - ১
藏文	"भ्रिम'ळ्ड्यायदेवि:स्नुन्य्यन्'वधेव'दवि'मुकय'स्नुन्'न्द्र'यद्विय्'य्यद्युन्'चेन्'झ्नव्यः'देव'यर' 5' लेव'दर्यमाय्यस्रुन्'न्द'य्यमय'सुन्गर'न्याया ने'क्षर'याच्याव्यायां व्यवनर'प'य्य्य्यम्यदे'लेव'यर यह्यद्विन्। "
维 文	بۇ ئۈسكىنىگە ئۇلايدىغان سىملىق تور ئانتېننېسىنى يەرگە ئۇلاپ بىخەتەرلەشتۈرۈش بىلەن ئايرىۋېتىڭ، بولمىسا ئوت كېتىشتەك خەۋپلەر كېلىپ چىقىدۇ
壮 文	"Gij mizsienq vangjloz denhsen ciephaeuj bonj sezbi daeuj haenx itdingh aeu caeuq gij ciepdieg baujhoh doxliz, mboujne aiq miz gij yungyiemj dawzfeiz daengj!"

North Europe (Nordic Countries) Information

Placering/Ventilation

VARNING:

FÖRSÄKRA DIG OM ATT HUVUDBRYTARE OCH UTTAG ÄR LÄTÅTKOMLIGA, NÄR DU STÄLLER DIN UTRUSTNING PÅPLATS.

Placering/Ventilation

ADVARSEL:

SØRG VED PLACERINGEN FOR, AT NETLEDNINGENS STIK OG STIKKONTAKT ER NEMT TILGÆNGELIGE.

Paikka/Ilmankierto

VAROITUS:

SIJOITA LAITE SITEN, ETTÄ VERKKOJOHTO VOIDAAN TARVITTAESSA HELPOSTI IRROTTAA PISTORASIASTA.

Plassering/Ventilasjon

ADVARSEL:

NÅR DETTE UTSTYRET PLASSERES, MÅ DU PASSE PÅ AT KONTAKTENE FOR STØMTILFØRSEL ER LETTE Å NÅ.

End-of-Life Disposal

Your new Public Information Display contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.

Please find out about the local regulations on how to dispose of your old display from your local philips dealer.

(For customers in Canada and U.S.A.)

This product may contain lead and/or mercury. Dispose of in accordance to local-state and federal regulations. For additional information on recycling contact www.eia.org (Consumer Education Initiative)

Waste Electrical and Electronic Equipment-WEEE

Attention users in European Union private households



This marking on the product or on its packaging illustrates that, under European Directive 2012/19/EU governing used electrical and electronic appliances, this product may not be disposed of with normal household waste. You are responsible for disposal of this equipment through a designated waste electrical and electronic equipment collection. To determine the locations for dropping off such waste electrical and electronic, contact your local government office, the waste disposal organization that serves your household or the store at which you purchased the product.

End of Life Directives-Recycling



Your new Public Information Display contains several materials that can be recycled for new users.

Please dispose of according to all Local, State, and Federal laws.

Restriction on Hazardous Substances statement (India)

This product complies with the "E-Waste (Management) Rules, 2016" CHAPTER V, rule 16, sub-rule (1) . Whereas New Electrical and Electronic Equipment and their components or consumables or parts or spares do not contain Lead, Mercury, Cadmium, Hexavalent Chromium, polybrominated biphenyls and polybrominated diphenyl ethers beyond a maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers and of 0.01% by weight in homogenous materials for cadmium. except of exemptions set in Schedule 2 of the Rule.

E-Waste Declaration for India



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment . The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about E -waste please visit http://www.india.philips.com/about/ sustainability/recycling/index.page and to know where you can drop off your waste equipment for recycling in India please contact on below given contact details.

Helpline number: 1800-425-6396 (Monday to Saturday, 9 a.m. to 5:30 pm)

E-mail: india.callcentre@tpv-tech.com

Batteries



For EU: The crossed-out wheeled bin implies that used batteries should not be put to the general household waste! There is a separate collection system for used batteries, to allow proper treatment and recycling in accordance with legislation.

Please contact your local authority for details on the collection and recycling schemes.

For Switzerland: The used battery is to be returned to the selling point.

For other non-EU countries: Please contac t your local authority for correct method of disposal of the used battery.

According to EU directive 2006/66/EC, the battery can't be disposed improperly. The battery shall be separated to collect by local service.



Após o uso, as pilhas e/ou baterias deverão ser entregues ao estabelecimento comercial ou rede de assistência técnica autorizada.

Turkey RoHS:

Türkiye Cumhuriyeti: EEE Yönetmeliğine Uygundur

Ukraine RoHS:

Обладнання відповідає вимогам Технічного регламенту щодо обмеження використання деяких небезпечних речовин в електричному та електронному обладнанні, затвердженого постановою Кабінету Міністрів України від 3 грудня 2008 № 1057

Table Of Contents

1.	Unpa	icking a	nd Installation1
	1.1.	Unpac	king1
	1.2.	Packa	ge Contents1
	1.3.	Install	ation Notes1
	1.4.	Mount	ing on a Wall2
		1.4.1.	VESA Grid2
2.	Parts	and Fu	nctions3
	2.1.	Contro	l Panel3
	2.2.		Output Terminals4
	2.3.	-	te Control
		2.3.1.	General functions5
		2.3.2.	ID Remote Control6
		2.3.3.	Remote Control buttons on Android
			source7
		2.3.4.	Inserting the batteries in the remote control
		2.3.5.	Handling the remote control9
		2.3.6.	Operating range of the remote
			control9
	2.4.	USB C	over10
3.	Conn	ecting	External Equipment11
	3.1.		ecting External Equipment (DVD/
			(CD)11
		3.1.1.	Using HDMI video input11
	3.2.		ecting a PC11
		3.2.1.	Using DVI input11
		3.2.2.	Using HDMI input11
	3.3.		ecting Multiple Displays in a Daisy- Configuration12
		3.3.1.	Display control connection
	3.4		nection
	3.5.		s-through Connection12
	3.6.		connecting to Network
4.	Opor		
4.	4.1.		the Connected Video Source
	4.2.		e Picture Format14
	4.3.		iew14
	4.5.		Player16
	4.4.	4.4.1.	Settings menu interaction with
		4.4.1.	media player:
		4.4.2.	Media Player introduction:
		4.4.3.	Setup Media Player Auto Play19
	4.5.		er
	4.6.		layer
			·

		4.6.1.	Settings menu interaction with P player:	
		4.6.2.	PDF Player introduction:	
	4.7.	CMND	& Play	
	4.8.	Custor	n App	27
		4.8.1.	OSD Menu operation:	27
		4.8.2.	Function Introduction	27
5.	Sattir	ng Ill		29
5.	5.1.		<u>3</u> S	
	5.1.	5.1.1.	Network & Internet	
		5.1.2.	Signage Display	
		5.1.3.	Apps	
		5.1.4.	Display	
		5.1.5.	Storage	
		5.1.6.	System	
6.		Мари	-	
0.	6.1.		iting the OSD Menu	
	0.1.	6.1.1.	Navigating the OSD menu using t	
		0.1.1.	remote control	
		6.1.2.	Navigating the OSD menu using t display's control buttons	
	6.2.	OSD N	1enu Overview	41
		6.2.1.	Picture menu	41
		6.2.2.	Screen menu	42
		6.2.3.	Audio menu	43
		6.2.4.	Configuration 1 menu	43
		6.2.5.	Configuration 2 menu	44
		6.2.6.	Advanced Option menu	44
7.	Supp	orted N	1edia Formats	47
8.	Input	Mode.		48
9.	Pixel	Defect	Policy	. 49
	9.1.	Pixels	and Sub-Pixels	. 49
	9.2.	Types	of Pixel Defects + Dot Definition	. 49
	9.3.	Bright	Dot Defects	. 49
	9.4.	Dark D	ot Defects	. 50
	9.5.	Proxim	nity of Pixel Defects	. 50
	9.6.		efect Tolerances	
	9.7.	MURA		. 50
10.	Clear	ning and	d Troubleshooting	51
	10.1.	Cleani	ng	51
	10.2.	Troubl	eshooting	52
11.	Warra	anty Sta	atement	53
12.	Techr	nical Sp	ecifications	54

Unpacking and Installation 1.


1.1. Unpacking


- This product is packed in a carton, together with the standard accessories. •
- Any other optional accessories will be packed separately.
- As this product is high and heavy, the operation of moving the device is recommended to be performed by two technicians.
- After opening the carton, ensure that the contents are complete and in good condition. •

1.2. **Package Contents**

Please verify that you received the following items with your package content:

- LCD display
- Quick start guide
- Remote control with AAA batteries
- Power cord
- RS232 cable
- RS232 daisy chain cable
- IR sensor cable
- USB cover and screw x2
- Philips logo plate

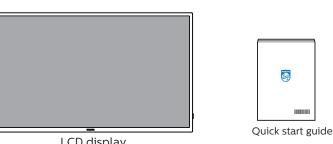



LCD display

* The supplied power cord varies depending on destination.





IR Sensor Cable USB Cover x 1 Screw x 2

- * Differences according to regions.
- * Display design and accessories may differ from those illustrated above.

NOTES:


- For all other regions, apply a power cord that conforms to the AC voltage of the power socket and has been approved by and complies with the safety regulations of the particular country.
- You might like to save the package box and packing material for shipping the display.

1.3. **Installation Notes**

- Only use the power cable provided with this product. If an extension cord is required, please consult your service agent.
- The product should be installed on a flat surface, or the product may tip over. Leave a space between the rear of the product • and the wall for proper ventilation. Do not install the product in a kitchen, bathroom or a place exposed to moisture, failure to do so may shorten the life of the internal parts.
- Do not install the product where it is 3000m and higher in altitude. Failure to do so may result in malfunctions.

1.4. Mounting on a Wall

To mount this display on a wall, a standard wall-mounting kit (commercially available) is required. It is recommended that you use a mounting interface that complies with TUV-GS and /or UL1678 standard in North America.

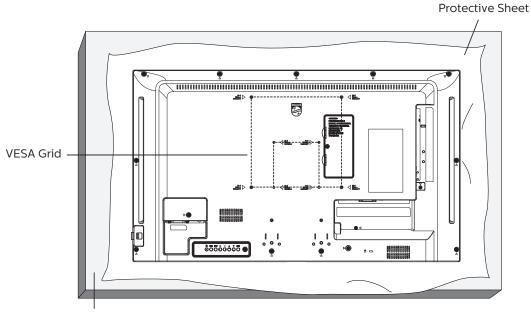

Table

- 1. Spread a protective sheet which was wrapped around the display when it was packed on a flat surface. Lay the display facedown on the protective sheet to facilitate your operation without scratching the screen.
- 2. Ensure that you have all accessories necessary for any type of mounting (wall-mounting, ceiling mounting etc).
- 3. Follow the instructions that come with the base mounting kit. Failure to follow correct mounting procedures could result in damage to the equipment or injury to the user or installer. Product warranty does not cover damage caused by improper installation.
- 4. For the wall-mounting kit, use M4 mounting screws (with a length 10 mm longer than the thickness of the mounting bracket) and tighten them securely.

1.4.1. VESA Grid

32BDL3550Q	100(H) x 100(V) mm	
	200(H) x 200(V) mm	


Caution:

To prevent the display from falling:

- For wall or ceiling mounting, we recommend that you install the display with metal brackets which are commercially available. For detailed instructions about the installation, refer to the guide that come with the bracket.
- To prevent the display from falling in case of earthquake or other natural disaster, please contact the manufacturer of the bracket for the mounting location.


Required space for ventilation

Leave a space of 100 mm at the top, rear, right and left for ventilation.

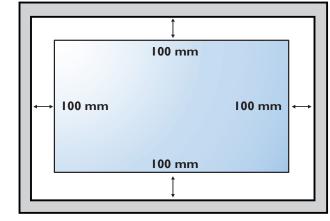

2. Parts and Functions

2.1. Control Panel

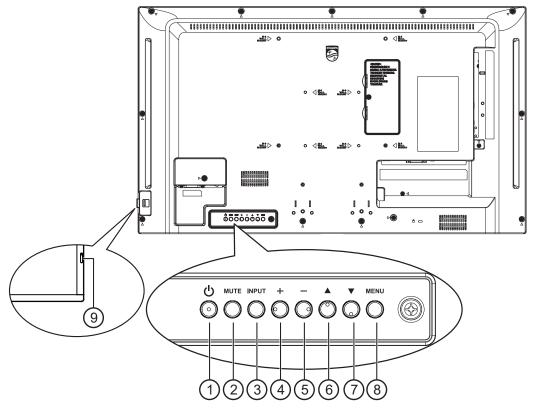

① [()] button

Press this button to turn the display On or turn the display to standby mode.

2 [MUTE] button

Press this button to mute the sound or reactivate sound.

③ [INPUT] button

Choose the input source.

Confirm a selection in the OSD menu.

④ [+] button

Increase the adjustment while OSD menu is on, or increase the audio output level while OSD menu is off.

5 [—] button

Decrease the adjustment while OSD menu is on, or decrease the audio output level while OSD menu is off.

⑥ [▲] button

Move the selected item one level up while the OSD menu is On.

⑦ [▼] button

Move the selected item one level down while the OSD menu is On.


⑧ [MENU] button

Return to the previous menu while the OSD menu is On. This button can also be used to activate the OSD menu when the OSD menu is Off.

(9) Remote control sensor and power status indicator

- Receives command signals from the remote control.
 - Indicates the operating status of the display:
 - Lights green when the display is turned on.
 - Lights red when the display is in standby mode.
 - Lights amber when the display enters APM mode.
 - When {SCHEDULE} is enabled, the light blinks green and red.
 - If the light blinks red, it indicates that a failure has been detected.
 - Lights off when the main power of the display is turned off.

2.2. Input/Output Terminals

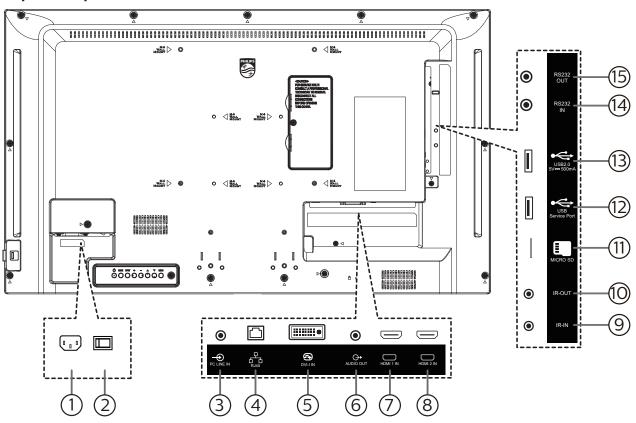

1 AC IN

AC power input from the wall outlet.

② MAIN POWER SWITCH

Switch the main power between On and Off.

③ PC LINE IN

Audio input for VGA source (3.5mm stereo phone).

(4) RJ-45 IN

LAN control function for the use of remote control signal from control center.

5 DVI IN

DVI-I video input.

6 AUDIO OUT

Audio output to external AV device.

7 HDMI1 IN / 8 HDMI2 IN

HDMI video/audio input.

(9) IR IN / (10) IR OUT

IR signal input / output for the loop-through function.

NOTES:

- This display's remote control sensor will stop working if the jack [IR IN] is connected.
- To remotely control your A/V device via this display, refer to page 12 for IR Pass Through connection.

1 MICRO SD CARD

Insert a micro SD card.

12 USB SERVICE PORT

Connect USB storage device for Android ADB Firmware update.

NOTE: Exclusively for updating firmware only.

(13) USB 2.0 PORT


Connect your USB storage device.

14 RS232 IN / 15 RS232 OUT

RS232 network input / output for the loop-through function.

2.3. Remote Control

2.3.1. General functions

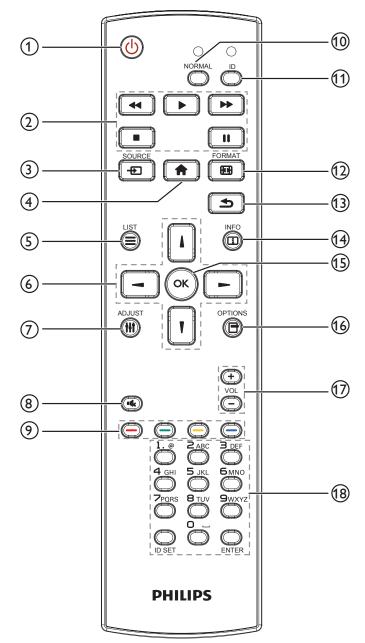

1 [U] POWER button

Turn the display on or put the display to standby mode.

2 [PLAY] buttons

Control playback of media files.

③ [-----] SOURCE button

Choose input source. Press []] or []] button to choose from **USB, Network, HDMI 1, HDMI 2** or **DVI-I**. Press [**OK**] button to confirm and exit.

(4) [**†**] HOME button

Access the OSD menu.

5 [] LIST button

Reserved.

⑥ [] [¶] [¬] [¬] NAVIGATION buttons

Navigate through menus and choose items.

⑦ [**††**] ADJUST button

Access currently available options, picture and sound menus.

⑧ [IK] MUTE button

Press to turn the mute function on/off.

(9) [-----] [----] COLOR buttons

Choose tasks or options.

(10) [NORMAL] buttons

Switch to normal mode.

- (1) [ID] buttons
 - Switch to ID mode.
- (2) [FORMAT button Change zoom mode.
- (13) [▲] BACK button

Return to the previous menu page or exit from the previous function.

(4) [i] INFO button

Display information about current activity.

(15 [OK] button

Confirm an entry or selection.

16 [-] OPTIONS button

Access currently available options, picture and sound menus.

17 [-] [+] VOLUME button


Increase or decrease the volume level.

(18) [NUMERIC] buttons

Enter text for network setting, and set up ID for ID mode.

2.3.2. ID Remote Control

Set the remote control ID if you intend to use this remote control on several different displays.

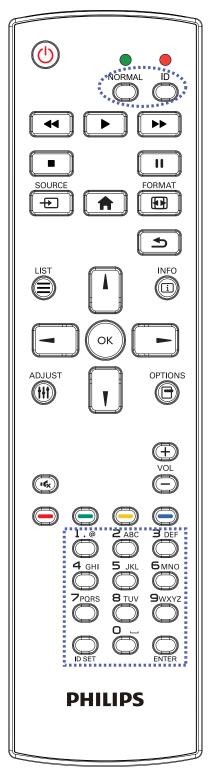

Press [ID] button. The red LED blinks twice.

 Press [ID SET] button for more than 1 second to enter the ID Mode. The red LED lights up.
 Press the [ID SET] button again to exit from ID mode. The red LED lights off.

Press the digit numbers [0] ~ [9] to select the display you want to control.

For example: press [0] and [1] for display No.1, press [1] and [1] for display No.11.


The numbers available are from [01] ~ [255].

- 2. Not pressing any button within 10 seconds will exit the ID Mode.
- 3. If a wrong button is pressed, wait 1 second after the red LED lights off and then lights up again, then press the correct digits again.
- 4. Press [ENTER] button to confirm. The red LED blinks twice and then lights off.

NOTE:

- Press [NORMAL] button. The green LED blinks twice, indicating the display is in normal operation.
- It is necessary to set up the ID number for each display before selecting its ID number.
- Use "**II**" (pause) key on the remote control to freeze the screen. Use "**▶**" (play) key on the remote control to unfreeze the screen.
- The "freeze" feature only can be adopted on "real" video sources like VGA, AV, YPbPr, HDMI, DVI, DP.
- Any operation on the remote control or video mode change will unfreeze the screen.

2.3.3. Remote Control buttons on Android source

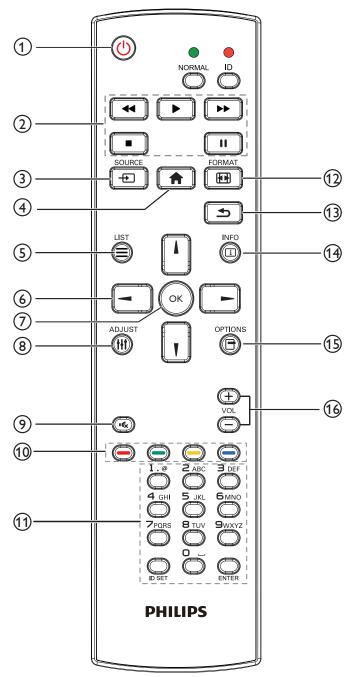

1 [U] POWER button

Turn the display on or put the display to standby mode. The button is only controlled by Scalar.

2 [PLAY] buttons

1. Control playback of media(video/audio/picture) files. There are 4 ways to play media files.

1) File Manager

Find the media file from the File Manager and select it to play.

2) Media Player -> Compose -> edit or add a new

playlist-> choose any media files -> press **[)** to play the media file directly.

3)Media Player -> Play -> choose non-empty play list

- -> press oto play all the media files in the play list.
- 4) Set media playlist in Boot on Source or Schedule by OSD menu.

2. Play PDF file

There are 3 ways to play media files.

1) File Manager

Find the pdf file from the File Manager and select it to play.

2) PDF Player -> Play -> choose non-empty play list ->

press 🕟 to play all the PDF files in the play list.

3) Set pdf playlist in Boot on Source or Schedule by OSD menu.

3. When playing PDF, video or music, press 💽 to

stop playing. Then if pressing **I** again, playing will be started from the beginning of the file.

4. When playing PDF, video or music, press button

to pause playing.

5. All media or pdf files should be put in the folder, which is named "philips" with sub-folder, under the root directory of the specified storage (internal/USB/ SD Card). All sub-folders (video/photo/music/pdf) are named by media types and shouldn't be changed.

videos: {root dir of storage}/philips/video/

- photos: {root dir of storage}/philips/photo/
- music : {root dir of storage}/philips/music/
- pdfs : {root dir of storage}/philips/pdf/

Note that the root directories of three storages are Internal storage: /sdcard

USB storage: /mnt/usb_storage

SD card : /mnt/external_sd

③ [-----] SOURCE button

Choose input source. The button is only controlled by Scalar.

④ [**†**] HOME button

Access OSD menu.

The button is only controlled by Scalar.

5 [] LIST button

1. In the content of the web page, move the focus up to the next selectable item.

2. Move the focus up to the next control or widget such as buttons.

6 NAVIGATION buttons

1. Navigate through menus and choose items.

2. In the content of the web page, these buttons are to

control the scroll bar of the screen. Press $oldsymbol{\Pi}$ or $oldsymbol{\Pi}$ is

for moving vertical scroll bar up or down. Press 📃 or

___ is for moving horizontal scroll bar left or right.

3. For PDF files,

Press 🔄 to go to the next page.

Press 🔄 to go to the previous page.

⑦ [OK] button

Confirm an entry or selection.

⑧ [**†††**] ADJUST button

1. In the content of the web page, move the focus down to the next selectable item.

2. Move the focus down to the next control or widget such as buttons.

(9) [IC] MUTE button

Press to turn the mute function on/off.

The button is only controlled by Scalar.

1 [-----] [-----] [-----] COLOR buttons

E No function on Android source. These two buttons are only controlled by Scalar.

(1) [Number/ ID SET/ ENTER] button

1. No functions for ID SET \bigcirc and ENTER \bigcirc on

Android source. These buttons are only controlled by Scalar.

2. For PDF file, enter the page number by pressing

number buttons and then press \bigcirc button to jump to

the specific page.

12 [FORMAT button

Change picture format. The button is only controlled by Scalar.

(13) [▲] BACK button

Return to the previous page or exit from the previous function.

(4) [i] INFO button

1. Display information about current input signal. It is shown by Scalar.

2. Media Player -> Compose -> edit or add a new playlist

```
-> choose any media files -> press 📸 to show the
```

information of the chosen media file.

15 [-] OPTIONS button

Open toolbox in Media Player or PDF Player.

1. Media Player ->Compose -> Edit or add a new playlist

-> press -> to open toolbox. Toolbox will slide from

the left side of the screen.

2. PDF Player ->Compose -> Edit or add a new playlist ->

press : to open toolbox. Toolbox will slide from the left side of the screen.

16 [—] [+] VOLUME button

Adjust volume. The buttons are only controlled by Scalar.

2.3.4. Inserting the batteries in the remote control

The remote control is powered by two 1.5V AAA batteries.

To install or replace batteries:

- 1. Press and then slide the cover to open it.
- 2. Insert batteries with the correct polarity (+) and (-).
- 3. Replace the cover.

Caution:

Incorrect use of batteries may cause leakage or explosion. Be sure to follow the instructions below:

- Insert "AAA" batteries with the correct polarity (+ and -).
- Do not mix battery types.
- Do not use a new battery with a used one together. Otherwise, it may cause leakage or shorten the life of the batteries.
- Remove the dead batteries immediately to avoid battery leakage in the battery compartment. Do not touch exposed battery acid, as it may cause injury to your skin.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion; leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

NOTE: Remove the batteries from the battery compartment when not using for an extended period of time.

2.3.5. Handling the remote control


- Do not drop or apply shock to the remote control.
- Do not allow any liquid to get inside the remote control. If water has entered the remote control, wipe the remote control with a dry cloth immediately.
- Do not place the remote control near heat and steam sources.
- Do not attempt to disassemble the remote control, unless you need to place batteries in the remote control.


2.3.6. Operating range of the remote control

Pointing the remote control at the remote sensor on the display. Use the remote control within 5 m from the sensor on the display at an angle of 20 degrees from the left and right.

NOTE:


- The remote control may not function properly when the remote control sensor on the display is under direct sunlight or strong illumination, or when an obstacle blocks the signal transmission.
- Use an IR sensor cable for better performance of the remote control. (Refer to 3.4. IR connection for details)

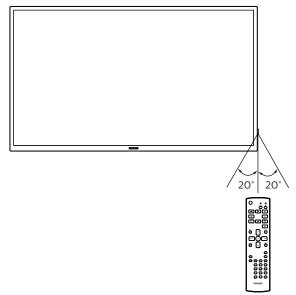




2.4. USB Cover

- Use the USB cover and screws to protect the USB stick and SD card.
- 1. Plug the USB stick and micro SD card.
- 2. Use the screws provided to fix the USB cover.

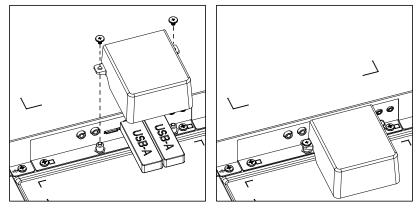


• Maximum suitable USB stick size: 20(W)x10(H)x60(L) mm

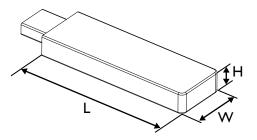

3. Connecting External Equipment


3.1. Connecting External Equipment (DVD/VCR/VCD)

3.1.1. Using HDMI video input

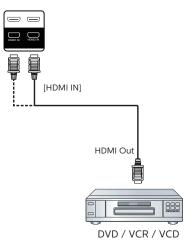


3.2. Connecting a PC

3.2.1. Using DVI input

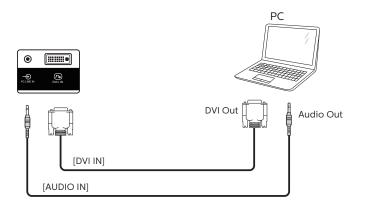

3.2.2. Using HDMI input

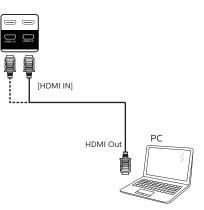


3.3. Connecting Multiple Displays in a Daisy-chain Configuration


You can interconnect multiple displays to create a daisy-chain configuration for applications such as a menu board.

3.3.1. Display control connection

Connect the [RS232 OUT] connector of DISPLAY 1 to the [RS232 IN] connector of DISPLAY 2.

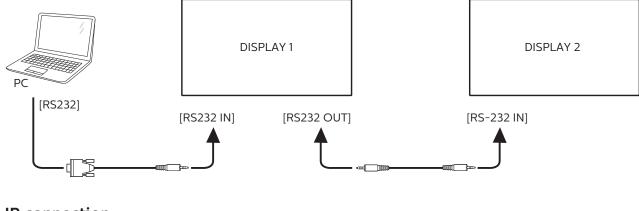


3.4. IR connection

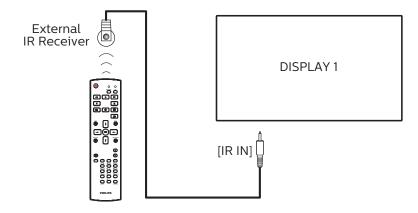


NOTE:

This display's remote control sensor will stop working if the [IR IN] is connected.

3.5. IR Pass-through Connection

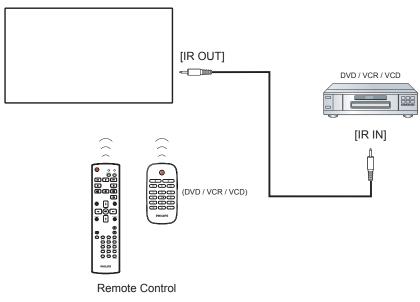

3.6. Wire-connecting to Network

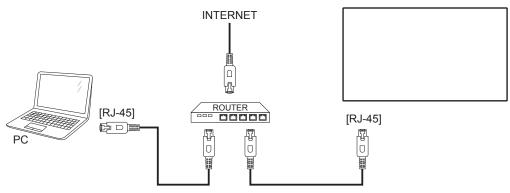

Network Settings:

- 1. Switch the router on and enable its DHCP setting.
- 2. Connect the router to this display with an Ethernet cable.
- 3. Press [**†**] HOME button on the remote control, then select **Setup**.
- 4. Select Connect to network, then press [OK] button.
- 5. Wait until this display finds the network connection.
- 6. If the "End User License Agreement" window prompts, accept the agreement.

NOTE: Connecting with a shielded CAT-5 Ethernet cable to comply with the EMC directive.

4. Operation

NOTE: The control button described in this section is mainly on the remote control unless specified otherwise.

4.1. Watch the Connected Video Source

- 1. Press [-----] SOURCE button.
- Press [] or [] button to choose a device, then press
 [OK] button.

4.2. Change Picture Format


You can change the picture format to suit the video source. Each video source has its available picture formats.

The available picture formats depend on the video source:


- 1. Press [1] FORMAT button to choose a picture format.
 - PC mode: {Full} / {4:3} / {Real} / {21:9}/ {Custom}.
 - Video mode: {Full} / {4:3} / {Real} / {21:9}/ {Custom}.

4.3. Overview

- 1. Android PD launcher:
 - Android PD launcher is a black page as shown below:

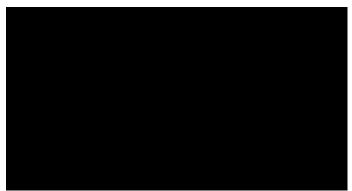

- Exit the App by pressing the back key, the screen will enter Android PD launcher.
- When you return to Android PD launcher, the screen will show a hint image, this hint image appears for 5 seconds only.
- The hint image will notify you can press source key to change source.

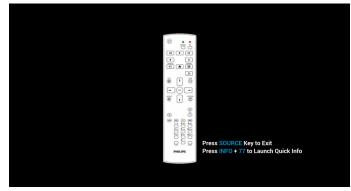

- 2. Admin mode:
 - You can press "Home + 1888" to enter admin mode. Please make sure you see the Home OSD menu after "Home" is pressed, and then press 1888 in sequence.

Two continuous "Home" keys will not be a valid hotkey.


- In Admin mode, you will see five icons: "Settings", "Apps", "Network", "Storage" and "Help".
- When you leave from Admin mode, the system will return to last source.

Settings: go to settings app.

Apps: show all applications.

Network: set Wi-Fi (optional), Ethernet


Storage: display current PD Android storage information. Help: display the QR code to link to Philips support website.

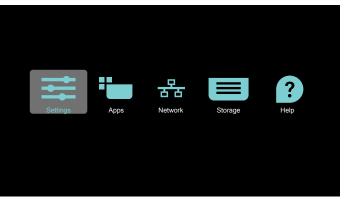

1) Settings:


	Signage Display Apps & Rotifications Permission, default apper Display Society Society
Apps & notifications Permission, which repor Doplay Stopp	Apps & notifications Permission, default apps O Doplay Songae 2014.usd-1-21 GB free
Parmasses, shafaa ayaa Doplay Social	Permission, default appe Dipplay 20%uset-3.21 (6) free
Storage 20% used - 3.21 OB free	■ Sonapo 20% used - 321 08 free
20% used - 3.21 GB free	20% used - 3.21 GB free
© System	© lystem

2) Application page:

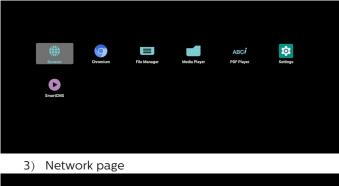



3.1) Ethernet page



3.2) Wi-Fi: this is an optional feature, Wi-Fi can only be enabled when an external Wi-Fi USB dongle is inserted.

Main Switch	
Disable	۲
Enable	0
To see available networks, turn Wi-Fi on.	





5) Help page:

Display the QR code to link to Philips support website.



4.4. Media Player

4.4.1. Settings menu interaction with media player:

- 1. Boot on source:
 - Input:
 - If you select Media player source, platform will go to media player automatically after the boot process is completed.
 - Playlist:
 - Main page: go to the main page of media player.
 - Playlist 1 Playlist 7: go to media player and playback File1 - File7 of playlist automatically
 - Playlist 8: go to media player and play USB files automatically.
- 2. Schedule:
 - Schedule list:
 - Set up to 7 schedules.
 - Enable:
 - Enable/disable schedule.
 - Start time:
 - Set start time.
 - End time:
 - Set end time.
 - Playlist:
 - 1-7 : go to media player and playback File1 File7 of playlist automatically.
 - Days of the week:
 - Set Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday.
 - Every week:
 - Set a weekly schedule.
 - Save:
 - Save the schedule.

4.4.2. Media Player introduction:

 Main page of Media Player, this page has three items: "Play", "Compose" and "Settings". Play: select playlist to play. Compose: edit playlist. Settings: set Media Player properties.



 Select "Play" on the main page, first you should choose one playlist to play between FILE 1 and FILE 7. The pencil icon means the playlist is non-empty.

PlayLis
File 1
File 2
File 3
File 4
File 5
File 6
File 7

3. Select "Compose" on the main page, first you should choose one playlist to edit between FILE 1 and FILE 7. The pencil icon means the playlist is non-empty.


PlayList
File 1
File 2
File 3
File 4
File 5
File 6
File 7

4. If an empty playlist is chosen, the App will guide you through selecting the media source.


All media files should be placed in /philips/ of root directory.

For example,


videos: {root dir of storage}/philips/video/ photos: {root dir of storage}/philips/photo/ music : {root dir of storage}/philips/music/

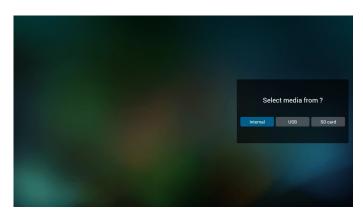

5. If you select "USB" storage, the App will guide you through selecting the USB device.

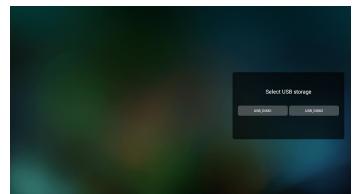


6. To edit or delete a non-empty playlist, select the desired playlist that has a pencil icon on right side of the selected file.

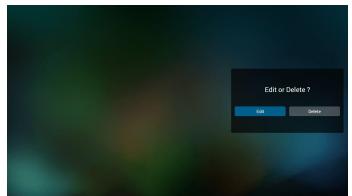

- 7. Once you start to edit a playlist, you will see below screen.
 - Source files in storage.
 - Playlist files in playlist.
 - Option launch the side menu bar.
 - Play key play the media file. Info key – show the media information.
 - Touch file select/deselect a file.

Note:

When long press on one of the directory in Source, full path will then be displayed.

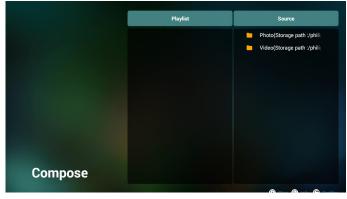

- 7-1 From the side menu bar, the following functions are available:
- select all: select all storage files.
- delete all: delete all playlist files.
- add/remove: update playlist from source.
- sort: sort playlist.
- save/abort: save or abort playlist.
- back: return to the previous menu.

	Playlist	Source	
	sun.jpg	—	
Select all	oobe.png	sun.jpg	\checkmark
Select an	video_1080p_12fps.mp4	oobe.png	\checkmark
Delete all	video_720p.mp4		
Add/Remove	19a09d95-232a-4cb7-9d31-c10		
Sort			
Save/Abort			
S Back			
se			
		D Play 10 Info	🖹 Toolbar

8. If **"Sort**" is selected, you can customize the file order severally.




9. After selecting the desired file, press "Info" key to obtain the detailed information.



10. After selecting the desired file, press **"Play"** key to play the media file.



 If you created a playlist with all image files, you will be asked to add a background music to the slideshow before saving.

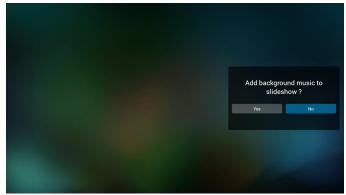

12. Select "Settings" on the main page, there are 5 options available: "Repeat Mode", "Slideshow Effect" and "Effect Duration", "Software Decode" and "Autoplay".
Repeat mode: set the repeat mode.
Slideshow Effect: photo slideshow effect.
Effect Duration: duration of photo effect.
Software Decode: no black screen between video play.
Autoplay: Plug in the USB device and it will play the files from USB root path automatically. (4.4.3. Setup Media Player Auto Play)

Settings	Settings	Settings	Settings
Repeat Mode	Repeat Mode	Repeat Mode	Repeat Mode
Repeat once	Slideshow Effect	Slideshow Effect	Slideshow Effect
Repeat all	Right to left	Effect Duration	Effect Duration
Slideshow Effect	Fold	✓ 5s	Software decode
Effect Duration	Corner	10s	Enable
Software decode	Vone None	15s	V Disable
Autoplay	Effect Duration	20s	Autoplay
	Software decode	Software decode	
	Autonlay	Autonlay	

13. Media Hotkey

Play: playback the file.

Pause: pause playback.

Fast forward: fast forward playback for 10 seconds. Rewind: rewind playback for 10 seconds. Stop: Stop playback and return to start. If the file being played is a gif file, then this feature acts as a pause key.

- 14. To learn how to change media format, please refer to Change Picture Format on P. 14.
- 15. How to edit playlist via FTP. Step 1. Create media player text file.
 - File name : mpplaylistX.txt, "X" means playlist number(1,2,3,4,5,6,7).
 - Ex. mpplaylist1.txt, mpplaylist2.txt
 - Content :

😑 mpplayi	list1.txt 🔀
1	photo/xxx.jpg
2	video/yyy.mp4
3	music/zzz.mp3

Note : If a playlist contains both video and music files, a black screen will appear when the system plays the music file.

Step 2. Copy "mpplaylistX.txt" to "philips" folder of internal storage. You may use FTP to do this.

- File path : /storage/emulated/legacy/philips
- Ex. /storage/emulated/legacy/philips/mpplaylist1.txt

Step 3. Prepare the media file in "Photo", "Video" and "Music" folders which are under "Philips" folder of your internal storage.

- Ex. /storage/emulated/legacy/philips/photo/xxx.jpg /storage/emulated/legacy/philips/video/yyy.mp4 /storage/emulated/legacy/philips/photo/zzz.mp3


Step 4. Start media player app, it will import the text file of media player automatically.

Note: Once the playlist file (text) is imported, any changes made by remote control will not be recorded in the playlist text file.

18

4.4.3. Setup Media Player Auto Play

- 1. Transfer media files (photos and videos) under root folder of USB storage, do not transfer file to philips/ folder.
- 2. Go to Media Player -> Settings -> Autoplay; check the checkbox to enable auto play. User can also select auto play with photo files only, video files only, or both.
- 3. Return to the main page of Media Player and plug in the USB device.

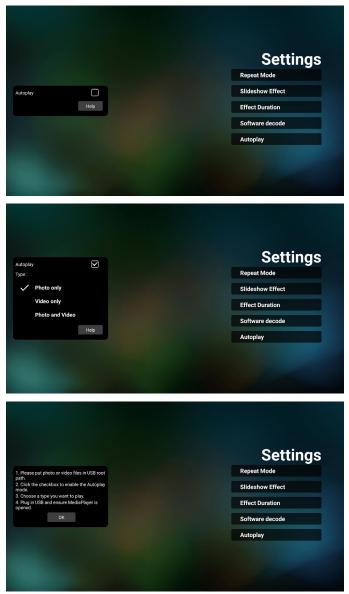

Notes:

- 1. Auto play media files in numeric order first, then in alphabetical order next.
- 2. If the USB device is unplugged during auto play process, Media Player will stop running and return to main page.
- 3. Auto play has higher priority than playlist. If auto play is enabled while Media Player is playing the file, then Media Player will stop playing the list and start auto playing instead.

4.5. Browser

Before using this feature, ensure that the system is connected successfully to the network.

1. Main page of "Browser" App which allows you to make related settings.



2. Press "Compose" then enter next page. Select one URL to edit from the list.

1	Enter l				
2	Enter l	Jrl			
3	Enter l	Jrl			
4	Enter l	Jrl			
5	Enter l				
6	Enter l				
7	Enter l				
	Linter t				based on the second second
		Clear cache	Option	ОК	Cancel

3. Use the on-screen keyboard to enter URL and press the OK button, the data will be saved in the List

			Ente	er URL			
			Entr				
			Ent	ок	Cancel		
			Ente				
			Ente				
🖁 💠 😂 🤅	»						
1			4		6	7 8	
q					у		о р
а	s		d		g h	j	k I
Ŷ	z		c		b	n m	
₹	-	•	12#	, in the second se	English	·····	· ·
						X	
•		Ŧ	12.				
			www.bbc.com Enter Url Enter Url Enter Url Enter Url Enter Url Enter Url				

4. Press Option button and a list will pop up on the left side.

Import: Import the file of URL list Export: Export the file of URL list Delete all: Delete all URL records from the main screen Back: Close the side menu bar

 Import Export Delete all Back 	1 2 3 4 5 6 7	www.bbc.com Enter Url Enter Url Enter Url Enter Url Enter Url Enter Url			
		Clear cache	Option	ок	Cancel

4.1 Import


• Select import.

	1 2	Enter U Enter U				
🙆 Import	3	Enter U				
	4	Enter U				
1 Export	5 6	Enter U Enter U				
Delete all	7	Enter U				
Sack						
			Clear cache	Option	ок	Cancel
and the second second						


Select the storage where the file will be imported from.

 Import Export Delete all Back 	Enter Ur Enter Ur Enter Ur Ente Ente Ente	Import	file from ? storage SD card	
		Clear cache	Option	Cancel

• Select a browser file

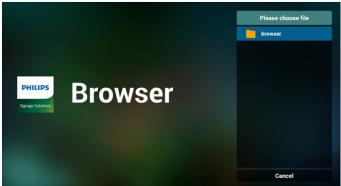

• Import the browser file and the URL will be listed on the screen.

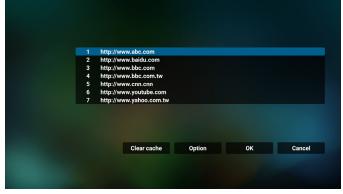


• The file format supported for import is ".txt".



4.2 Export:

Select export

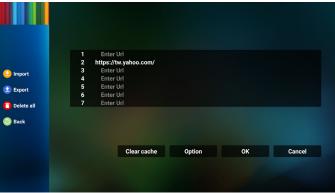

Select the storage where the file will be exported to.

 Import Export Delete all Back 	Enter t https://t Enter Ente Ente Ente	w.yahoo.com/	file to ? torage SD card		
		Clear cache	Option		

 A dialog box displays the path of the file to be saved as well as the file name. Press the "Save" button to save the URL.


 Import Export Delete all Back 	Ente https:// Ente Ente Ente Ente	/tw.yahoo.com/	nulated/0/philips/browser/ 136_url.bt Cancel	
		Clear cache	Option	

5. Press the "OK" button to save the URL record.


	1 Enter 2 https:// 3 Enter 4 Enter 5 Enter 7 Enter	tw.yahoo.com/ Url Url Url Url Url				
		Clear cache	Option	ОК	Cancel	
PHILIPS Synage Solutions	Brov	wser			pose	

6. If you select a non-empty item from the URL list, a message will appear asking if you want to edit or play the URL. If you select "Edit" a dialog box allows you to edit the URL. If you select "Play", a web page of the selected URL appears.

7. Press "Settings" then enter next page.

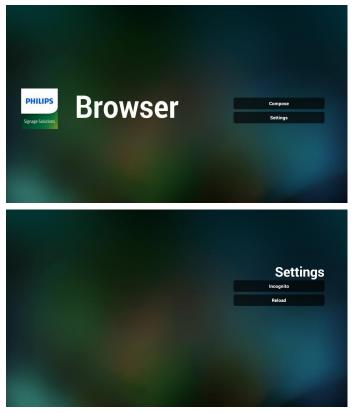

- 7.1 Incognito
 - a. Enable : Display webpages using incognito mode.
 - b. Disable: Display webpages using non-incognito mode.

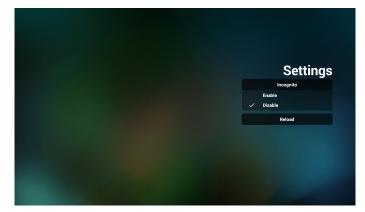

7.2 Reload

Allow user to set webpage reload time. a. If the "Enable" checkbox is unchecked, the default

reload time is 60 seconds.

Note:

In this case, the webpage reloads only when network state has changed.

If network is always connected, the webpage won't reload after 60 seconds.

b. If the "Enable" checkbox is checked, you can set the reload time.

		Settings
Reload Enabled (0-24) hour (0-59) min Save C	10 sec (0-59)	Reload

- 8. OSD menu interaction with Browser
- 8-1. Boot on source
- Set OSD menu > Configuration1 > Boot on source > set BROWER Play List to 0. Then PD will show Browser after rebooting.
- Set OSD menu > Configuration1 > Boot on source > Input be BROWER Play List be 1. Then PD will show web page with 1st Url in Browser app.
- 8-2. Schedule

Set OSD menu > Advanced option > Schedule > On time1, Off time2, Input be BROWSER, day of the week, and Play List. Finally check the right box. Then PD will show web page with Url in Browser app at time1 and finish at time2.

- 9. How to edit url list via FTP Step 1. Create a text file of media player.
 - File name: bookmarklist.txt.
 - Content:

🔚 bookm	arklist.txt 🗵
1	https://www.google.com.tw/
2	http://abc.go.com/
3	
4	
5	
6	
7	

Step 2. Copy bookmarklist.txt to "philips" folder of your internal storage. You may use FTP to do this.

- File path: /storage/emulated/legacy/philips (for DL, PL)
- Ex. /storage/emulated/legacy/philips/bookmarklist.txt

Step 3. Start Browser App, it will import the text file of Browser automatically.

Note. Once the playlist file (text) is imported, any changes made through the remote control will not be recorded in the playlist text file.

10. Offline browsing

When Url 1 has set address, and use osd schedule to open Url 1 web page, browser app will automatically save home web page data of Url1 to local storage.

If network is disconnected while osd schedule opens browser app, browser app will automatically open Url 1 address home page in local storage.

Note:

- a. Browser app can only save Url 1 address home page data, other Url 2 to Url 7 cannot be saved.
- b. Local storage : /sdcard/Download/OfflineBrowsing
- c. Pressing "Clear cache" button can clear Url 1 address home page data from local storage.

4.6. PDF Player

4.6.1. Settings menu interaction with PDF player:

- 1. Boot on source:
 - Input:
 - If you select PDF player source, platform will go to PDF player automatically after the boot process is completed.
 - Playlist:
 - Main page: go to the main page of PDF player.
 - Playlist 1 Playlist 7: go to PDF player and playback File1 - File7 of playlist automatically
- 2. Schedule:
 - Schedule list:
 - Set up to 7 schedules.
 - Enable:
 - Enable/disable schedule.
 - Start time:
 - Set start time.
 - End time:
 - Set end time.
 - Playlist:
 - 1-7 : go to PDF player and playback File1 File7 of playlist automatically.
 - Days of the week:
 - Set Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday.
 - Every week:
 - Set a weekly schedule.

4.6.2. PDF Player introduction:

1. Main page of PDF Player, this page has three items: "Play", "Compose" and "Settings".

Play: select playlist to play.

Compose: edit playlist.

Settings: set PDF Player properties.



 Select "Play" on the main page, first you should choose one playlist to play between FILE 1 and FILE 7. The pencil icon means the playlist is non-empty.

	PlayLis
	File 1 File 2
	File 3
	File 4
	File 5
	File 6
	File 7

3. Select "Compose" on the main page, first you should choose one playlist to edit between File 1 and File 7. The pencil icon means the playlist is non-empty.


PlayList
File 1
File 2
File 3
File 4
File 5
File 6
File 7

4. If an empty playlist is chosen, the App will guide you through selecting the media source.


All media files should be placed in /philips/ of root directory.

For example,

pdfs : {root dir of storage}/philips/pdf/

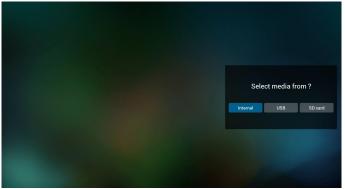

5. To edit or delete a non-empty playlist, select the desired playlist that has a pencil icon on right side of the selected file.

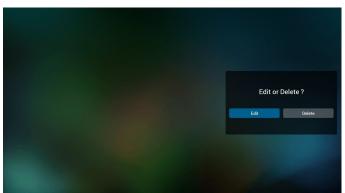

6. Once you start to edit a playlist, you will see below screen.

Source - files in storage.

Playlist - files in playlist.

The following functions can be operated through the corresponding keys on the remote control.

Option key – launch the side menu bar.


Play key - play media file.

Info key – show media info.


Ok key - select/unselect file.

6-1. From the side menu bar, the following functions are available:

- Select all: select all storage files.
- Delete all: delete all playlist files.
- Add/remove: update playlist from source.
- Sort: sort playlist.
- Save/abort: save or abort playlist.
- Back: return to the previous page.

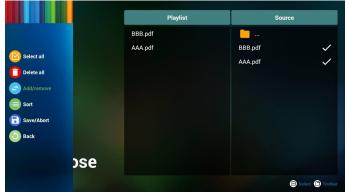

7. If **"Sort**" is selected, you can customize the file order severally.

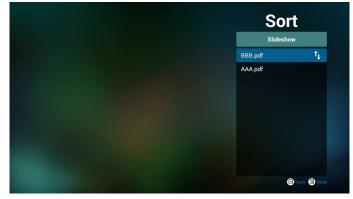


 Select "Settings" on the main page, there are 2 options available: "Repeat Mode" and "Effect Duration". Repeat Mode: set repeat mode.

Effect Duration: duration of photo effect.

Settings
Repeat Mode
Effect Duration
✓ 5s
10s
15s
20s

- 9. How to edit pdf list via FTP. Step 1. Create pdf player text file.
 - File name : pdfplaylistX.txt, "X" means playlist number(1,2,3,4,5,6,7).
 Ex. pdfplaylist1.txt, pdfplaylist2.txt
 - Content:

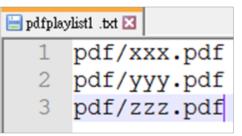

Step 2. Copy pdfplaylistX.txt to "philips" folder of internal storage. You may use FTP to do this.

- File path : /storage/emulated/legacy/philips (for DL, PL)
 - Ex. /storage/emulated/legacy/philips/pdfplaylist1.txt

Step 3. Prepare the PDF files in "PDF" folder which is under "Philips" folder of your internal storage.

Ex. /storage/emulated/legacy/philips/pdf/xxx.pdf
 /storage/emulated/legacy/philips/pdf/yyy.pdf
 /storage/emulated/legacy/philips/pdf/zzz.pdf

Step 4. Start the PDF player App, it will import the text file of PDF player automatically.

Note: Once the playlist file (text) is imported, any changes made through the remote control will not be recorded in the playlist text file.

Media Hotkey:

Play: Playback file.

Pause: Pause playback.

Fast forward: go to the next page. If the page is at end of the file, it will go to the next file.

Rewind: back to the last page. If the page is at beginning of the file, it will to back to the last file.

Stop: Return to the first page of file.

Arrow keys:

Left: go to the previous page. Right: go to the next page.

Combination key:

Number key + OK key: change to a specific page.

- Press number key to select a specific page.

- Press "OK" key. Page number will display at the bottom of the page. If the page number you selected exceeds total page number, then that page will not be changed, but display current page number instead.

Note:

If you plug in two or more USB disks to edit the playlist, playback from the playlist cannot be guaranteed after powering on/off, due to the USB storage path may be changed. It is strongly recommended to use only one USB disk when editing the playlist.

4.7. CMND & Play

1) Server

Setup CMND & Play server address

2) Account

Setup CMND & Play account

3) PIN Code

Setup CMND & Play PIN code

(4) Version

There are two options, Ver.2 and Ver.3

Ver. 2

use 2.0/2.2 agreement

Ver. 3

use 3.0/3.1 agreement

(5) Content

.....

There are 3 options available: internal storage, SD card and USB storage.

If Ver.2 is selected, Server/Account/PIN code will be grayed out and unavailable.

Settings	
Server	
Account	
PIN Code	
Version	
Var2	
CONTENT	
CONTENT Internal storage	۲
	•

If Ver.3 is selected, Server/Account/PIN code is available.

*	CMND & Play	
	Settings	
	Server	
	Account	
	PIN Code	
	Version Ver.3	
	CONTENT	
	Internal storage	۲
	SD card	0
	USB storage	0

4.8. Custom App

User can set up the application for Customer Source Note:

(1) Only the App installed by user will be displayed.

(2) The pre-installed App will not be displayed.

4.8.1. OSD Menu operation:

RCU: Source -> Custom

If you set up customer APK, the customer App will be launched when switching source to customer mode.

If customer APK is not set, the system shows a black screen when switching source to customer mode.

4.8.2. Function Introduction

Custom App Select App Phy Books
Select App Pay Boos
Select App
Play Books 💿
Pey Music O
VouTube
FORGET CANCEL SAVE

Save

Select the App, click the **"Save"** button will perform the function of storage.

Forget

Press **"Forget"** button to remove previously stored information.

Cancel

Press "Cancel" button to quit without saving changes made. If no customer APK is installed, the list will be blank, and the "Save" and "Forget" buttons will be grayed out.

Select App		
FORGET	CANCEL	SAVE

If customer APK is installed, user can select it from the list.

 Case 1: Not setting Custom App.
 Custom App will display and the focus is on the first item automatically.

Casten App Select App Pay Road Select App
Select App
Play Books 💿
Pfey Music
VouTute O
FORGET CANCEL SAVE

After setup, the screen shows App's name.

÷	Custom App	
	Select App Play Books	

• Case 2: Setting the Custom App (an entity circle on the right of the icon)



5. Setting UI

5.1. Settings

Enter PD settings by clicking "Settings" icon in Admin mode.



Setting menu consists of the following items:

- (1). Network & Internet
- (2). Signage Display
- (3). Apps & notifications
- (4). Display
- (5).Storage

(6).System

•	Network & Internet
Ð	Signage Display
٠	Apps & notifications Permissions, default apps
۰	Display
-	Storage 20% used - 3.21 GB free
O	System

5.1.1. Network & Internet

	WFFI orr
٠.	Ethernet
0	Portable hotspot off

5.1.1.1. Wi-Fi

Settings -> Network & Internet -> Wi-Fi

Important Note: This option is available only when the supported Wi-Fi dongle is plugged. Wi-Fi dongle hot spot is however not supported. Reboot the device whenever you plug or remove the USB Wi-Fi dongle.

Enable Wi-Fi

Enable/disable Wi-Fi connection through main switch in Setting -> Network & Internet -> Wi-Fi -> Off/On toggle button.

Wi-Fi Off

	Off		•
		To see available networks, turn W+Fi on. To improve location accuracy, turn on Wi-Fi scanning in scanning settings.	
		Wi-Fi preferences	
		Saved networks	
٧	Vi-Fi	On	
	On		•
		Turning Wi-Fi on	
		W Fareformer	

On the available network list, select an AP (access point) on an existing wireless network.

On		•
	ASUS_AC1200_2.4G	6
•	ASUS_AC1200_888	ė.
\mathbf{v}	Semilab Taiwan	é.
${\bf v}$	TPV	ė.
${\bf \bar v}$	TPV_Guest	
Ψ	TPV_Mobile	ŵ
$\overline{\mathbf{v}}$	Xiaomi_5966	ŵ
$\overline{\mathbf{v}}$	Bafflo_YYY	ŵ
$\overline{\mathbf{v}}$	ASUS	ŵ
+	Add network	
	Wi-Fi preferences	


Enter the required settings.

On			٠
	ASUS_AC1200_2.4G		0
٠	ASUS_AC1200_888		ê
w	Semilab Taiwan		8
w	TPV		
×	TPV_Guest		
۳	TPV_Mobile		
٠	Xiaomi_5966	ASUS_AC1200_2.4G	
Ŧ	Bafflo_YYY	Password	
÷	ASUS		8
+	Add network	Show password Advanced options	
	Wi-Fi preferences		

At the bottom of the list, select "Add network" to add a network not shown on your list.

W-FI	• :
Main Builte Diable	0
Enable	۲
V TPV_Guest	
TPV_Mobile	
🔍 TPVLSS-6801	
😴 TPVSWA_2.4G	
+ Add network	

If needed, enter the network name (SSID) and security details.

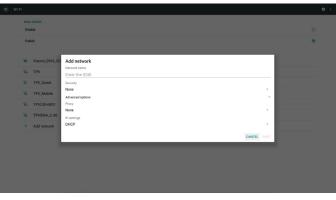

Note:

When Wi-Fi is enabled, Ethernet will be disabled automatically.

Wi-Fi Preference

Settings -> Network & Internet -> Wi-Fi -> Wi-Fi Preference


×.	Open network notification Notify when a high-quality public network is available	۰
	Keep Wi-Fi on during sleep Always	
	Install certificates	
	Network rating provider	
	Wi-Fi Direct	
	WPS Push Button	
	WPS Pin Entry	
	MAC address 7eb2/328e060a	
	IP address Unavailable	

Using WPS

WPS network can be enabled using 2 options:

PBC (Push Button Configuration), user simply has to push a button to connect.

PIN (Personal Identification Number), a PIN will be entered in client WPS device to connect.



When using PBC method, select "WPS Push Button" to connect.

When using PIN method, select "WPS Pin Entry" and enter the PIN to connect.

Wi-Fi Network Information



MAC address: shows Wi-Fi MAC address.

IP address: shows the IP address when the device joins a network.

5.1.1.2. Ethernet

Settings -> Network & Internet -> Ethernet

Enable Ethernet

Enable/disable Ethernet connection by Setting -> Network & Internet -> Ethernet toggle button.

Ethernet To see available networks, turn Ethernet on.	
Static IP	0
IP Address	
Gateway	
Netmask	
DNS 1	
DNS 2	

By default, the system uses DHCP to join the network. Connection Information (When the options are grayed out, they are not editable).

- (1). IP Address
- (2).Gateway
- (3). Netmask

(4). DNS 1/2 IP Address

Ethwnet DHCP	
Static IP	0
IP Address 192.166.50.242	
Gateway 192.168.50.1	
Netmask 255.255.255.0	
DNS 1 RRss	
DNS 2 192.168.50.1	

Note:

Wi-Fi connection will be disabled automatically when Ethernet connection is enabled.

Ethernet Static IP

User can manually set Ethernet IP address, Netmask, DNS address and gateway IP address when toggle "Static IP".

Ethernet To see available networks, tum Ethernet on.	0
Static IP	
IP Address 192.168.50.242	
Gateway 192.168.50.1	
Netmask 255.255.05.0	
DNS 1 8.8.8.9	
DNS 2 192148-501	

Then toggle Ethernet button again.

Ethernet Static IP	•	
Static IP	۰	
IP Address 192.168.60.242		
Gateway 192.168.50.1		
Netmask 255.255.255.0		
DNS 1 8888		
DNS 2 192.168.50.1		

Note:

- 1. Please input IPv4 address in all fields; in dot-decimal notation, consisting of four decimal numbers, each ranges from 0 to 255, separated by dot.
- 2. User must input all fields for static IP connection before enabling Ethernet again.

5.1.2. Signage Display

Settings -> Signage Display, to setup most features of signage display. See below for more detailed information about Signage Display settings.

Sig	gnage Display	
	General settings	
	Server settings	
	Source settings	
	Network application	
	System tools	
	Misc.	
	System updates	

5.1.2.1. General Settings

Settings -> Signage Display -> General Settings

Set up Signage Display name, User logo and Screenshot.

weral settings
Signage display name P0,18637164422
Boot Logo
Screenshot

Signage Display Name

Settings -> Signage Display -> General Settings -> Signage Display Name

Set up Signage Display name, the default name is Ethernet MAC address with prefix "PD_". For example, "PD_000b12223398". The maximum length of name is 36 characters in UTF8 format. Click to rename it.

Please enter signage display name		
PD_186571e442f2		
c.	ANCEL	ок
	_	-

Boot Logo

Settings -> Signage Display -> General Settings -> Boot Logo User can set up device boot up logo (boot animation) when OSD Menu -> Configuration 2 -> Logo is set to "User" mode.

Picture	OSD turn off	45
Screen	OSD H position	50
Audio	OSD V position	50
Configuration 1	Rotation	Landscape
Configuration 2	Information OSD	10
Advanced option	Logo	User
	Monitor ID	Action
	Heat status	24.21°C 75.57°F
	Monitor information	Action
	HDMI Version	
	Configuration2 reset	Action

Logo Off	
Off	0
On	0
User	

If "Logo" is not set to "User" mode, user cannot select custom boot animation.

Boot Logo

When it is set to "User" mode, the option "Choose Boot Animation" becomes available.

Choose	Boot	Anir

When Logo is set to "User" mode, the default Philips logo will be replaced by user selected boot animation file.

Click "Choose Boot Animation" and a pop-up menu appears for user to select boot animation file. Content saved on a SD card or USB memory card will be scanned automatically.

Boot animation file name must be set as "bootanimation. zip", any other format is invalid.

************************************	Choose Boot Animation		
	/data/local/tpv/bootanim/bootanimation.zip		۲
FORGET CANCEL SAVE	TRANSCEND/bootanimation.zip		
	FORGET	CANCEL	SAVE

All available boot animation files can be found in the following folder:

- File under /data/local/bootanimation/: The boot animation file that are copied from USB or SD card.
- 2. File under {SD_STORAGE_VOLUME_NAME}/: The boot animation file saved on the SD card.
- 3. File under {USB_STORAGE_VOLUME_NAME}/: The boot animation file saved on the USB storage.

Dialog options:

1. FORGET

Clear "bootanimation.zip under /data/local/ bootanimation/. Custom boot animation will not be used during system boot up.

2. CANCEL

Cancel and close the dialog box.

3. SAVE

Copy selected file to /data/local/bootanimation/. After doing this, user can remove their external storage (USB and SD). System uses the boot animation file under / data/local/bootanimation.

32BDL3550Q

If system does not found any bootanimation.zip file under external storage (USB, SD) and /data, the file list is empty. The "SAVE" and "FORGET" buttons are grayed out, user should check content saved on the USB memory or SD card. Click "CANCEL" button to close the dialog box, and plug in the USB memory or SD card again.



If /data/local/bootanimation/ folder is empty, it means that "bootanimation.zip" has not been saved before by user. Default Philips logo appears during system boot up.

When "bootanimation.zip" is found under external storage, a dialog box of the file list will appear.

Choose Boot Animation		
TRANSCEND/bootanimation.zip		۲
FORGET	CANCEL	SAVE

If the file "bootanimation.zip " can be found in the folder "/data/local/bootanimation/", the pop-up dialog box will show that file as the first option. It simply means that user has previously copied (saved) the file "bootanimation. zip" and that the system will boot up with boot animation from /data/local/bootanimation/bootanimation.zip.

/data/local/tpv/bootanim/bootanimation.zip /data/local/tpv/bootanimation.zip /oser /oser		
		۲
FORGET CANCEL		
	CANCEL	SAVE

Boot animation file can be replaced by using the "SAVE" button.

Screenshot

Settings -> Signage Display -> General Settings -> Screenshot

To capture the screenshots from the imported content, click "Enable" to enable the auto screenshot function. If the screenshot options are shown in gray, it means that the screenshot function is not enabled yet.

Screenshot	
Men Duluh Enable Dosle	
Screenhot Interval 3 do mutas	
Start time	
End time	
Repeat	
Sarve to Internal storage	
Purge Screenshots Every Day	
Send screenshots via email For email settings, please go to Signap Display -> Server settings -> Email notification.	

After enabling this feature, you can set the interval time between each screenshot, as well as the destination folder where the captured screen will be saved. The option "Save to" notifies you that the screenshot images will be saved in the internal storage and they cannot be changed manually. NOTE:

- 1. The screenshot images will be deleted automatically under the following conditions:
 - (1). When the start time of screenshot feature is set to 0

second.

- (2). Starting the screenshot at 40 seconds of minute.
- (3). If you decide to purge the screenshot photos every week, the data of deleting the photos will be changed to the day that you apply the setting of screenshot feature. For example, if you set the purging day to Monday of every week, then changed other settings in screenshot feature on Friday, the purging day will be changed to Friday (the day of system's current time).
- 2. Sleep (system suspend) and screenshot feature: The screenshot feature is suspended when the system enters sleep mode. The function of mailing out the screenshot is consequently suspended. The screenshotrelated features will be restarted when the system enters active mode.

Screenshot	
Main Bwitch Enable Enable	8
Borrendot Internal 60 montos	
Start time 0803	
End time 18:34	
Repeat Sunday, Monday, Tuenday, Wednesday, Thursday, Friday, Sahurday	
Save to Internal storage	
Purge Screenshots Every Week	
Send screenshots via email For email settings, please go to Signage Display → Server settings → Email notification.	

(1). Interval

Set the interval time between each screenshot. The available options are 30 and 60 minutes.

1148 Interval	
30 minutes Iundsy, Montey, Tuesday, Wedney 0 60 minutes	
Sunday, Monday, Tuesday, Wedner O 60 minutes	_
Save to CANCE	KEL.

(2).Start Time

Set the start time of a day to begin the screenshot function.

Make sure that you click the "Save" button before leaving the dialog box, or your settings will not be saved. The start time must be lesser than the end time. A toast message will appear notifying you if it is an invalid value.



(3). End Time

Set the end time of a day to end the screenshot function. Make sure that you click the "Save" button before leaving the dialog box, or your settings will not be saved. The start time must be lesser than the end time. A toast message will appear notifying you if it is an invalid value.



(4).Repeat

Set the repeat mode for auto screenshot.

Start time	Re	at			
10.46		Sunday			
End time	•	Monday			
		Tuesday			
Repeat Sunday, Monday, Tuesday, Wed		Vednesday			
		Thursday			
Save to Internal storage		Friday			
Purge Screenshots		Saturday			
Every Week			CANCEL	OF	

(5).Save to

The screen images will be saved under the folder named "philips/screenshot" of the internal storage.

(6).Purge Screenshots

Set the interval time for deleting the screenshot images. The available options are "Every day" and "Every week".



(7). Send screenshots via email

You can send every screenshot image as an e-mail attachment. User must set up mail information first in "Settings -> Signage Display -> Server Settings -> Email notification" (Refer to <u>Email Notification</u> section).

Send screenshots via email For email settings, please go to Signage Display -> Server settings -> Email notifica

5.1.2.2. Server Settings

Settings -> Signage Display -> Server Settings

Ser	ver settings	
	Email notification	
	FTP	
	Remote control	
	SNMP Endle	
	ADB Over Network Enable	

Email Notification

Settings -> Signage Display -> Server Settings -> Email Notification

Click checkbox to enable/disable E-mail notification feature. Set SMTP and manager E-mail after enabling the E-mail notification feature.



SMTP

Setup sender E-mail address and SMTP server information. There are two types of SMTP server for user to set up: "Gmail" and "Other". By using "Other" option, user can manually setup STMP server, security type and server port.

Note:

- 1. The password should be in UTF8 format with 6 to 20 characters.
- 2. User cannot set port 5000 (SICP default port) and 2121 (FTP server default port).

SICP network port setting in "Settings -> Signage Display -> Network Application -> SICP network port".

FTP network port settings in "Settings -> Signage Display -> Server settings -> FTP -> Port".

ExtTP Bettings Manage for Deterings Test Bend Test Mati Unincontrol	SMTP Enere @Boal Other Color Ener Sattle Serve Ener Sattle Serve Enere	(for example, example)(gmail.com)	
		DISCARD SAVE	


Other:

cratte				
SATTP Settings Settings Email Settings Settings Text Set Mail	SMTP Server O Graal © Other Email	(for example, example@gmail.com)		
Send Test Mali Unsuccessful	Password			
	SMTP Server			
	Security type None -			
	Port			
		DISCARD	SAVE	

Gmail Security Settings

If a problem occurs when sending the e-mail via Gmail, please visit Google website "https://www.google.com/ settings/security/lesssecureapps" for checking the security setting of your Google Account. Then turn on "Access for less secure apps".

Google

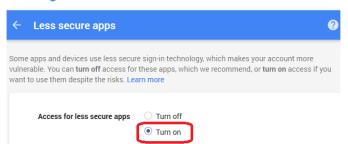

Gmail: (SMTP server, Security type and Port are grayed out)

Manager Email

Specify the destination address to receive the e-mail.



Test

To check if your e-mail settings are correct, select 'Send Test Mail" to send a test e-mail.

FTP

```
Settings -> Signage Display -> Server Settings -> FTP
```

FTP		
	Main Switch	
	Enable Enable	
	FTP	
	Account smartons	
	Password	
	Storage Path Internal storage	
	Port 2121	

Click the checkbox to enable/disable FTP server feature. After enabling this feature, user can setup account, password and port number.

- (1). Account: The user name to log in the FTP server. The length of the account name should be ranged from 4 to 20 characters, only [a-z], [A-Z] and [0-9] are allowed to use.
- (2).Password: The password to log in the FTP server. The length of the password should be ranged from 6 to 20 characters, only [a-z], [A-Z] and [0-9] are allowed to use. The password are covered by asterisks after setting.
- (3). Storage path: The FTP server has access to the internal storage only. The storage path is unchangeable.
- (4). Port: The port number for FTP server. Available port number ranges from 1025 to 65535, the default setting is 2121. The following port number cannot be used: 8000 / 9988 / 15220 / 28123 / 28124 and SICP network port (default 5000).

Finally, manually reboot the system to apply FTP settings.

Remote Control

Settings -> Signage Display -> Server Settings -> Remote Control

Remote control	
Main Switch	
Enable Enable	
Remote control Server	
Bind Server is unbinded	

Click the checkbox "Enable" to enable or disable the remote control client service. The default setting is "Enabled". To use the remote control feature, the device must be bound with the remote control server.

In the entry field of "Server", input the URL address with the prefix of "https://". If the device is not bound with the remote control server, please enter the PIN code provided by the server.

Bind status:

- If the device does not have appropriate network connection, a message "Network is disconnected" will appear.
- (2).If the device is equipped with network function, but is not connected to the remote control server, a message "Server is disconnected" will appear.
- (3).If a server is connected, but not bound, a message "Server is unbinded" will appear.
- (4).If the device is bound with the server successfully, a message "Server is binded" will appear.
- (5).If the PIN code is not correct, a message "Error PIN code" will appear.

SNMP

SNMP

Enable/Disable SNMP service.

Please refer to the SNMP user manual.

ADB over Network

You can access ADB over a network connection with port 5555.

ADB Over Networ

5.1.2.3. Source Settings

Settings -> Signage Display -> Source Settings User can configure source APK's detailed options.

So	Source settings		
	Media player		
	Browser		
	CMND & Play		
	PDF player		
	Custom app		

Media Player

Settings -> Signage Display -> Source Settings -> Media Player

Open Media Player APK's edit play list activity and edit effect settings activity.

Me	Media player		
	Edit Play List		
	Edit Effect Settings		

Browser

Settings -> Signage Display -> Source Settings -> Browser Open Browser APK's bookmark editor activity.

Edit Bookm

CMND & Play

Settings -> Signage Display -> Source Settings -> CMND & Play

CMND & Play

CMND & Play APK settings activity

Settings	
Server	
PIN Code	
Version 2.0	
Content	
Internal storage	۲
SD card	
USB storage	٥

(1). Server

Set up CMND & Play Server IP address. Not available in 2.0 protocol.

(2).Account

Set up CMND & Play Server account, account format should be [a-z] [A-Z] [0-9]. Not available in 2.0 protocol.

(3). PIN Code

Set up CMND & Play PIN code. Not available in 2.0 protocol.

(4). Version

Set up CMND & Play server protocol version.

(1). 2.0: Used for protocol version 2.0/2.2 (default)

(2).3.0: Used for protocol version 3.0/3.1 (default when user selects JP language in OOBE)


(5).Content

CMND & Play APK supports playback content from internal storage (select "Internal Storage") and external storage (select "SD card" or "USB storage"). CMDN & Play APK will search content from the selected storage. The default setting is internal storage.

Please note that external storage cannot be removed (plug-out) when CMND & Play is playing content. In addition, the free disk space of the external storage must be double of the CMS file size for extracting CMS content.

PDF Player

Settings -> Signage Display -> Source Settings -> PDF Player Open PDF Player APK's edit play list activity and edit effect settings activity.



Custom app

Settings -> Signage Display -> Source settings -> Custom app

User can set up customer source APK. The selected APK will be launched when switching into customer input source. If customer source APK is not set, the system shows a black screen when switching to customer input source.

Default is "CMND&Deploy" APK.

Custom a	00	
Sele	act app	
For	ce restart custom app ble	

If a custom source APK is set, the APK name will be displayed. Otherwise, it means that the custom App has not been set.

Select APP

Select a specific APP for custom APP source.

Select app		
CADC ADC		
🕥 Camera		
Chromium		
CMND&Deploy		۲
Host		
FORGET	CANCEL	SAVE

Note:

The APKs pre-installed by the system will not be shown on the list. Only the APKs that were installed manually will be listed.

(1). FORGET button

Clear the custom source application. It will be shown in gray if the customer source application has not been set.

(2).CANCEL button

Quit without saving changes.

(3).SAVE button

Click the "Save" button to select the APS as the custom source application. It will be shown in gray if no available application can be selected.

Force Restart Custom APP

When this feature is enabled, the system can monitor the status of custom APP. If the custom APP doesn't exist and that boot on source is set to "Custom app", the system will then try to launch custom APP again.

Default setting is Disable.

Custom app				
Select app CMNDBDeploy				
Force restart custom app Disable				

5.1.2.4. Network Application

Settings -> Signage Display -> Network Application

lon of port

Proxy

Proxy

Settings -> Signage Display -> Network Application -> Proxy Enable the proxy server by clicking the checkbox of "Enable". User can set up the host IP and port number of the proxy server. The default setting is "Disable".

Pro	ry	
	Main Switch	
	Enable Enable	
	Proxy settings	
	Proxy hostname	
	Proxy port	
	Туро нттр	
	Authentication	
	Authentication	
	Username	
	Password	

System supports the following proxy types: HTTP, HTTPS, SOCKS4, and SOCKS5. Choose one for your proxy server.



If an authorization is requested by proxy server, click the checkbox of "Authorization" and enter the user name and password.

Authentication	
Authentication	8
Username	
Password	

SICP Network Port

Settings -> Signage Display -> Network Application -> SICP Network Port

Set up the default port of SICP and enable/disable the network SICP. The default SICP is enabled with the port 5000.

Note:

Port number ranges from 1025 \sim 65535.

The following ports are already occupied and cannot be assigned: 8000, 9988, 15220, 28123, 28124. The default FTP port is 2121.

SICF	network port	
	Main Switch	
	Enable	
	SICP network port	
	SICP network port 5000 [Connected]	

5.1.2.5. System Tools

Settings -> Signage Display -> System Tools

There are eight major features in signage display system tools:

(1). Navigation Bar (only when touch device is supported)

(2).Clear Storage

(3).Reset

(4). Auto restart

(5).Import & Export

(6).Clone

(7). Security

(8).Admin Password



Navigation Bar

Settings -> Signage Display -> System Tools -> Navigation Bar

Set up to enable or disable navigation bar during touch gesture. This option is available only when platform supports touch device.

Clear Storage

Settings -> Signage Display -> System Tools -> Clear Storage

Syste	em tools	
	Clear storage	
	All	
	Internal storage	
	US8 storage	
	SD card	

Clear data under {storage}/philips/folder of the internal and external storage.

(1). All

- Clear the folder "Philips" from the internal storage, USB and SD card.
- (2).Internal Storage
 - Clear the folder "Philips" from the internal storage only.
- (3). USB Storage Clear the folder "Philips" from the USB storage only.
- (4).SD Card

Clear the folder "Philips" from the SD card only.

A dialog box lists all folders that the system is going to clear. Press "RESET" to clear all data under the listed folder, or press back key to quit without saving.

SD card	Clear storage	L
Reset Factory Reset	This will erase all data , including:	l
Auto restart Auto restart	Enternal/philips/	l
Import & Export	SDHC/pallps/	l
Export Signage Displa	y Settin ESD-USR/philips/	L
Import Signage Disple	y Setter	l

Reset

Factory Reset

Settings -> Signage Display -> System Tools -> Reset

Factory Reset

This function allows you to clear all user data and settings. The system will auto reboot and jump to OOBE after rebooting.

Important Note:

- 1. Only the data stored in the internal storage will be cleared and cannot be recovered, the data includes the device settings, installed APPs, APPs' data, downloaded files, music, photos and all data under"/data". However, the data stored on the USB and SD card will not be cleared.
- 2. Make sure that the AC adapter and power are always present during the factory reset process. User can only power off after seeing OOBE on the screen.

Factory Reset
This will erase all data from your Signage Display's internal storage, including:
System and ago data and settings Dominaded daps Dominaded daps Music Music Other used data Other used data Other used data Ense all your personal informations and downloaded appo? Ense all your personal informations and downloaded appo? Ense all your personal informations and downloaded appo?
FOR CALL LEVELS & UNIS ACCOME THE SPACED WITH EQUOLINANCE:

Click "Factory Reset" to perform factory reset. Press "OK" to confirm when the dialog box appears. Please note this

action clears all data in the internal storage and it is not recoverable.


PAUL NUMBER OF THE PAUL NEW YORK OF THE PAUL NEW YO			
Reset?			
Erase all your personal information and downloaded apps? You can't reverse this action! The system will reboot later!			
CAND	1	ок	

Auto Restart

Auto Restart function allows the device to restart automatically at the time you specify.

Auto rest

Select Disable/Enable auto restart feature from the Main Switch.



Use the time picker to set auto restart time.



Click "Save" button and the time you set for auto restart will display.

Restart til 09:00

Import & Export

Settings -> Signage Display -> System Tools -> Import & Export



This function allows you to import/export the settings and 3rd party APK from/to other device. Please note that:

(1). Export data to BDL3550Q-clone.zip file under {storage}/philips/clone folder.

(2).Support old clone files method, and put files under {storage}/philips/sys_backup: AndroidPDMediaPlayerData.db AndroidPDPdfData.db menu_settings.db settings_global.xml settings_secure.xml settings_system.xml signage_settings.db smartcms.db Note that latest export data will archive all files into ZIP file.

(3). "Signage Display Name" will not be imported/ exported.

Export Signage Display Settings

System exports database data and third party APKs into {storage}/philips/clone/BDL3550Q-clone.zip file of the selected storage (internal storage, SD card or USB storage). Note:

If the selected storage (internal storage, USB or SD card) does not contain Philips/folder, then the system will create it automatically.

A list of all available storage (internal storage, SD card and USB storage):

Reset	Select storage	
Factory Reset	Internal/philips/	۲
Auto restart	ESD-USB/philips/	
Import & Export Export Signage Display Setti	SDHC/philips/	0
Import Signage Display Setti	CANCE	ОК

Import Signage Display Settings

Import database data from philips/clone/BDL3550Q-clone. zip file of the selected storage (internal Storage, SD Card or USB storage). System imports following data in ZIP file:

(1). Import Database in BDL3550Q-clone.zip

(2).Import 3rd party APK in BDL3550Q_clone.zip

A list of all available storage (internal storage, SD card and USB storage):

Reset	Select storage	
Factory Reset	Internal/philips/	۲
Auto restart	ESD-USB/philips/	
Import & Export Export Signage Display Setting	i SDHC/philips/	
Import Signage Display Settin	CANCE	LOK

A confirmation dialog box is displayed before importing the settings and APKs. Click the "OK" button to start importing the data.

Factory Reset	Import Signage Display Settings	
Import & Export	Are you sure you want to import the settings and apps? After importing successfully, the system will load the settings, install all apps and reboot automatically.	
Export Signage Display Setting	After importing successitury, the system will load the settings, install all apps and reboot automatically.	
Import Signage Display Settin	CANCEL OK	
Clone Media Files	Allander All	

Clone

Settings -> Signage Display -> System Tools -> Clone

Clone Clone Media F

Clone Media Files

This function allows you to copy the media files from the selected source storage to the target storage.

- (1). System clone files are under the following folder:
 - philips/photo philips/music philips/video philips/cms philips/pdf philips/browser
- (2).Clone CMS files (file extension is ".cms"): Source storage

Source is internal storage

Check if there is CMS file on the FTP server. If there is no CMS file on the FTP server, check

philips/ folder in source storage

Source is external storage (SD card or USB storage)

Check CMS file in root directory of storage

Target storage

Target is internal storage

CMS file will be saved to philips/ folder

Target is external storage (SD card or USB storage)

CMS file will be saved to root directory of storage

Clo	ne Media Files	
	Clone Source	
	Internal storage	0
	SD card	0
	USB storage	۲
	Path: TRANSCEND/philips/	
	Target Location	
	Internal storage	۲
	SD card	0
	USB storage	0
	Path: Internal/philips/	
1	CLONE	

Security

Settings -> Signage Display -> System tools -> Security

Security External Storage

External Storage

Click the checkbox to lock or unlock external storage (SD card and USB storage). Default is unlocked.

External Storage SD card/USB External Stor

- (1). Unchecked (Disable): SD card/USB External Storage Unlock.
- (2).Checked (Enable): SD card/USB External Storage Lock.

Note:

When you disable external storage lock to enable state, please unplug and plugin external storage again (for both SD card and USB storage). After that, system can detect external storage again.

Admin Password

Settings -> Signage Display -> System tools -> Admin Password.

Admin Password	
Enable	•
Password	
Reset Password	

Enable:

Click the checkbox to enable or disable Admin Password. Default is disable.

Once it is enabled, you will need a password to login into Admin mode. Default password is "1234".

Password:

Change the password if needed.

Reset Password:

Reset the password to its default value which is "1234". If reset is successful, it shows a message as "Successful".

5.1.2.6.Misc.

TeamViewer Support

Click the checkbox to enable or disable TeamViewer support. TeamViewer will send a virtual HOME key to open Admin mode. Default is enable.

TeamViewer Support Enable

TeamViewerHost and TeamViewerQSAddOn APKs will be installed to the system automatically. Or, system will remove them if "TeamViewer Support" is disabled.

The following two APKs will be listd in Settings->Apps if "TeamViewer support" is enabled.

5.1.2.7.System updates

Local update

Host 30.38 MB

Settings -> Signage Display -> System updates -> Local update

System will auto search "update.zip" in root folder of USB disk and SD card. If "update.zip' is found on the external storage, a list will be shown for user to select the file to update.

System updates

Once the file is selected from the list, the system starts rebooting and updating.

Please note that:

- (1). Do not turn off the power or remove the power adapter until the update is complete.
- (2). Currently system only supports full Android update.
- (3). The update file must be named as "update.zip" only.
- (4). The "update.zip" file must be stored in the root folder of your external storage.

5.1.3. Apps

Display installed APKs information.

10 apps installed
Notifications
App permissions
Default apps Chromium
Special app access 1 app can use unrestricted data

5.1.3.1. App info

All installed Android APP are listed. User can manage each APP's permission and other settings.

see and a see an
ASS Lifetome
No Solo Solo Solo Solo Solo Solo Solo So
a Player
la Player
workConnect MB
Player 0
ngs o
rtCMS
WR
r

5.1.3.2. App permissions

List of major permission of Android system and the APP that has permission to control it.

*	Body Sensors 0 of 0 appr aboved
۵	Calendar O of O apps aboved
۵	Camera 0 of 2 apps allowed
8	Contacts O of 1 apps showed
۰	Location 1 of 2 appr allowed
*	Microphone 0 of 2 apps allowed
¢.	Phone 0 of 1 appa allowed
۳	SMS Gof0 apps allowed
•	Storage 7 of 8 apps allowed

5.1.3.3. Default Apps

User can set default APPs if someone sends related request.

Assist & voice input
Browser app Chromium
Home app DefaultHome
Opening links

Browser app

The default APP to open a webpage URL. Default is Chromium.

Home app

The default launcher APP, default is Default Home APP. If user changes this APP, the external source may not display correctly.

Opening links

This feature allows the APP to open supported links inside its APP directly.

	Instant apps	
	Instant opps Open Inis in apps, even if they're not installed	•
	Installed apps	
0	Chromium Don't open supported links	
51	Gallery Don't open supported links	
۲	Music Don't open supported Inits	

5.1.4. Display

Change the font size of your display.

Font size Largest			

5.1.4.1. Font Size

Drag the slide to adjust system font size. Default setting is "Largest".

s	Sample text	Largest	
T C C C C C C C C C C C C C C C C C C C	The Wandful Wizzard of Dz Mart 11. The Woodfall Unstand City of M Mart 12. The Woodfall Unstand City of M Mart 12. The Woodfall City of M M Mart 12. The Woodfall City of M M M M M M M M M M M M M M	A Adult the text on screen anuller or larger.	
	Preview		

5.1.5. Storage

Settings -> Storage Display the storage status of the device.

	Device storage	
	0.96 GB Total used of 4.00 GB	
=	Internal shared storage 0.96 GB used of 4.00 GB	
fii	Portable storage TRANSCEND 14.16 GB used of 30.56 GB	٨

If an external storage devices (SD card or USB disk) is inserted, the storage status of the external storage will be listed under "Portable storage".

	sle storage
1	Transcend 8.10 08 used of 29.25 08
	SanDiak SD card 3.95 Gli used of 14.83 GB

5.1.6. System

The following options are listed in Settings -> System.

- (1). Keyboard & inputs
- (2). Developer options

(3). About

۰	Keyboard & inputs Kika Keyboard
0	Developer options
G	About 5080L3550Q

5.1.6.1. Keyboard & input

Settings -> System -> Keyboard & input User can change IME and keyboard settings.



Virtual keyboard

Allow user to set default software IME (virtual keyboard) and control detailed IME settings.

Japanese IME will be installed automatically when Japanese language is selected in OOBE.

kka	Kika Keyboard Keyboard
+	Manage keyboards

Physical keyboard

Allow user to control physical keyboard and detailed keyboard settings.

The "TPV Vir-IR" is a system-level virtual keyboard; it always exists on the keyboard list.

Logitech USB Keyboard	
Kika Keyboard - Keyboard	
TPV VIHR	
Kika Keyboard - Keyboard	
Keyboard assistance	
Show virtual keyboard Keep it on screen while physical keyboard is active	0
Keyboard shortcuts helper Display available shortcuts	

On-screen keyboard enable

Settings -> Languages & input -> On-screen keyboard enable

Used to enable/disable system pre-installed software keyboard (IME). User can press "menu" six times to enable on-screen software keyboard when it is disabled. By default, on-screen keyboard is enabled.

5.1.6.2. Developer options

On-screen keyboard enable

Settings -> System -> Developer options

Android developer options for developers, default setting is On and USB debugging is also "On" by default.

On		•
8	Memory	
	Take bug report	
	Desktop backup password Desktop full backups servir currently protected	
	Stay awake Boren will never sleep while charging	0
	HDCP checking Use HDCP checking for DBM content only	
	Enable Bluetooth HCI snoop log Capture all bluetooth HCI padets in a fre	(2
	Running services View and control currently running services	
	Picture color mode Use sROB	0
	WebView implementation Android System WebView	
	Automatic system updates	۰
	System UI demo mode	
	Quick settings developer tiles	
	Debugging	
	USB debugging Debug mode when USB is connected	٠
	Bug report shortout Show a button in the oover menu for taking a bug report.	0

5.1.6.3.About

Settings -> System -> About

View the following information about the system.

(1). Status

Sta

- (2).Legal information
- (3). Model (model name of this device)
- (4). Android version

(5). Android security patch level

(6).Kernel version

(7). Build number (release version)

Status
Legal information
Model 5080135500
Android version 8.0.0
Android security patch level Determber 1, 2017
Kernel version 4.9.44 perchuld@genebuld #22 Fri Apr 10 11.09:32 CST 2020
Build number F809.03

Status

Display device serial number and total time for the device to boot up.

Serial num 123456789 Up time

Legal Information

Legal information and licenses of all open source projects will be listed.

Third-party

6. OSD Menu

An overview of the On-Screen Display (OSD) structure is shown below. You can use it as a reference for further adjustment of your display.

6.1. Navigating the OSD Menu

6.1.1. Navigating the OSD menu using the remote control



- 1. Press [1] button on the remote control to display the OSD menu.
- 2. Press [] or [] button to select the item to adjust.
- 3. Press [OK] or [-] button to enter the submenu.
- In the submenu, press [▲] or [♥] button to toggle between items, press [→] or [→] button to adjust the settings. If there is a submenu, press [OK] or [→] button to enter the submenu.
- 5. Press [1] button to return to the previous menu, or press [1] button to exit from the OSD menu.

6.1.2. Navigating the OSD menu using the display's control buttons

- 1. Press [MENU] button to display the OSD menu.
- 2. Press [+] or [-] button to select the item to adjust.
- 3. Press [+] button to enter the submenu.
- In the submenu, press [▲] or [▼] button to toggle between items, press [+] or [−] button to adjust the settings. If there is a submenu, press [+] button to enter the submenu.
- 5. Press [MENU] button to return to the previous menu, or keep pressing [MENU] button to exit from the OSD menu.

6.2. OSD Menu Overview

6.2.1. Picture menu

licture	Brightness	90
Screen	Contrast	50
Audio	Sharpness	20
Configuration 1	Black level	50
Configuration 2	Tint	50
Advanced option	Color	55
	Noise reduction	Medium
	Gamma selection	Native
	Color temperature	Native
	Color control	Action
	Smart power	Off
	Overscan	Off

Brightness

Adjust the brightness of this display's backlight.

Contrast

Adjust the contrast ratio for the input signal. NOTE: VIDEO source only

Sharpness

This function is digitally capable to keep a distinct image at all times.

Adjust the sharpness of the picture for each picture mode. NOTE: VIDEO source only

Black level

Adjust the image brightness for the background. NOTE: VIDEO source only. sRGB picture mode is standard and cannot be changed.

Tint (Hue)

Adjust the tint of the screen.

Press + button the flesh tone color becomes greenish. Press - button the flesh tone color becomes purplish. NOTE: VIDEO source only

Color (Saturation)

Adjust the color of the screen.

- Press + button to increase color depth.
- Press button to decrease color depth.

NOTE: VIDEO source only

Noise reduction

Adjust the noise reduction level. NOTE: VIDEO source only

Gamma selection

Select a display gamma. It refers to the brightness performance curve of signal input. Choose from {Native} / {2.2} / {2.4} / {s gamma} / {D-image}.

NOTE: VIDEO source only. sRGB picture mode is standard and cannot be changed.

Color temperature

Adjust the color temperature.

The image becomes reddish as the color temperature decreases, and becomes bluish as the color temperature increases.

NOTE: VIDEO source only.

Color Control

The color levels of red, green, and blue can be adjusted by the color bars.

R: Red gain, G: Green gain, B: Blue gain.

Smart power

Control of lower power consumption based on brightness setting.

- {OFF}: no adaptation
- {MEDIUM}: 80% of power consumption relative to current settings
- {HIGH}: 65% of power consumption relative to current settings

Overscan

If you encounter problems with overscanning, you can change display area of the image.

- {ON}: Display 95% of the total image area.
- {OFF}: Display 100% of the total image area. NOTE: VIDEO source only.

Picture reset

Reset all settings in the Picture menu.

Select "RESET" to restore factory preset data.

Press "CANCEL" button to cancel and then return to the previous menu.

6.2.2. Screen menu

Picture H position 50 Screen V position 50 Audio Clock 50 Configuration 1 Clock phase 22 Configuration 2 Zoom mode Full Advanced option Custom zoom Action Screen reset Action
Audio Clock 50 Configuration 1 Clock phase 22 Configuration 2 Zoom mode Full Advanced option Custom zoom Action Auto adjust Action
Configuration 1 Clock phase 22 Configuration 2 Zoom mode Full Advanced option Custom zoom Action Auto adjust Action
Configuration 2 Zoom mode Full Advanced option Custom zoom Action Auto adjust Action
Advanced option Custom zoom Action Auto adjust Action
Auto adjust Action
Screen reset Action

H position

Control Horizontal Image position within the display area of the LCD.

Press + button to move screen to right.

Press - button to move screen to left.

NOTE: VGA input only.

V position

Control Vertical Image position within the display area of the LCD.

Press + button to move the screen up.

Press - button to move the screen down. NOTE: VGA input only.

Clock

Press + button to expand the width of the image on the screen to the right.

Press - button to narrow the width of the image on the screen to the left.

NOTE: VGA input only.

Clock Phase

Improves focus, clarity and image stability by increasing or decreasing this setting.

NOTE: VGA input only.

Zoom mode


Choose one for video input: {Full} / {Real} / {21:9}/ {4:3}/ {Custom}

Full This mode restores the correct proportions of pictures transmitted in 16:9 using the full screen display.
Real This mode displays the image pixel- by-pixel on screen without scaling the original image size.
21:9
The picture is reproduced in 21:9 format and a black band at the top and bottom.
4:3 The picture is reproduced in 4:3 format and a black band is displayed on either side of the picture.
Custom Choose to apply the custom zoom settings in the Custom Zoom submenu.

Custom zoom

You can use this function to further customize the zoom settings to suit the image you want to display.

NOTE: This item is functional only when the {**Zoom mode**} is set to {**Custom**}.

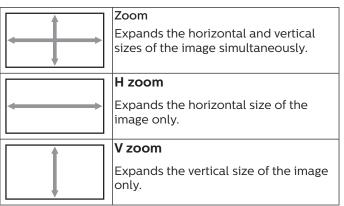

	H position
\longleftarrow \longrightarrow	Moves the horizontal position of the image left or right.
	V position
Ļ	Moves the vertical position of the image up or down.

Auto adjust

Press "Set" to detect and adjust H position, V position, Clock, Phase automatically.

NOTE: VGA input only.

Screen reset

Reset all settings in the **Screen** menu to factory preset values.

6.2.3. Audio menu

Picture	Balance	50
Screen	Treble	50
Audio	Bass	50
Configuration 1	Volume	30
Configuration 2	Audio Out (Line Out)	30
Advanced option	Maximum Volume	100
	Minimum Volume	0
	Mute	Off
	Audio source	Digital
	Audio reset	Action
	Audio Out Sync	Off

Balance

Adjust to emphasize left or right audio output balance.

Treble

Adjust to increase or decrease higher-pitched sounds.

Bass

Adjust to increase or decrease lower-pitched sounds.

Volume

Adjust the volume.

Audio Out (line out)

Adjust to increase or decrease the line out audio output level (volume).

NOTE: This function will be disabled when Audio Out Sync is ON.

Maximum volume

Adjust limitation for the maximum volume setting.

Minimum Volume

Adjust limitation for the minimum volume setting.

Mute

Turn the mute function on/off.

Audio Source

Select the audio input source. {Analog}: audio from audio input. {Digital}: audio from HDMI/DVI audio.

Audio reset

Reset all settings in the Audio menu to factory preset values.

Audio Out Sync

Line out volume sync with internal speaker Volume. {On}: Enable the function and gray out Audio Out (line out) Volume.

{Off}: Disable the function.

Speaker Setting

Turn internal speaker {On}/{Off}.

6.2.4. Configuration 1 menu

Picture	Switch on state	Force on
Screen	Panel saving	Action
Audio	RS232 routing	RS232
Configuration 1	Boot on source	Action
Configuration 2	WOL	Off
Advanced option	Light sensor	Off
	Human sensor	Off
	Configuration1 reset	Action
	Factory reset	Action

Switch on state

Select the display status when you connect the power cord next time.

- {Power off} The display will remain off when the power cord is connected.
- {Forced on} The display will turn on when the power cord is connected.
- {Last status} The display will return to the previous power status (on/off mode/standby mode) when the power cord is connected.

Panel saving

Choose to enable the panel saving functions and thus reduce the risk of image persistence or ghost imaging.

- {Brightness} Select {On} and the image brightness will reduce to an appropriate level. The Brightness setting in the Picture menu cannot be changed when this setting is enabled.
- {Pixel Shift} Select the time interval ({Auto}, {10-900 seconds}, {Off}) for display to slightly expand the image size and shift the position of pixels in four directions (up, down, left and right). Activating pixel shift will disable H position, V position and Zoom mode in Screen menu.

Note: Video source only.

RS232 routing

Select RS232 routing path

- RS232} RS232 is routed from 2.5mm phone jack
- {LAN->RS232} RS232 is routed from RJ45

Boot on source

Choose to select a source when booting up.

• {Input} – Select input source when booting up.

• {Playlist} – Select playlist index for Media Player, Browser, PDF Player. O indicates there is no playlist.

WOL (Wake on LAN)

Allow the display to be turned on by a network message. Note: This function only works in power mode 1 and mode 2.

Light sensor

Choose to turn on or off the light sensor function of CRD41.

Human sensor

Choose to turn on or off the human sensor function of CRD41.


Configuration 1 reset

Reset all settings in Configuration 1 menu to factory preset values.

Factory Reset

Reset all customized settings in Picture, Screen, Audio, Configuration 1, Configuration 2 and Advanced Option to the factory default values.

6.2.5. Configuration 2 menu

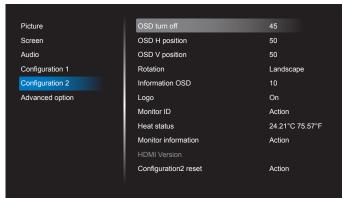

OSD turn off

Set the period of time the OSD (on-screen display) menu stays on the screen.

The options are {Off, 5 - 120} seconds. {Off} does not disappear automatically.

OSD H position

Adjust the horizontal position of the OSD menu.

OSD V position

Adjust the vertical position of the OSD menu.

Rotation

Change OSD and Android to Landscape / Portrait mode. Note: Video inputs will not rotate with this setting. Note: If Android APK plays video content, user MUST stop and re-play to get correct video image.

Information OSD

Set the period of time the information OSD display on the upper left corner of the screen. The information OSD will display when input source and signal are changed.

The options are {Off, 1 - 60} seconds.

Logo

Choose to enable or disable the picture of Logo when turning on your display.

- {Off} Both static Philips logo and Android boot animation will not be shown.
- {On} Default value. Both Philips logo and Android boot animation will be shown.
- {User} Static Philips logo will not be shown, only user-selected boot animation will be shown in Android settings.

Note: Logo will not be rotated even thought rotation setting is set.

Monitor ID

Set the ID number for controlling the display via the RS232 connection. Each display must have a unique ID number when multiple sets of the display are connected. Monitor ID number range is between 1 and 255.

- {Monitor ID} set range in {1-255}. The default setting is 1.
- {Monitor group} set range in {1-254}. The default setting is 1.

Heat Status

Current thermal status.

Monitor information

Shows information about your display, including model name, SW version, serial number, and operation hours.

Monitor information	
Model name	
Serial NO.	N/A
Operation hours	0
SW Version	FBXX.XX

HDMI version

Set the HDMI version to 1.4 or 2.0. Note: HDMI input source only.

Configuration 2 reset

Reset all settings in Configuration 2 menu to factory preset values.

6.2.6. Advanced Option menu

Picture	IR control	Unlock
Screen	Power LED Light	On
Audio	Keyboard control	Unlock
Configuration 1	Tiling	Action
Configuration 2	Off Timer	Off
Advanced option	Date and time	Action
	Schedule	Action
	HDMI with One Wire	Off
	HDMI One Wire Power off	Off
	Auto signal detection	Off
	Language	English
	OSD transparency	Off

IR control

Select the operation mode of the remote control when multiple displays are connected via RS232 connection.

• {Unlock} - All displays can be operated normally by the remote control unit.

- {Primary} Designate this display as the primary display for remote control operation. Only this display can be operated by the remote control. (In primary mode, IR key will always be processed regardless of the monitor ID/group settings).
- {Secondary} Designate this display as the secondary display. This display cannot be operated by the remote control, and will only receive the control signal from the primary display via RS232 connection.
- {Lock All} / {Lock all but Volume} / {Lock all but Power} / {Lock all except PWR &VOL} - Lock the remote control function of this display. To unlock, press and hold the INFO button on the remote control for 6 (six) seconds.

Power LED light

Choose to set power indication LED on or off. Choose {On} for normal use.

Keyboard control

Choose to enable or disable the display keyboard (control buttons) function.

- {Unlock} Enable the keyboard function.
- {Lock All} / {Lock all but Volume} / {Lock all but Power} / {Lock all except PWR & VOL} - Disable the keyboard function.

NOTE: "Keyboard Control Lock Mode" This function completely disables the access to all Keyboard Control functions. To enable or disable the keyboard control lock, press both [VOL+] and [UP] buttons and hold down continuously more than 3 seconds.

Tiling

Create a single large-screen matrix (video wall) that consists of up to 150 sets of the display (up to 10-sets on the vertical and 15-sets on the horizontal sides). This function requires daisy-chain connection.


- Switch on Delay: Set the power-on delaying time (in seconds). Default option {Auto} allows a sequential powering-on for each display by monitor ID when multiple displays are connected. The options are: {Off, Auto, 2-255}.
- Brightness: {Normal} Adjust the overall image and background screen brightness (backlight) in Screen menu. {ACS} – Apply brightness values (backlight) which is adjusted by MIC tool. The default value before adjustment is the same as brightness setting in Screen menu.
- H monitors: Select the number of displays in horizontal side.
- V monitors: Select the number of displays in vertical side.
- **Position**: Select the position of this display in the screen matrix.

			H monitors			1
Γ	1	2	3	4	5	 Position
	6	7	8	9	10	
V monitors	11	12	13	14	15	
>	16	17	18	19	20	
	21	22	23	24	25	


• Frame comp.: Turn frame compensation function on and off. The display adjusts the image to compensate the width of display bezels in order to accurately display the image.

With frame compensation:

{On}

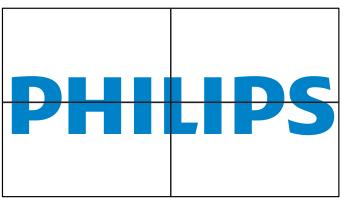

{Off}

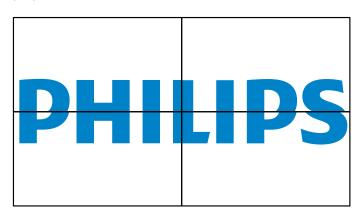

• Enable: Check to enable tiling function.

Off timer

Set automatic power off time (in hours).

Date and time


Adjust the current date and time for the display's internal clock.

Date and time		
Auto Sync		\checkmark
Set date		
Set time		
Choose time zone London, Dublin GMT+1:00		•
NTP Server	2.android.pool.ntp.org	
Current date time	2020/05/27 13:17:33	

• {Auto Sync} - Auto sync display's clock with NTP server.

Schedule

Allow user setup up to seven different scheduled intervals of display activity.

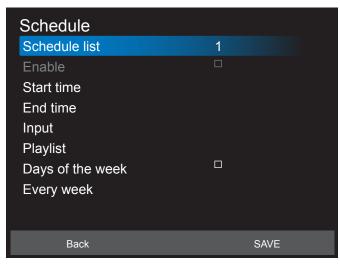

- {Schedule list} Select 1-7 schedules to edit.
- {Enable} Enable/disable selected schedule. If time conflict with other schedule or start/end time, input source are empty, user cannot enable this schedule.
- {Start time} Set start time.
- {End time} Set end time.
- {Input} Set input source, system will go to selected source automatically at start time.
- {Play list} Set playlist 1-7 for Media Player, PDF Player and Browser sources.
- {Days of the week} Set Sunday, Monday, Tuesday, Wednesday, Thursday, Friday and Saturday.
- {Every week} Set lifecycle.
- {Back} Cancel and do not change schedule data.
- {SAVE} Save schedule data.

HDMI with One Wire

Enable or disable HDMI CEC.

HDMI One Wire Power Off

Allow user to set multiple devices to standby mode by pressing the power button. This function is only available when HDMI CEC is enabled.

Language

Select the language used in the OSD menu.

The options are: English/Deutsch/简体中文 /Français/ Italiano/Español/Русский/Polski/Türkçe/ 繁體中文 / 日本語 /Português/نيبر عك/Danish/Swedish/Finnish/Norwegian/ Dutch/Czech/Lithuanian/Latvian/Estonian.

OSD Transparency

Adjust OSD transparency.

- {Off} Transparency off.
- {1-100} Transparency level 1-100

Power Save

Mode 1 [TCP off, WOL on, auto off]

Mode 2 [TCP off, WOL on, auto on/off]

Mode 3 [TCP on, WOL off, auto on/off]

Mode 4 [TCP on, WOL off, no auto on/off]

Power Save	RCU Power Button Off	No Signal	WOL	Android (ARM)
Mode 1	DC OFF	DC OFF	V	ARM off
Mode 2	DC OFF	when signal is back, system wake up	V	ARM off
Mode 3	Backlight OFF	when signal is back, system wake up	Х	ARM on
Mode 4	Backlight OFF	Backlight always on, show no signal	Х	ARM on

Following table is the action for Android board with different power mode.

Power mode	Mode 1, Mode 2	Mode 3, Mode 4
DC off	System shutdown	 Media Player, Browser, PDF Player and SmartCMS will close. Android system goes to default black launcher.
DC on	System boot up	Android system reboot. If Logo settings is off, system directly turn backlight on without rebooting.

Advanced option reset

Reset all settings except {Date and Time} in the advanced option menu to factory preset values.

7. Supported Media Formats

USB Multimedia Formats

Video format			
Video Codec	Resolution	Bit Rate	
MPEG1/2	1080P@30fps	40Mbps	
MPEG4	1080P@30fps	40Mbps	
H.263	1080P@30fps	40Mbps	
H.264	4K2K@60fps	135Mbps	
H.265	4K2K@60fps	100Mbps	
VP8	1920x1080@30fps	50Mbps	

Audio format

Addio Ionnat				
Audio Codec	Sampling Rate:	Channel	Bit Rate	
MPEG1/2/2.5 Layer3	8KHz-48KHz	2	8Kbps-320Kbps	
MPEG1/2 Layer1	16KHz-48KHz	2	32Kbps-448Kbps	
MPEG1/2 Layer2	16KHz-48KHz	2	8Kbps-384Kbps	
			AAC-LC: 12Kbps-576Kbps	
AAC, HEAAC	8KHz-48KHz	5.1	V1:6Kbps-288Kbps	
			V2:3Kbps-144Kbps	

Photo format

Image	Max. Resolution
JPEG	1920 x 1080
PNG	1920 x 1080
BMP	1920 x 1080

NOTES:

- Sound or video may not work if the contents have a standard bit rate/frame rate above the compatible Frame/sec listed in the table above.
- Video content with a Bit rate or Frame rate larger than the rate specified in the table above can cause choppy video during playback.

8. Input Mode

Timing support:

ltem	Resolution	H.Freq. (KHz)	V.Freq. (Hz)
1	720×400 @70Hz DOS	31.469	70.087
2	640×480 @60Hz DMT	31.469	59.94
3	640×480 @67Hz MAC	35	66.667
4	640×480 @72Hz DMT	37.861	72.809
5	640×480 @75Hz DMT	37.5	75
6	800×600 @56Hz DMT	35.156	56.25
7	800×600 @60Hz DMT	37.879	60.317
8	800×600 @72Hz DMT	48.077	72.188
9	800×600 @75Hz DMT	46.875	75
10	832×624 @75Hz MAC	49.725	74.5
11	1024×768 @60Hz DMT	48.363	60.004
12	1024×768 @70Hz DMT	56.476	70.069
13	1024×768 @75Hz DMT	60.023	75.029
14	1152×864 @75Hz DMT	67.5	75
15	1152×870 @75Hz MAC	68.681	75.062
16	1280×720 @60Hz CVT16:9	44.772	59.855
17	1280x800 @60Hz CVT16:10	49.702	59.81
18	1280×1024 @60Hz DMT	63.981	60.02
19	1440×900 @60Hz CVT16:10 R	55.469	59.901
20	1440×900 @60Hz CVT16:10	55.935	59.887
21	1600×1200 @60Hz CVT16:9	75	60
22	1680×1050 @60Hz CVT16:9 R	64.674	59.883
23	1680×1050 @60Hz CVT16:9	65.29	59.954
24	1920×1080 @60Hz CVT-RB / XBOX360	66.7	60
25	1920×1080 @60Hz DMT-RB	67.5	60
26	480i@60Hz	15.734	59.94
27	480P@60Hz	31.469	59.94
28	720P@60Hz	44.955	59.94
29	1080I@60Hz	33.716	59.94
30	1080P@60Hz	67.433	59.94
31	576i@50Hz	15.625	50
32	576P@50Hz	31.25	50
33	720P@50Hz	37.5	50
34	1080I@50Hz	28.125	50.08
35	1080P@50Hz	56.25	50

• The PC text quality is optimum in FHD mode (1920 x 1080, 60Hz).

• Your PC display screen might appear different depending on the manufacturer (and your particular version of Windows).

Check your PC instruction book for information about connecting your PC to a display.

• If a vertical and horizontal frequency-select mode exists, select 60Hz (vertical) and 31.5KHz (horizontal). In some cases, abnormal signals (such as stripes) might appear on the screen when the PC power is turned off (or if the PC is disconnected). If so, press the [INPUT] button to enter the video mode. Also, make sure that the PC is connected.

• When horizontal synchronous signals seem irregular in RGB mode, check PC power saving mode or cable connections.

• The display settings table complies to the IBM/VESA standards, and based on the analog input.

• The DVI support mode is regarded as same to the PC support mode.


• The best timing for the vertical frequency to each mode is 60Hz.

9. Pixel Defect Policy

We strive to deliver the highest quality products and use some of the industry's most advanced manufacturing processes whilst practicing stringent quality control. However, pixel or sub-pixel defects on the PDP / TFT panels used in Plasma- & LCD- displays are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but Philips guarantees that any Plasma- & LCD- displays with an unacceptable number of defects will be repaired during the warranty period in line with your local guarantee conditions.

This notice explains the different types of pixel defects and defines the acceptable defect level for the LCD screen. In order to qualify for repair under warranty, the number of pixel defects must exceed a certain level as shown in the reference table. If the LCD screen is within specification a warranty exchange / claim back will be refused. Additionally, because some types or combinations of pixel defects are more noticeable than others, Philips sets even higher quality standards for those.

9.1. Pixels and Sub-Pixels

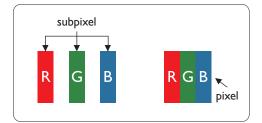


A pixel, or picture element, is composed of three sub-pixels in the primary colors of red, green and blue. Many pixels together form an image. When all sub-pixels of a pixel are lit, the three colored sub-pixels together appear as a single white pixel. When all are dark, the three colored sub-pixels together appear as a single black pixel. Other combinations of lit and dark sub-pixels appear as single pixels of other colors.

9.2. Types of Pixel Defects + Dot Definition

Pixel and sub-pixel defects appear on the screen in different ways. There are three categories of pixel defects and several types of sub-pixel defects within each category.

Dot definition = What is a defective "Dot"? :


One or more defective, adjacent sub-pixel are defined as one "dot". The no. of defective sub-pixels are not relevant to define a defective dot. This means that a defective dot can consist of one, two or three defective sub-pixels which can be dark or lit.



One dot = One Pixel; consists of three sub-pixels of Red, Green, and Blue.


9.3. Bright Dot Defects

Bright dot defects appear as pixels or sub-pixels that are always lit or "on". These are the examples of bright dot defects:

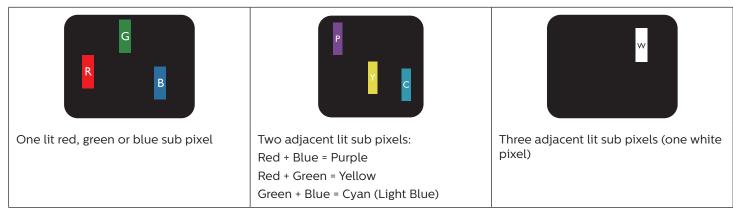

9.4. Dark Dot Defects

Black dot defects appear as pixels or sub-pixels that are always dark or "off". These are the examples of black dot defects:

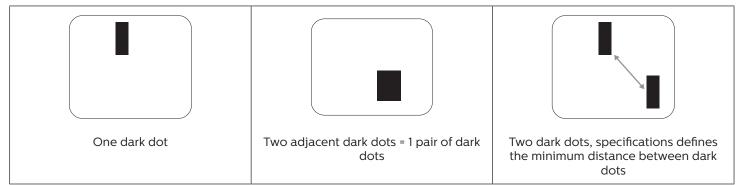

9.5. Proximity of Pixel Defects

Because pixel and sub-pixels defects of the same type that are nearby one another may be more noticeable, Philips also specifies tolerances for the proximity of pixel defects. In the table below you can find specifications about:

- Allowed amount of adjacent dark dots = (adjacent dark dots =1 pair of dark dots)
- Minimum distance between dark dots
- Total no. of all defective dots

9.6. Pixel Defect Tolerances

In order to qualify for repair due to pixel defects during the warranty period, a PDP / TFT panel in a Philips Plasma / LCDdisplay must have pixel or sub-pixel defects exceeding the tolerances listed in the following table.

BRIGHT DOT EFFECT	ACCEPTABLE LEVEL
1 lit sub pixel	2
BLACK DOT EFFECT	ACCEPTABLE LEVEL
1 dark sub pixel	10
TOTAL DOT DEFECTS OF ALL TYPES	12

NOTE: * 1 or 2 adjacent sub pixel defects = 1 dot defect

9.7. MURA

Dark spots or patches may occasionally appear on some liquid crystal display (LCD) panels. This is known within the industry as Mura, which is a Japanese term for "unevenness." It is used to describe an irregular pattern or area in which uneven screen uniformity appears under certain conditions. Mura is a result of the deterioration of the liquid crystal alignment layer and is most commonly caused by long-term operation under high ambient temperatures. It is an industry- wide phenomenon and Mura is not repairable. It is also not covered by our warranty terms.

Mura has been around since the introduction of LCD technology and with screens getting bigger and in operation 24/7, many displays are running in low light conditions. This all adds to the possibility of Mura affecting displays.

HOW TO SPOT MURA

There are many symptoms of Mura and also multiple causes. Several of these are listed below:

- Impurities or foreign particles in the crystal matrix
- Uneven distribution of LCD matrix during manufacturing
- Non-uniform luminance distribution of the backlight
- Panel assembly induced stress
- Flaws within the LCD cells
- Thermal induced stress high temperature operation over long periods of time

HOW TO AVOID MURA

Although we can not guarantee the complete eradication of Mura every time, in general the appearance of Mura can be minimized by these methods:

- Lower the backlight brightness
 - Use a screen saver
- Reduce the ambient temperature around the unit

10. Cleaning and Troubleshooting

10.1. Cleaning

Caution When Using the Display

- Do not bring your hands, face or objects close to the ventilation holes of the display. The top of the display is usually very
 hot due to the high temperature of exhaust air being released through the ventilation holes. Burns or personal injuries
 may occur if any body parts are brought too close. Placing any object near the top of the display could also result in heat
 related damage to the object as well as the display itself.
- Be sure to disconnect all cables before moving the display. Moving the display with its cables attached may damage the cables and thus cause fire or electric shock.
- Disconnect the power plug from the wall outlet as a safety precaution before carrying out any type of cleaning or maintenance procedure.

Front Panel Cleaning Instructions

- The front of the display has been specially treated. Wipe the surface gently using only a cleaning cloth or a soft, lint-free cloth.
- If the surface becomes dirty, soak a soft, lint-free cloth in a mild detergent solution. Wring the cloth to remove excess liquid. Wipe the surface of the display to remove dirt. Then use a dry cloth of the same type to dry.
- Do not scratch or hit the surface of the panel with fingers or hard objects of any kind.
- Do not use volatile substances such as insert sprays, solvents and thinners.

Cabinet Cleaning Instructions

- If the cabinet becomes dirty, wipe the cabinet with a soft, dry cloth.
- If the cabinet is extremely dirty, soak a lint-free cloth in a mild detergent solution. Wring the cloth to remove as much moisture as possible. Wipe the cabinet. Use another dry cloth to wipe over until the surface is dry.
- Do not use solution that contains oil to clean the plastic parts. Such product damage the plastic parts and void the warranty.
- Do not allow any water or detergent to come into contact with the surface of the display. If water or moisture gets inside the unit, operating problems, electrical and shock hazards may result.
- Do not scratch or hit the cabinet with fingers or hard objects of any kind.
- Do not use volatile substances such as insert sprays, solvents and thinners on the cabinet.
- Do not place anything made from rubber or PVC near the cabinet for any extended periods of time.

10.2. Troubleshooting

Symptom	Possible Cause	Remedy
No picture is displayed	 The power cord is disconnected. The main power switch on the back of the display is not switched on. The selected input has no connection. The display is in standby mode. 	 Plug in the power cord. Make sure the power switch is switched on. Connect a signal connection to the display.
Interference displayed on the display or audible noise is heard	Caused by surrounding electrical appliances or fluorescent lights.	Move the display to another location to see if the interference is reduced.
Color is abnormal	The signal cable is not connected properly.	Make sure that the signal cable is attached firmly to the back of the display.
Picture is distorted with abnormal patterns	 The signal cable is not connected properly. The input signal is beyond the capabilities of the display. 	 Make sure that the signal cable is attached firmly. Check the video signal source to see if it is beyond the range of the display. Please verify its specifications with this display's specification section.
Display image doesn't fill up the full size of the screen	 The zoom mode is not set correctly. Scan Mode may be set incorrectly to underscan. If the image exceeds the screen size, Scan Mode may need to be set to Underscan. 	Use the Zoom mode or Custom zoom function in the Screen menu to fine tune display geometry and time frequency parameter.
Can hear sound, but no picture	Source signal cable is connected improperly.	Make sure that both video inputs and sound inputs are correctly connected.
Can see picture but no sound is heard	 Source signal cable is connected improperly. Volume is turned all the way down. {Mute} is turned on. No external speaker connected. 	 Make sure that both video inputs and sound inputs are correctly connected. Press [+] or [-] button to hear sound. Switch MUTE off by using the [•] button. Connect external speakers and adjust the volume to a suitable level.
Some picture elements do not light up	Some pixels of the display are off.	This display is manufactured using an extremely high level of precision technology: however, sometimes some pixels of the display may not display. This is not a malfunction.
After-Images can still be seen on the display after the display is powered off. (Examples of still pictures include logos, video games, computer images, and images displayed in 4:3 normal mode)	A still picture is displayed for an over extended period of time	Do not allow a still image to be displayed for an extended period of time as this can cause a permanent after-image to remain on the display.

11. Warranty Statement

Warranty period for PHILIPS signage display is listed as below, for areas not covered in this table, please follow their warranty statement.

Region	Warranty Period
USA, Canada	3 years
China	1 year
Asia Pacific	3 years
Europe	3 years
Brazil	3 years

12. Technical Specifications Display:

Display.		
Item	Specifications	
Screen Size (Active Area)	800 mm / 31.5 inch	
Aspect Ratio	16:9	
Number of pixels	1920 (H) x 1080 (V)	
Pixel pitch	0.36375 (H) x 0.36375 (V) [mm]	
Displayable colors	8 bits, 16.7 Million colors	
Brightness (typical)	350 cd/m ²	
Contrast ratio (typical)	4000:1	
Viewing angle	178 degrees	

In/Out Terminals:

Item		Specifications
Speaker Output	Internal Speakers	10W (L) + 10W (R) [RMS]/8Ω
		82 dB/W/M/160 Hz - 13 KHz
Audio Output	3.5mm phone jack x 1	0.5V [rms] (Normal) / 2 Channel (L+R)
Audio Input	3.5mm phone jack x 1	0.5V [rms] (Normal) / 2 Channel (L+R)
RS232	2.5mm Phone jack x 2	RS232 in/RS232 out
RJ-45	RJ-45 Jack x 1 (8 pin)	10/100 LAN Port
HDMI Input	HDMI Jack x 2 (Type A) (19 pin)	Digital RGB: TMDS (Video + Audio) MAX: Video - 720p, 1080p, 3840 x 2160/60 Hz Audio - 48 KHz/ 2 Channel (L+R) Supports LPCM only
DVI-I Input	DVI-I Jack	Digital RGB: TMDS (Video)
IR Input/Output	3.5mm x 2	IR pass through or IR daisy chain
USB Input	USB x 2 (Type A)	USB 2.0, Multimedia play and service port

General:

Item	Specifications	
Power Input	100 - 240V~, 50/60Hz	
Power Consumption (Max)	80 W	
Power Consumption (typ.)	50 W	
Power Consumption (Standby mode & Off mode)	<0.5 W	
AC Switch Off Mode (W)	O W	
Dimensions [W x H x D]	726.5 x 425.4 x 69.1 mm	
Weight	5.31 Kg	
Gross Weight	7.8 Кg	
Display Resolution (Pixels)	1920 x 1080	

Environmental Condition:

Item		Specifications
Temperature	Operational	0 ~ 40°C
	Storage	-20 ~ 60°C
Humidity	Operational	20 ~ 80% RH (No condensation)
	Storage	5 ~ 95% RH (No condensation)
Altitude	Operational	0 ~ 3,000 m
	Storage / Shipment	0 ~ 9,000 m



 $2021\,\odot$ TOP Victory Investments Ltd. All rights reserved.

This product has been manufactured by and is sold under the responsibility of Top Victory Investments Ltd., and Top Victory Investments Ltd. is the warrantor in relation to this product. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

Specifications are subject to change without notice. Version: V1.02 2022-03-31