

Philips
LCD monitor with
SmartControl Lite

V Line
20 (Viewable 19.5"/49.4 cm)

206V6QSB6



Great LED images in vivid colours

Enjoy vivid pictures on this Philips display. Equipped with SmartControl lite, it's a great choice!

Vivid pictures every time

- AH-IPS display gives awesome images with wide viewing angles
- SmartContrast for rich black details
- Easy display performance tuning with SmartControl Lite

Great choice

- Compact design saves space
- Mercury Free eco-friendly display
- VESA mount allows for flexibility

PHILIPS

Specifications

Picture/Display

- LCD panel type: AH-IPS LCD
- Backlight type: W-LED system
- Panel Size: 19.45 inch/49.4 cm
- Effective viewing area: 418.61 (H) x 262.35 (V)
- Aspect ratio: 16:10
- Optimum resolution: 1440 x 900 @ 60 Hz
- Response time (typical): 14 (GtG) ms
- Brightness: 250 cd/m²
- SmartContrast: 10,000,000:1
- Contrast ratio (typical): 1000:1
- Pixel pitch: 0.291 x 0.291 mm
- Viewing angle: 178° (H)/178° (V), @ C/R > 10
- Display colours: 16.7 M
- Scanning Frequency: 30–83 kHz (H)/56–76 Hz (V)
- sRGB

Connectivity

- Signal Input: VGA (Analogue)
- Sync Input: Separate Sync, Sync on Green

Convenience

- User convenience: Power On/Off, Menu/OK, Brightness/Back, 4:3 Wide/Up, Auto/Down
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)
- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7, Windows 8

Stand

- Tilt: -5/20 degree

Power

- On mode: 11.31 W (typ.) (EnergyStar 6.0 test

- method)
- Standby mode: 0.5 W (typ.)
- Off mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)
- Power supply: External, 100–240 VAC, 50–60 Hz

Dimensions

- Product with stand (mm): 452 x 371 x 200 mm
- Product without stand (mm): 452 x 304 x 40 mm
- Packaging in mm (W x H x D): 490 x 422 x 96 mm

Weight

- Product with stand (kg): 2.28 kg
- Product without stand (kg): 2.00 kg
- Product with packaging (kg): 3.73 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20% to 80% %
- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- MTBF: 50,000 (excluding backlight) hour(s)

Sustainability

- Environmental and energy: EnergyStar 6.0, RoHS, Lead-free, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards


- Regulatory Approvals: CE Mark, FCC Class B, CU-EAC, SASO, KUCAS, cETLus, SEMKO, TUV/ISO9241-307, EPA, WEEE, PSB, CECP, BSMI

Cabinet

- Colour: Black
- Finish: Hairline (front bezel)/Texture (rear cover)

Highlights

AH-IPS technology

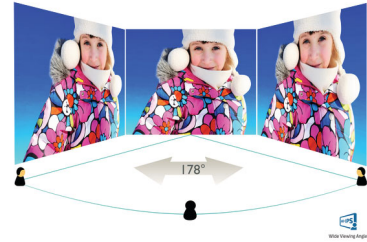

AH-IPS displays use an advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle. Unlike standard TN panels, AH-IPS displays give you remarkably crisp images with vivid colours, making them ideal not only for Photos, movies and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

SmartContrast



SmartContrast is a Philips technology that analyses the contents you are displaying, automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

SmartControl Lite

SmartControl Lite is the next generation 3D icon-based GUI monitor control software. This allows the user to fine-tune most parameters of the monitor like Colour, Brightness, screen calibration, Multimedia, ID management etc. with the mouse.

Mercury Free

Philips monitors with LED backlighting are free from Mercury, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its lifecycle, from manufacturing to disposal.



Issue date 2019-11-07

Version: 3.0.1

12 NC: 8670 001 26208
EAN: 87 12581 73411 4

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
* Smart response time is the optimum value from either GtG or GtG (BW) tests.