



Philips  
LED monitor with HDMI,  
Audio, SmartTouch

54.6cm/21.5" E-line  
Full HD

224EL2SB

## Elegant HDMI LED display for Full HD entertainment

This elegant, 224EL2 HDMI Full HD Multimedia LED display with stylish SmartTouch controls is ready to immerse you in the gaming and movie world

### Great picture quality

- Full HD LCD display, 1920x1080p resolution
- 16:9 display for best widescreen gaming and video
- SmartContrast 20000000:1 for incredible rich black details
- LED technology ensures natural colors

### Design that complements any interior

- Glossy finish to enhance your decor
- Sleek, elegant design complements your home decor
- Stylish SmartTouch controls

### Experience true multimedia

- HDMI-ready for top quality, multimedia experience
- Built in stereo audio for multimedia experience

### Great convenience

- Easy picture format control switching in wide and 4:3 format
- Easy display performance tuning with SmartControl Lite

# PHILIPS

# Highlights

## Sleek, elegant design

A sleek, elegant design look that complements home furnishings in any room.


## LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

## Full HD 1920x1080p LCD display

Enjoy crisp and crystal clear picture quality to give your audience a truly memorable visual experience. Your viewers will be treated to unsurpassed video, with an amazing color gamut and the sharpest pictures around.

## SmartContrast ratio 20000000:1

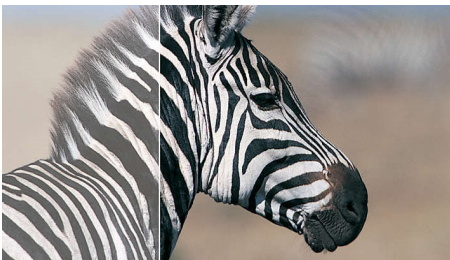

You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

## HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

## SmartTouch controls




SmartTouch controls are intelligent, touch sensitive icons that replace protruding buttons. Responding to your lightest touch, SmartTouch controls, for example, power up your monitor or brighten and sharpen your display with SmartImage Lite. When activated, SmartTouch icons glow to indicate that your commands have been implemented.

## 16:9 widescreen aspect ratio

An aspect ratio is an expression of a video image's width compared to its height. The 16:9 widescreen aspect ratio is standard for universal to high-definition television and European digital television. A native 16:9

aspect ratio means outstanding game and video display without bars at top and bottom of the picture and without the quality loss than comes from scaling, altering an image to fit on a different screen size.

## Easy picture format control

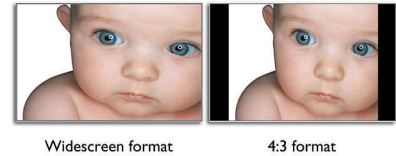

Philips easy picture format control on OSD is to switch from the 4:3 aspect ratio to the widescreen mode and back again to match the display's aspect ratio with your content for working with wide documents without scrolling or viewing widescreen media in the widescreen mode and distortion-free, native mode display of 4:3 ratio content.

## Built-in stereo audio

A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

## SmartControl Lite

SmartControl Lite is the next generation 3D icon based GUI monitor control software. This allows user to fine-tune most parameters of the monitor like Color, Brightness, screen calibration, Multi-media, ID management, etc with the mouse.

## Glossy finish

An attractive, elegantly finished glossy finish that fits in with and complements your decor.



SmartTouch

WideScreen

4:3 wide

Built-in Audio

SmartControl Lite

# Specifications

## Picture/Display

- Panel Size: 21.5 inch / 54.6 cm
- Aspect ratio: 16:9
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.248 x 0.248 mm
- Optimum resolution: 1920 x 1080 @ 60Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16.7 M
- SmartContrast: 20,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 176° (H) / 170° (V), @ C/R &gt; 5
- Picture enhancement: SmartImage Lite
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

## Connectivity

- Signal Input: VGA (Analog ), DVI-D (digital, HDCP), HDMI
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Stereo Audio, PC audio-in, Earphone out (3.5 mm jack)x 1

## Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, Windows 7 / Vista, sRGB
- Built-in Audio: 1.5Wx2
- User convenience: SmartImage lite, Input, Volume, Menu, Power On/Off
- OSD Languages: English, French, German, Italian, Russian, Simplified Chinese, Spanish, Portuguese, Turkish
- Other convenience: VESA mount (100x100mm), Kensington lock

## Stand

- Tilt: -5/+20 degree

## Power

- Power supply: Built-in, 100-240VAC, 50/60Hz
- Off mode: &lt; 0.5 W
- On mode: 17 W (EnergyStar 5.0 test method)
- Standby mode: &lt;0.5W
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Product with stand (mm): 505 x 484 x 249 mm
- Packaging in mm (WxHxD): 565 x 465 x 155 mm
- Product without stand (mm): 505 x 351 x 59 mm

## Weight

- Product with packaging (kg): 6.00 kg
- Product with stand (kg): 4.15 kg
- Product without stand (kg): 3.65 kg

## Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: RoHS, EPEAT Silver, EnergyStar 5.0
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC, Class B, GOST, UL/cUL

## Cabinet

- Color: Black/Black
- Finish: Glossy



Issue date 2024-03-14

Version: 1.0.2

EAN: 87 12581 56044 7

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)