

Philips Signage Solutions
Interactive whiteboard

75"

Powered by Android
Multi-touch

SignageSolutions



75BDL3552T

Interactive classroom display

Featuring multi-touch technology

Maximise engagement and inspire collaboration with an interactive Philips T-Line display. Featuring an anti-glare toughened glass, these Android powered displays are made to withstand heavy daily usage and feature up to 20 touchpoints

Interactive and collaborative

- Advanced IR touch with smaller, shallower bezels
- Operate, monitor and maintain with CMND & Control
- Multi-touch technology capable of 20 touchpoints


Smart and powerful

- Anti-glare toughened glass
- OPS slot allows for PC embedding without cabling
- Android SoC processor. Native and web apps
- Whiteboard mode built-in
- Wireless screen sharing & advanced collaboration

PHILIPS


Highlights

OPS slot



Integrate a full-power PC or Android-powered CRD50 module directly into your Philips Professional Display. The OPS slot contains all the connections you need to run your slot-in solution, including a power supply.

CMND & Control



Run your display network over a local (LAN) connection. CMND & Control allows you to perform vital functions like controlling inputs and monitoring display status. Whether you're in charge of one screen or 100.

Multi-touch technology

Create a memorable interactive experience with up to 20 touchpoints at the same time. Perfect for collaborative and competitive applications, this display connects your audience with any content - making it ideal for education, public venues, corporate, hospitality, and retail settings. The touch panel is HID compliant, providing true plug-and-play operation.

Powered by Android

Control your display via an Internet connection. Android-powered Philips Professional Displays are optimized for native Android apps, and you can install web apps directly to the display too. A new Android OS ensures the software is kept secure and remain to the latest specification for longer.

Whiteboard mode built-in

Inspire agile collaboration with whiteboard mode. Simply activate this feature to turn your display into a blank canvas that can be drawn on by multiple users by hand or with dedicated display markers. Everything on screen can then be captured for easy printing or file sharing.

Wireless screen sharing

Display four feeds on the one screen. Wireless screen sharing allows you to connect multiple devices at the same time for quick content switching when you need it. Use your existing Wi-Fi network to instantly and securely connect devices, or use our optional HDMI interact dongles to cast directly to the screen without needing to connect to your secured/protected network.

Specifications

Picture/Display

- Diagonal screen size: 74.5 inch / 189.3 cm
- Panel resolution: 3840 x 2160
- Optimum resolution: 3840 x 2160 @ 60Hz
- Brightness: 420 cd/m²
- Contrast ratio (typical): 1200:1
- Dynamic contrast ratio: 500,000:1
- Surface treatment: Anti-Glare coating
- Aspect ratio: 16:9
- Response time (typical): 9 ms
- Pixel pitch: 0.4296 x 0.4296 mm
- Display colors: 1.07Billion
- Viewing angle (H / V): 178 / 178 degree
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Motion compens. deinterlacing, Progressive scan, 3D MA deinterlacing, Dynamic contrast enhancement
- Panel technology: IPS
- Operating system: Android 9

Interactivity

- Multi-touch technology: Advanced infrared touch
- Touch points: 20 simultaneous touch points
- Plug and play: HID compliant
- Protection glass: Anti-Glare, Tempered safety glass

Connectivity

- Video input: Display Port1.2 (x1), DVI-I (x 1), HDMI 2.0 (x4), USB 2.0 (x2), USB 3.0 (x2), USB-C
- Video output: DisplayPort 1.2 (x1), DVI - D (x1), HDMI 2.0 (x1), USB 2.0 (x2)
- Audio input: 3.5mm Jack (x1)
- Audio output: 3.5mm Jack (x2)
- Other connections: micro SD, OPS
- External control: IR (in/out) 3.5 mm jack, RJ45, RS232C (in/out) 2.5 mm jack

Supported Display Resolution

• Computer formats

Resolution	Refresh rate
1360 x 768	60Hz
1600 x 1200	60Hz
1920 x 1080	60Hz
1024x768	60,70Hz
1152 x 864	60, 70, 75Hz
1152 x 900	66Hz
1280 x 720	60,70Hz
1280 x 768	60Hz, 75Hz
1280 x 800	60,75Hz

1280 x 960	60Hz
1280x1024	60,67,75Hz
1366 x 768	60Hz
1400 x 1050	60, 75Hz
1440 x 1050	60Hz
1440 x 900	60, 75Hz
1600 x 900	60Hz
1680 x 1050	60Hz
1920 x 1200	60Hz
3840 x 2160	24,25,30,60Hz
640 x 350	70Hz
640 x 480	60, 67, 72, 75Hz
800 x 600	56, 60, 72, 75Hz
832 x 624	75Hz
848 x 480	60Hz
960x720	75Hz

• Video formats

Resolution	Refresh rate
1080p	50, 60Hz
720p	50, 60Hz
1080i	50, 60Hz
480p	60Hz
4K x 2K	
576p	50Hz
720p	60Hz

Convenience

- Placement: Landscape (18/7)
- Signal loop through: IR Loophrough, DisplayPort, RS232
- Network controllable: RS232, RJ45
- Picture performance: Advanced color control
- Screen saving functions: Pixel Shift, Low Brightness
- Keyboard control: Hidden, Lockable
- Remote control signal: Lockable
- Energy saving functions: Smart Power
- Other convenience: Carrying handles
- Ease of installation: Smart Insert

Dimensions

- Bezel width: 16.30 mm(even)
- Set dimensions (W x H x D): 1715.50 x 993.70 x 80.8mm(D@wall mount) / 108.7(D@speaker cover) mm
- Set dimensions in inch (W x H x D): 67.54 x 39.12 x 3.18(D@wall mount) /4.28 (D@speaker cover) inch
- Wall Mount: 600(H)x400(V) mm, M8
- Product weight: 53.0 kg

- Product weight (lb): 116.85 lb
- Smart Insert mount: 100mm x 100mm, 6xM4L6

Sound

- Built-in speakers: 2 x 20W RMS

Operating conditions

- Temperature range (operation): 0 ~ 40 °C
- Relative humidity: 20 ~ 80%(Operational),5 - 95%(Storage) %
- MTBF: 30,000 hour(s)
- Altitude: 0 ~ 3000 m
- Temperature range (storage): -20 ~ 60 °C

Power

- Mains power: 100 ~ 240 VAC, 50/60Hz
- Standby power consumption: <0.5W
- Consumption (Typical): 190 W
- Power Saving Features: Smart Power
- Consumption (Max): 380 W

Accessories

- Included accessories: AC Power Cord, RS232 cable, Remote Control, Batteries for remote control, Quick start guide, HDMI cable, IR sensor cable (1.8M)
- Included Accessories: Cleaning cloth (x1), DVI-D cable (1.8m), M2 Screw (x2), M3 screw (x2), Philips logo (x1), RS232 daisy-chain cable, Touch Pen (x2), Touch USB (x1), USB Cover (x1)
- Optional accessories: Cast to dongle

Miscellaneous

- On-Screen Display Languages: Arabic, English, French, German, Italian, Japanese, Polish, Spanish, Turkish, Russian, Simplified Chinese, Traditional Chinese, Portuguese, Danish, Dutch, Finnish, Norwegian, Swedish
- Regulatory approvals: CE, BSMI, CB, EAC, EMF, ETL, FCC, Class A, PSB, RoHS
- Warranty: 3 year warranty


Multimedia Applications

- USB Playback Audio: AAC, M4A, MP3, WMA
- USB Playback Picture: BMP, JPEG, JPG, PNG
- USB Playback Video: ASF, AVI, DAT, FLV, MKV, MP4, MPG, TS, VOB, MPEG, WEBM, WMV

Internal Player

- CPU: MTK5680
- GPU: DDR4 4GB
- Memory: 4GB RAM
- Storage: 32 GB eMMC
- Wifi: AP(WC0SR2511-88112BU), STA(WCT5GM2511MT7668AU)

PHILIPS 75BDL3552T
Version: 2.0.1
Release Date: 20/01/2020

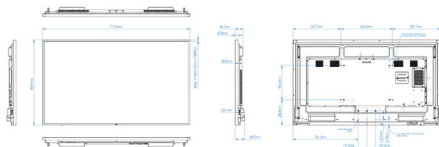

Issue date 2022-07-14

Version: 2.0.1

12 NC: 8670 001 66459
EAN: 87 12581 76598 9

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com