



Philips Brilliance
LCD monitor with Audio

48 cm (19") B-line
Format 5:4

Brilliance

19B1AB

Feature packed display for increased productivity

With features like Front Stereo Audio, SmartImage, SmartContrast, SmartControl and TrueVision, the energy efficient 19B1 business display enhances your productivity

Sustainable Eco-friendly solution

- Energy Star for energy efficiency and low power consumption
- Eco-friendly materials that meets international standards
- EPEAT Silver ensures lower impact on environment

Outstanding display performance

- SmartImage: Optimized user-friendly display experience
- SmartContrast: For incredible rich black details
- TrueVision: Laboratory quality display performance

Great convenience

- Built in stereo audio for multimedia experience
- Dual input accepts both analog VGA and digital DVI signals
- Screen tilts to your ideal, individualized viewing angle
- Hassle-free display performance tuning with SmartControl II
- Cable management reduces cable clutter for neat workspace

PHILIPS

Highlights

Built-in stereo audio

A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

Dual input



VGA connector




DVI connector

Dual input provides connectors to accommodate input of both analog VGA and digital DVI signals.

Adjustable tilt

Adjustable tilt is backward and forward movement of a screen on its base to achieve custom positioning for an ideal viewing angle and more comfort for people who spend long hours working on the computer.

SmartImage

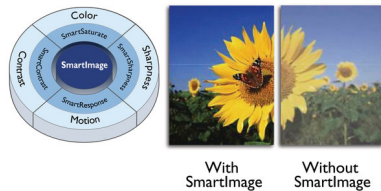

SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Image, Entertainment, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

SmartControl II

SmartControl II is monitor-based software with an easy-to-use on-screen graphic interface that guides you through fine-tuning resolution, color calibration and other display settings including brightness, contrast, clock & phase, position, RGB, white point and - on models with onboard speakers - volume adjustments.

TrueVision




TrueVision On



TrueVision Off

TrueVision is industry-leading, proprietary Philips testing and algorithm technology for monitor adjustment and fine tuning, an extensive process that ensures ultimate display performance in compliance with a standard four-times more stringent than Microsoft's Vista requirements from each and every monitor that leaves the factory - not just a few review samples. Only Philips goes to these lengths to deliver this exacting level of color accuracy and display quality in every new monitor.

Cable management

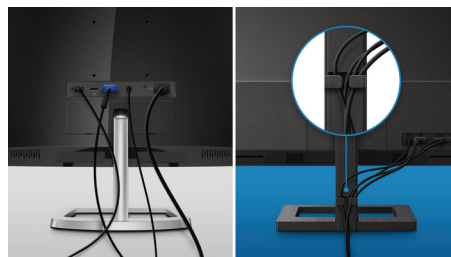

Cable management is an intimate design that maintains tidy workspace by organizing cables and wires required for the operation of a display device.

EPEAT Silver

Philips EPEAT Silver certified monitors ensure protection for human health and environment,

and are highly energy efficient ensuring low emissions of climate changing green house gases. EPEAT program helps purchasers evaluate, compare and select Monitors based on 51 environmental criteria supported by US EPA. EPEAT Silver is valid only where Philips registers the product. Please visit www.epeat.net for registration status in your country.

Eco-friendly materials

"Philips is committed to use sustainable, eco-friendly materials across its monitor range. All body plastic parts, metal chassis parts and packing materials use 100% recyclable materials. In some selected models we utilize upto 65% post consumer recycled plastics. Strict adherence to RoHS standards ensure substantial reduction or elimination of toxic substances like Lead, for example. Mercury content in monitors with CCFL backlight has been reduced significantly, while eliminated in monitors with LED backlight completely. Visit Philips @ <http://www.asimpleswitch.com/global/> to learn more.

Energy Star 5.0

Energy Star is a US EPA sponsored energy efficiency program also adopted by many other countries. Energy Star certification ensures that you are buying a product which meets the latest power efficiency standards which operates with maximum power efficiency at all operational levels. New Philips monitors are certified for Energy Star 5.0 specifications and meet or exceed the standard. For example, in sleep mode Energy Star 5.0 requires less than 1watt power consumption, whereas Philips monitors consume less than 0.5watts. Further details can be obtained from www.energystar.gov



Built-in Audio



SmartImage™



TrueVision



Dual Input



TCO 03
DISPLAYS
www.tco03development.com



Lead Free



ENERGY STAR



EPEAT SILVER

Specifications

Picture/Display

- LCD panel type: TFT-LCD
- Aspect ratio: 5:4
- Panel Size: 19 inch / 48 cm
- Viewing angle: 176° (H) / 170° (V), @ C/R > 5
- Pixel pitch: 0.294 x 0.294 mm
- Picture enhancement: SmartImage
- Brightness: 250 cd/m²
- SmartContrast: 25000:1
- Response time (typical): 5 ms
- Optimum resolution: 1280 x 1024 @ 60 Hz
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Stereo Audio

Convenience

- Built-in Audio: 1Wx2
- User convenience: SmartImage, Audio, Brightness, Menu, Auto, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese
- Other convenience: VESA mount (100x100mm), Kensington lock
- Plug & Play Compatibility: DDC/CI, Mac OS X, Windows 7/Vista/XP/2000/98, sRGB

Stand

- Tilt: -5/20 degree

Power

- ECO mode: <16.5W

- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50/60Hz
- On mode: <18.2W (EnergyStar 5.0 test method)
- Standby mode: <0.8 W
- Off mode: < 0.5 W

Dimensions

- Product with stand (mm): 418 x 404 x 186 mm
- Product without stand (mm): 350 x 404 x 68 mm
- Packaging in mm (WxHxD): 465 x 451 x 151 mm

Weight

- Product with stand (kg): 3.85 kg
- Product without stand (kg): 3.47 kg
- Product with packaging (kg): 5.50 kg

Operating conditions

- Temperature range (operation): 0 to 40 °C
- Temperature range (storage): -20 to 60 °C
- Relative humidity: 20%-80 %
- MTBF: 50,000 hour(s)

Sustainability

- Environmental and energy: EPEAT Silver, RoHS, EnergyStar 5.0
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC, Class B, GOST, SEMKO, TCO '03, TUV Ergo, TUV/GS, UL/cUL

Cabinet

- Color: Black
- Finish: Texture



Issue date 2022-05-17

Version: 1.0.2

12 NC: 8670 000 64377
EAN: 87 12581 55120 9

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com