



Philips
Full HD LCD monitor

V Line

27" (68.6 cm)
1920 x 1080 (Full HD)

273V7QJAB

Vivid, crisp images, from edge-to-edge

A perfect all around display with stunning images that stretch from edge-to edge, made easy on the eyes, in a compact slim design.

Perfectly designed for your space

- VESA mount allows for flexibility

Easy on the eyes

- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity

Experience true multimedia

- Built-in speakers for audio without desktop clutter
- SmartConnect with DisplayPort, HDMI and VGA connections

Vivid pictures every time

- SmartContrast for rich black details
- IPS LED wide view technology for image and color accuracy
- 16:9 Full HD display for crisp detailed images
- SmartImage presets for easy optimized image settings
- Narrow border display for a seamless appearance


PHILIPS

Full HD LCD monitor
V Line 27" (68.6 cm), 1920 x 1080 (Full HD)

273V7QJAB/27

Highlights

IPS technology

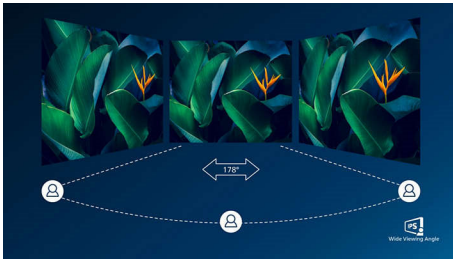


IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

UltraNarrow Border

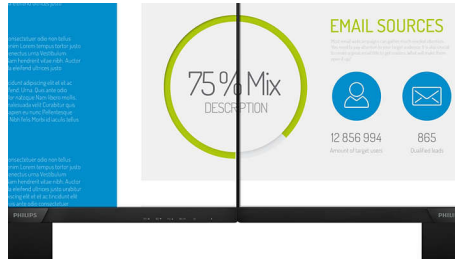

The new Philips displays feature ultra-narrow borders which allow for minimal distractions and maximum viewing size. Especially suited for multi-display or tiling setup like gaming, graphic design and professional applications, the ultra-narrow border display gives you the feeling of using one large display.

SmartContrast



SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

SmartImage



SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.



Specifications

Connectivity

- Signal Input: VGA (Analog), HDMI (digital, HDCP), DisplayPort 1.2
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

Picture/Display

- Panel Size: 27 inch / 68.6 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.311 x 0.311 mm
- Brightness: 250 cd/m²
- Display colors: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 10,000,000:1
- Response time (typical): 4 ms (GtG)*
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Maximum resolution: 1920 x 1080 @ 75 Hz*
- Effective viewing area: 597.89 (H) x 336.31 (V)
- Scanning Frequency: 30 -83 kHz (H) / 56 -76 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 82 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%

Convenience

- Built-in Speakers: 2W x 2
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu/OK, Volume/Up, Input/Down, SmartImage/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)

Stand

- Tilt: -5/20 degree

Power

- Power supply: Built-in, 100-240VAC, 50-60Hz
- Off mode: 0.3 W (typ.)
- On mode: 15.40 W (typ.) (EnergyStar test method)

- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

- Product with stand (mm): 613 x 454 x 227 mm
- Product with stand in inch: 24.1 x 17.9 x 8.9 inch
- Packaging in mm (WxHxD): 664 x 452 x 134 mm
- Product without stand (mm): 613 x 368 x 45 mm
- Packaging in inch (WxHxD): 26.1 x 17.8 x 5.28 inch
- Product without stand in inch: 24.1 x 14.5 x 1.8 inch

Weight

- Product with packaging (kg): 6.19 kg
- Product with stand (kg): 4.37 kg
- Product with packaging (lb): 13.62 lb
- Product with stand (lb): 9.61 lb
- Product without stand (kg): 3.80 kg
- Product without stand (lb): 8.36 lb

Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 50,000 (Excluded backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: RoHS, Mercury Free, WEEE
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: CU, SEMKO, cETLus, TUV/ISO9241-307, CE Mark, FCC Class B, ICES-003, RCM, UKRAINIAN, KCC, BSMI, TUV Cert. - blue light cut-off

Cabinet

- Color: Black
- Finish: Textured

What's in the box?

- Cables: D-Sub cable, HDMI cable, Audio cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-06-07

Version: 8.0.2

UPC: 6 09585 25260 8

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* "IPS" word mark / trademark and related patents on technologies
belong to their respective owners.

* The maximum resolution works for either HDMI input or DP input.

* Response time value equal to SmartResponse