



LCD monitor with Ultra Wide-Color

- E Line
- 27" (68.6 cm)
- 1920 x 1080 (Full HD)

276E7QDSB/89

Vivid, true-to-life colors

in an elegant design

This brilliant wide view display with Ultra Wide-Color offers true-to-life colors wrapped in an elegance-inspired design for a light and fresh face in any home or office.

Benefits

Superb Picture Quality

- Ultra Wide-Color wider range of colors for a vivid picture
- IPS LED wide view technology for image and color accuracy
- 16:9 Full HD display for crisp detailed images
- Less eye fatigue with Flicker-free technology
- SmartContrast for deep black level details
- SmartImage Lite for easy optimized image settings
- LowBlue Mode for easy on-the-eyes productivity

Elegant Design

- EasySelect menu toggle key for quick on-screen menu access
- Elegant, slim design complements your home decor
- Superb glossy finish enhance your home decoration

Experience immersive multimedia

- MHL technology for enjoying mobile content on big screen

PHILIPS

Features

Ultra Wide-Color Technology



Ultra Wide-Color Technology delivers a wider spectrum of colors for a more brilliant picture. Ultra Wide-Color wider "color gamut" produces more natural-looking greens, vivid reds and deeper blues. Bring media entertainment, images, and even productivity more alive and vivid colors from Ultra Wide-Color Technology.

IPS technology



IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

SmartContrast




SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

SmartImage Lite

SmartImage Lite is an exclusive, leading edge Philips technology that analyzes the content displayed on your screen. Based on a scenario you select, SmartImage Lite dynamically enhances the contrast, color saturation and sharpness of images and videos for ultimate display performance - all in real time with the press on a single button.

LowBlue Mode

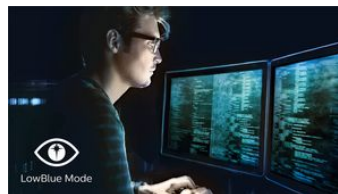

Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

EasySelect Menu Toggle Key



The discreetly placed EasySelect Menu Toggle Key allows you to make quick and easy adjustments to monitor settings in the On-Screen Display menu.

MHL technology



Mobile High Definition Link (MHL) is a mobile audio/video interface for directly connecting mobile phones and other portable devices to high-definition displays. An optional MHL cable allows you to simply connect your MHL capable mobile device to this large Philips MHL display, and watch your HD videos come to life with full digital sound. Now not only you can enjoy your mobile games, photos, movies, or other apps on its big screen, you can simultaneously charge your mobile device so you never run out of power half way.

Specifications

[field not found 'disclaimer_text']

Picture/Display

| | |
|--------------------------|-----------------------------------|
| LCD panel type | IPS technology |
| Backlight type | W-LED system |
| Panel Size | 27 inch / 68.6 cm |
| Effective viewing area | 597.9 (H) x 336.3 (V) |
| Aspect ratio | 16:9 |
| Optimum resolution | 1920 x 1080 @ 60Hz |
| Response time (typical) | 5 ms (Gray to Gray)* |
| Brightness | 250 cd/m ² |
| Contrast ratio (typical) | 1000:1 |
| SmartContrast | 20,000,000:1 |
| Pixel pitch | 0.311 x 0.311 mm |
| Viewing angle | 178° (H) / 178° (V) @ C/R > 10 |
| Flicker-free | Yes |
| Picture enhancement | SmartImage Lite |
| Color gamut (typical) | NTSC 104.4% (CIE1976)* |
| Display colors | 16.7 M |
| Scanning Frequency | 30 -83 kHz (H) / 56 -76 Hz (V) |
| MHL | 1080P @ 30Hz |
| sRGB | Yes |
| LowBlue Mode | Yes |

Connectivity

| | |
|----------------|--|
| Signal Input | VGA (Analog) DVI-D (digital, HDCP) MHL-HDMI (digital, HDCP) |
| Sync Input | Separate Sync Sync on Green |
| Audio (In/Out) | HDMI audio out |

Convenience

| | |
|---------------------------|---|
| User convenience | Power On/Off Menu Volume (HDMI Audio out) Input SmartImage lite |
| OSD Languages | Brazil Portuguese Czech Dutch English Finnish French German Greek Hungarian Italian Japanese Korean Polish Portuguese Russian Simplified Chinese Spanish Swedish Traditional Chinese Turkish Ukranian |
| Other convenience | Kensington lock VESA mount (100x100mm) |
| Plug & Play Compatibility | DDC/CI Mac OS X sRGB Windows 10 / 8.1 / 8 / 7 |

Stand

| | |
|------|--------------|
| Tilt | -5/20 degree |
|------|--------------|

Power

| | |
|---------------------|---|
| On mode | 17.03 W (typ.) (EnergyStar 7.0 test method) |
| Standby mode | 0.5 W (typ.) |
| Off mode | 0.3 W (typ.) |
| Power LED indicator | Operation - White Standby mode- White (blinking) |
| Power supply | External 100-240VAC, 50-60Hz |

Dimensions

| | |
|----------------------------|--------------------|
| Product with stand (mm) | 616 x 468 x 179 mm |
| Product without stand (mm) | 616 x 370 x 52 mm |
| Packaging in mm (WxHxD) | 676 x 544 x 113 mm |

Weight

| | |
|-----------------------------|---------|
| Product with stand (kg) | 4.33 kg |
| Product without stand (kg) | 4.08 kg |
| Product with packaging (kg) | 6.81 kg |

Operating conditions

| | |
|-------------------------------|---|
| Temperature range (operation) | 0°C to 40°C °C |
| Temperature range (storage) | -20°C to 60°C °C |
| Relative humidity | 20%-80 % |
| Altitude | Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m) |
| MTBF | 50,000 (excluding backlight) hour(s) |

Sustainability

| | |
|-------------------------------|--|
| Environmental and energy | EnergyStar 7.0 RoHS Mercury Free |
| Recyclable packaging material | 100 % |

Compliance and standards

| | |
|----------------------|---|
| Regulatory Approvals | CE Mark FCC Class B CU-EAC TCO Certified TUV/ISO9241-307 VCCI RCM WEEE CECP MEPS |
|----------------------|---|

Cabinet

| | |
|--------------|--------------|
| Color Finish | Black Glossy |
|--------------|--------------|

- * This Philips display is MHL certified. However, in case your MHL device does not connect or work correctly, check with your MHL device FAQ or vendor directly for direction. The policy of your device manufacturer may require you to purchase their brand specific MHL cable or adapter in order to work
- * Requires optional MHL certified mobile device and MHL cable. (not included) Please check with your MHL device vendor for compatibility.
- * Standby/Off energy saving of ErP is not applicable for the MHL charging functionality
- * For complete list of MHL-enabled products refer to www.mhlconsortium.org
- * HDMI cables vary depending on region and models.
- * Response time value equal to SmartResponse
- * NTSC 85% (CIE1931), sRGB: 122.9%
- * "IPS" word mark / trademark and related patents on technologies belong to their respective owners.



data subject to change
2021, May 19

Version: 3.0.1
EAN: 8712581747732

© 2021 Koninklijke Philips N.V.
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com