



Philips
Professional LCD TV

81 cm (32")

LCD
Pro:Idiom™ with MPEG-4

32HF7965D

The ultimate Hospitality HD LCD TV

with SmartCard, Pro:Idiom™ & MPEG4

Top performance for guests and bottom line savings for you. SmartPower saves energy cost and Five Star Service keeps rooms saleable. SmartCard integrates with PPV providers today and IPTV tomorrow. MPEG4 for the latest HD content options.

Best total cost of ownership

- Wireless SmartLoader for fast cloning
- SmartPower for energy saving
- Five Star Service - two-year advanced exchange warranty

Integrated system solution and future proof

- Compatible with all major PPV systems
- Integrated SmartCard Slot for PPV & IPTV
- MPEG-4 for the latest HD signals
- HD content protection with Pro:Idiom™ Plus
- New embedded prepaid solutions

Sustainable and safe

- Eco-friendly Design
- Flame retardant housing

Great viewing experience and guest comfort

- HDTV for Hospitality

PHILIPS

Highlights

Integrated SmartCard Slot

Allows third party decoders and application cards to interface with the TV, adding functionality to the set without the need for external boxes or cables. In addition, IPTV functionality can be added to this TV by simply slotting in a new card!

Pro:Idiom™ Plus

Pro:Idiom™ was created for the hospitality industry to protect first run movies and other HD premium content from piracy. Philips Pro:Idiom™ Plus televisions offer secure HD content protection not only for PPV hotels, but now also for stand alone properties. (Additional fees may apply for stand alone use) (Pro:Idiom™ is a trademark of the Zenith Corp.)

PPV system compatible

Philips Hospitality sets are designed to be compatible with all major Pay Per View systems, including, but not limited to, LodgeNet, OnCommand, NxTV, GuesTek, nStreams, Hospitality Network, and KoolConnect. This guarantees seamless integration in almost any system configuration.

MPEG-4 for HD

MPEG-4 (Moving Picture Experts Group H.264) compression technology allows more HD content to be delivered than ever before. Satellite providers are already using MPEG-4 to offer the choice of up to 150 national HD channels and 1,500 local broadcast HD and

digital channels. Cable, broadcast, and telecommunications providers are expected to also migrate to the format, but with these Philips TVs you are ready today!


New embedded prepaid solutions

Philips Hospitality sets now support SmoovieTV™, a completely new way to offer in room programming optimized for hotels that traditionally have not been able to charge for such amenities due to their size or budget. Simple to use, SmoovieTV™ requires no expensive head end equipment or in-room control boxes.

Five Star Service

Philips offers unmatched commitment to keeping your guest rooms in working order. Our products are so reliable that we offer a two-year advanced exchange warranty. In the event that something does go wrong, we guarantee to ship a replacement set to you, within 72 hours during the first year.

SmartPower

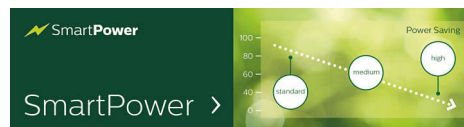

The backlight intensity can be controlled and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs.

Wireless SmartLoader

Provides the ability to copy easy and wireless all programming settings from one TV set into other TV sets in less than a minute. The feature ensures uniformity between TV sets and significantly reduces installation time and costs.

HDTV for Hospitality

There are many ways you may choose to offer HDTV to your guests, but regardless of the source, Philips Hospitality televisions will always deliver the best viewing experience possible to your guests by utilizing the most advanced FlatTV displays and award winning technologies such as Pixel Plus 3 HD.

Eco-friendly Design

Philips TVs are designed and produced according to our EcoDesign principles aimed at minimizing overall environmental impact, through lower power consumption, removal of hazardous substances, lower weight, more efficient packaging and better recyclability.

Flame retardant housing

Philips TVs have a special housing of flame retardant material. Independent tests carried out by emergency fire services have shown that whereas TVs can sometimes intensify fires caused by external sources, Philips TVs will not contribute to the fire.

Specifications

Picture/Display

- Aspect ratio: 16:9, Widescreen
- Diagonal screen size (inch): 32 inch
- Diagonal screen size (metric): 80 cm
- Color cabinet: Black
- Panel resolution: 1366 x 768p
- Brightness: 500 cd/m²
- Picture enhancement: Progressive scan, 3/2 - 2/2 motion pull down, Active Control, 3D Combfilter, Dynamic contrast enhancement, Contrast Plus, Digital Noise Reduction, Jagged Line Suppression, Luminance Transient Improver, Color Transient Improvement, Pixel Plus HD
- Contrast ratio (typical): 1500:1
- Display screen type: LCD WXGA Active Matrix TFT
- Dynamic screen contrast: 7500:1
- Response time (typical): 8 ms
- Viewing angle (horizontal): 178 degree
- Viewing angle (vertical): 178 degree
- Screen enhancement: Anti-Reflection coated screen

Supported Display Resolution

- Computer formats: 1024 x 768, 60, 70, 75, 85Hz, 800 x 600, 60, 72, 75, 85Hz, 640 x 480, 60, 72, 75, 85Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 720p, 60Hz, 1080i, 60Hz

Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: NTSC, ATSC
- Cable: Unscrambled Digital Cable QAM
- Number of Preset Channels: 125
- Video Playback: NTSC, PAL
- Terrestrial: ATSC (8VSB)

Convenience

- Ease of Installation: Fine Tuning, PLL Digital Tuning, Wireless Smart Loading, Program Name, Advanced Hotel Mode
- Ease of Use: Auto Volume Leveller (AVL), Smart Picture, Smart Sound
- Comfort: Hotel Guest features, Sleep timer
- Screen Format Adjustments: 4:3, 7 Widescreen Modes
- Other convenience: Kensington lock

Sound

- Output power (RMS): 2 x 10W
- Sound System: Stereo, Dolby Digital (AC-3)
- Sound Enhancement: Auto Volume Leveler, Incredible Surround

Loudspeakers

- Built-in speakers: 2

Connectivity

- AV 1: Audio L/R in, CVBS in, S-Video Y/C
- Connectivity Enhancements: SmartCard Expansion Slot, RJ12 connector, RJ45 connector, HM-Link, Extra Power supply 12V/1W, External Loudspeaker connector
- AV 2: Audio L/R in, YPbPr
- Audio Output - Digital: Coaxial (cinch)
- AV 3: HDMI
- Other connections: Antenna F-type, PC-In VGA

Power

- Mains power: 110 - 240V, 50/60Hz
- Ambient temperature: 5 °C to 40 °C
- Power consumption: 150 W

Accessories

- Included accessories: Power cord, Warranty Leaflet, Quick start guide, User Manual, Tabletop swivel stand
- Optional accessories: Set up Remote RC2573GR, Mounting brackets/ stands, Wireless SmartLoader 22AV1135

Dimensions

- Wall mount compatible: 200 x 100 mm
- Set Width (inch): 31.7 inch
- Set Height (inch): 21.5 inch
- Set Depth (inch): 4.4 inch
- Product weight (lb): 38.5 (with stand), 32.1 (without stand) lb
- Set width (with stand) (inch): 31.7 inch
- Set depth (with stand) (inch): 10.4 inch
- Set height (with stand) (inch): 24 inch
- Box depth (inch): 13.6 inch
- Weight incl. Packaging (lb): 51.8
- Box height (inch): 24.8 inch
- Box width (inch): 34.2 inch



Issue date 2023-10-19

Version: 1.1.4

UPC: 6 09585 14305 0

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com