



Philips Brilliance
LCD monitor with
SmartImage

- 61 cm (24") w S-line
- Format 16:10

Brilliance

240S1SB

Big, Feature packed display for high productivity

With features like SmartImage, SmartContrast, SmartControl and TrueVision, the 240S1 business display enhances your productivity

Sustainable Eco-friendly solution

- Energy Star for energy efficiency and low power consumption
- Eco-friendly materials that meets international standards
- EPEAT Silver ensures lower impact on environment

Outstanding display performance

- SmartImage: Optimized user friendly display experience
- SmartContrast: For incredible rich black details
- TrueVision: Laboratory quality display performance

Great convenience

- Dual input accepts both analog VGA and digital DVI signals
- Screen tilts to your ideal, individualized viewing angle
- Hassle-free display performance tuning with SmartControl II
- Cable management for a tidy work space

PHILIPS

Highlights

Dual input




VGA connector



DVI connector

Dual input provides connectors to accommodate input of both analog VGA and digital DVI signals.

SmartImage

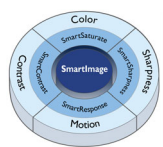

With SmartImage

Without SmartImage

SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Image, Entertainment, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

SmartControl II

SmartControl II is monitor-based software with an easy-to-use on-screen graphic interface that guides you through fine-tuning resolution, color calibration and other display

settings including brightness, contrast, clock & phase, position, RGB, white point and - on models with onboard speakers - volume adjustments.

TrueVision



TrueVision On



TrueVision Off

TrueVision is industry-leading, proprietary Philips testing and algorithm technology for monitor adjustment and fine tuning, an extensive process that ensures ultimate display performance in compliance with a standard four-times more stringent than Microsoft's Vista requirements from each and every monitor that leaves the factory - not just a few review samples. Only Philips goes to these lengths to deliver this exacting level of color accuracy and display quality in every new monitor.

Adjustable tilt

Adjustable tilt is backward and forward movement of a screen on its base to achieve custom positioning for an ideal viewing angle and more comfort for people who spend long hours working on the computer.

Cable management

Cable management is a system that maintains tidy workspace by organizing cables and wires required for the operation of a display device.

EPEAT Silver

Philips EPEAT Silver certified monitors ensure protection for human health and environment,

and are highly energy efficient ensuring low emissions of climate changing green house gases. EPEAT program helps purchasers evaluate, compare and select Monitors based on 51 environmental criteria supported by US EPA. EPEAT Silver is valid only where Philips registers the product. Please visit www.epeat.net for registration status in your country.

Eco-friendly materials

"Philips is committed to use sustainable, eco-friendly materials across its monitor range. All body plastic parts, metal chassis parts and packing materials use 100% recyclable materials. In some selected models we utilize upto 65% post consumer recycled plastics. Strict adherence to RoHS standards ensure substantial reduction or elimination of toxic substances like Lead, for example. Mercury content in monitors with CCFL backlight has been reduced significantly, while eliminated in monitors with LED backlight completely. Visit Philips @ <http://www.asimpleswitch.com/global/> to learn more.

Energy Star 5.0

Energy Star is a US EPA sponsored energy efficiency program also adopted by many other countries. Energy Star certification ensures that you are buying a product which meets the latest power efficiency standards which operates with maximum power efficiency at all operational levels. New Philips monitors are certified for Energy Star 5.0 specifications and meet or exceed the standard. For example, in sleep mode Energy Star 5.0 requires less than 1watt power consumption, whereas Philips monitors consume less than 0.5watts. Further details can be obtained from www.energystar.gov



Specifications

Picture/Display

- LCD panel type: TFT-LCD
- Panel Size: 24 inch / 61.1 cm
- Aspect ratio: 16:10
- Viewing angle: 178° (H) / 178° (V), @ C/R > 5
- Pixel pitch: 0.270 x 0.270 mm
- Picture enhancement: SmartImage
- Brightness: 300 cd/m²
- SmartContrast: 25000:1
- Response time (typical): 5 ms
- Optimum resolution: 1920 x 1200 @ 60Hz
- Display colors: 16.7 M
- Scanning Frequency: 24 - 94 kHz (H) / 48 - 85 Hz (V)
- sRGB

Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

Convenience

- User convenience: SmartImage, Brightness, Menu, Input, Auto, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese
- Other convenience: VESA mount (100x100mm), Kensington lock
- Plug & Play Compatibility: DDC/CI, Mac OS X, Windows 7/Vista/XP/2000/98, sRGB

Stand

- Tilt: -5/20 degree

Power

- ECO mode: <30.7W
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50/60Hz
- On mode: <34.8W (EnergyStar 5.0 test method)

- Standby mode: <0.8W
- Off mode: < 0.5 W

Dimensions

- Product with stand (mm): 469 x 559 x 220 mm
- Product with stand in inch: 18.3 x 21.8 x 8.6 inch
- Product without stand (mm): 381 x 559 x 75 mm
- Product without stand in inch: 14.9 x 21.8 x 2.9 inch
- Packaging in mm (WxHxD): 546 x 638 x 188 mm
- Packaging in inch (WxHxD): 21.3 x 24.9 x 7.3 inch

Weight

- Product with stand (kg): 5.8 kg
- Product with stand (lb): 12.8 lb
- Product without stand (kg): 5.4 kg
- Product with packaging (kg): 7.8 kg
- Product with packaging (lb): 17.2 lb

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- MTBF: 50,000 hour(s)

Sustainability

- Environmental and energy: EPEAT Silver, RoHS, EnergyStar 5.0
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC, Class B, GOST, SEMKO, TCO 5.0, TUV/GS, TUV Ergo, UL/cUL

Cabinet

- Color: Black
- Finish: Texture



Issue date 2013-06-06

Version: 4.0.4

12 NC: 8670 000 54056
UPC: 6 09585 17418 4

© 2013 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com