



Philips Evnia Gaming
Monitor
4K HDR display with
Ambiglow

Designed for Xbox

Evnia 7000
32 (31.5" / 80 cm diag.)
3840 x 2160 (4K UHD)



329M1RV

Optimized performance for next-gen console gaming

For true console gaming enthusiasts, the Designed for Xbox display delivers a new era of gaming. UltraClear 4K UHD with DisplayHDR 400 offers ultra-crisp and vibrant image quality to get you in the moment.

Designed for Xbox

- Designed for Xbox for the optimal gaming experience
- AMD FreeSync™ Premium; tear free, stutter free, fluid gaming
- SmartImage HDR gives optimal viewing from your HDR content

Design to enhance the senses

- Enhanced audio with DTS Sound™
- Ambiglow adds a new dimension to your viewing experience
- 120Hz refresh rates for ultra-smooth, brilliant images
- 144Hz refresh rates for ultra-smooth, brilliant images

Features for gamers needs

- 1ms (MPRT) fast response for crisp image and smooth gameplay
- USB-C one cable does it all
- MultiView enables simultaneous dual connection and view
- Access and display multiple sources on two devices
- LowBlue mode and Flicker-free easy-on-the eyes viewing



reddot winner 2020

EVNIA

PHILIPS

4K HDR display with Ambiglow
Designed for Xbox Evnia 7000, 32 (31.5" / 80 cm diag.), 3840 x 2160 (4K UHD)

329M1RV/01

Highlights

Designed for Xbox




Unleash your console gaming. We partnered with the Xbox team to develop this Designed for Xbox display that is validated to deliver the optimal Xbox Series X visual performance the moment you plug it in.

144Hz Gaming



You play intense, competitive gaming. You demand display with lag free, ultra-smooth images. This Philips display redraws the screen image up-to 144 times per second, effectively 2.4x faster than a standard display. A lower frame rate can make enemies appear to jump from spot to spot on the screen, making them difficult targets to hit. With 144Hz frame rate, you get those critical missing images on the screen which shows enemy movement in ultra-smooth motion so you can easily target them. With ultra-low input lag and no screen tearing, this Philips display is your perfect gaming partner

AMD FreeSync™ Premium

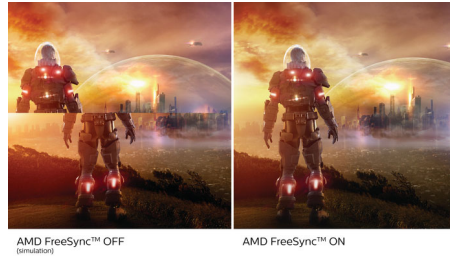

Gaming shouldn't be a choice between choppy gameplay or broken frames. AMD FreeSync™ Premium equips serious gamers with a fluid, tear-free gameplay experience at peak performance. There are no compromises, game confidently with a high refresh rate, low framerate compensation, and low latency.

MultiView and built-in KVM



Control and switch between two devices through a single keyboard and mouse with the built-in KVM. MultiView lets you survey both sources simultaneously on one screen. With these features, you can reduce cable clutter and save valuable time. Perfect for streamers with two PCs, content creators or when prepping devices for a LAN event.

DTS Sound™



DTS Sound is an audio processing solution designed to optimize the playback of music, movies, streaming and games on the PC regardless of form factors. DTS Sound enables an immersive virtual surround sound experience, complete with rich bass and dialog enhancement and maximized volume levels free of any clipping or distortion.

1ms MPRT fast response



MPRT (motion picture response time) is more intuitive way to describe the response time, which directly refers the duration from seeing blurry noise to clean and crisp images. Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur, delivers sharper and precise visuals to enhance gaming experience. Best choice for playing thrilling and twitch-sensitive games.



reddot winner 2020

Red Dot

Red Dot stands for belonging to the best in design and business

This gaming monitor scores with the striking base, which radiates a solid presence and thereby underlines the quality of the monitor.



Specifications

Picture/Display

- LCD panel type: IPS technology
- Backlight type: W-LED system
- Panel Size: 31.5 inch / 80 cm
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- Effective viewing area: 697.344 (H) x 392.2344 (V) mm
- Aspect ratio: 16:9
- Maximum resolution: HDMI/DP: 3840 x 2160 @ 144 Hz*; USB-C: 3840 x 2160 @ 120 Hz
- Pixel Density: 139.87 PPI
- Response time (typical): 1 ms (Gray to Gray)*
- MPRT: 1 ms
- Low Input Lag
- Brightness: 500 cd/m²
- SmartContrast: Mega Infinity DCR
- Contrast ratio (typical): 1000:1
- Pixel pitch: 0.181 x 0.181 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Flicker-free
- HDR: DisplayHDR 400 certified
- Color gamut (typical): NTSC 113%*, sRGB 124%*, Adobe RGB 111%*
- Picture enhancement: SmartImage game
- Display colors: Color support 1.07 billion colors
- Scanning Frequency: HDMI: 30 - 135 kHz (H) / 48 - 144 Hz (V); DP: 30 - 254 kHz (H) / 48 - 144 Hz (V); USB-C: 30 - 254 kHz (H) / 48 - 120 Hz (V)
- LowBlue Mode
- SmartUniformity: 93 ~ 105%
- Delta E: <2 (sRGB)
- sRGB
- Ambiglow: 4-sided
- AMD FreeSync™ technology: Premium
- HDMI 2.1 Feature: VRR, FRL

Connectivity

- Signal Input: HDMI 2.1 x 3, DisplayPort 1.4 x 1, USB-C x 1 (DP Alt mode, PD 65W)
- USB: USB-B x 1 (upstream), USB 3.2 x 4 (downstream with 2 fast charge B.C 1.2)
- Sync Input: Separate Sync
- Audio (In/Out): Audio out

Convenience

- Built-in Speakers: 5 W x 2, DTS Sound
- MultiView: PBP (2x devices)
- KVM: USB-C, USB-B
- User convenience: Power On/Off, Menu/OK, Input/Up, Game Settings/Down, SmartImage game/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount

(100x100mm)

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7

Stand

- Height adjustment: 130 mm
- Swivel: -/+ 20 degree
- Tilt: -5/15 degree

Power

- On mode: 58.9 W (typ.)
- Standby mode: 0.5 W (typ.)
- Off mode: 0.3 W (typ.)
- Energy Label Class: G
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Internal, 100-240VAC, 50-60Hz

Dimensions

- Product with stand(max height): 715 x 596 x 297 mm
- Product without stand (mm): 715 x 428 x 78 mm
- Packaging in mm (WxHxD): 800 x 526 x 224 mm

Weight

- Product with stand (kg): 11.63 kg
- Product without stand (kg): 7.80 kg
- Product with packaging (kg): 16.67 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF: 50,000 (Excluded backlight) hour(s)

Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

- Regulatory Approvals: CB, TUV/ISO9241-307, TUV-BAUART, CU-EAC, EAEU RoHS, CE Mark

Cabinet

- Color: Black
- Finish: Textured / Glossy

What's in the box?

- Monitor with stand
- Cables: DP cable, HDMI cable, USB-C to C cable, Power cable
- User Documentation

Issue date 2023-11-15

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Version: 10.0.2

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

12 NC: 8670 001 71574
EAN: 87 12581 77249 9

www.philips.com

* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
* The maximum resolution works for either HDMI input or DP input.
* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
* Response time value equal to SmartResponse
* MPRT is to adjust brightness for blur reduction, so cannot adjust brightness while MPRT is turned on. To reduce motion blur, LED backlight will strobe synchronously with screen refresh, which may cause noticeable brightness change.
* MPRT is gaming-optimized mode. Turn on MPRT may cause noticeable screen flickering. It is recommended to turn off when you are not using the gaming function.
* NTSC Area based on CIE1976
* sRGB Area based on CIE1931
* Adobe RGB Coverage based on CIE1976
* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.
* The monitor may look different from feature images.