

# PHILIPS

Full HD LCD monitor

V Line

27" (68.6 cm)

1920 x 1080 (Full HD)

273V7QDSB



## Vivid, crisp images, from edge to edge

A perfect all-round display with stunning images that stretch from edge to edge, made easy on the eyes, in a compact, slim design.

### Perfectly designed for your space

- Compact design saves space
- VESA mount allows for flexibility

### Easy on the eyes

- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity

### Experience true multimedia


- HDMI-ready for Full HD entertainment

### Vivid pictures every time

- SmartContrast for rich black details
- IPS LED wide view technology for image and colour accuracy
- 16:9 Full HD display for crisp, detailed images
- SmartImage pre-sets for easy optimised image settings
- Narrow-border display for a seamless appearance


# Highlights

## IPS technology

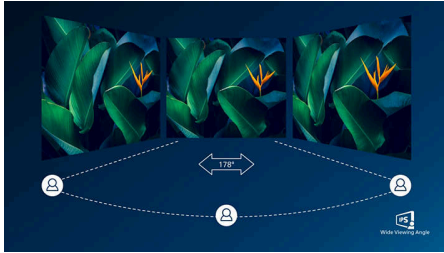


IPS displays use an advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays give you remarkably crisp images with vivid colours, making them ideal not only for Photos, movies and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

## 16:9 Full HD display

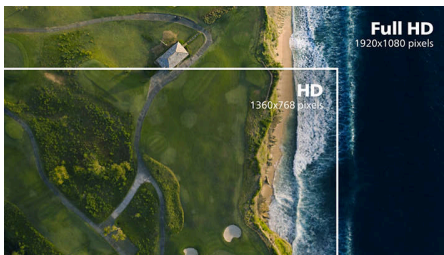

Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colours, expect a true-to-life picture.

## Ultra-narrow Border

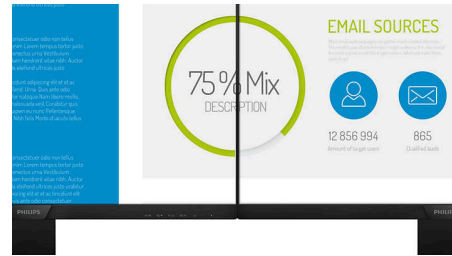

The new Philips displays feature ultra-narrow borders which allow for minimal distractions and maximum viewing size. Especially suited for multi-display or tiling setups like gaming, graphic design and professional applications, the ultra-narrow border display gives you the feeling of using one large display.

## SmartContrast




SmartContrast is a Philips technology that analyses the contents you are displaying, automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

## SmartImage



SmartImage is an exclusive leading edge Philips technology that analyses the content displayed on your screen and optimises your display performance. This user-friendly interface allows you to select various modes, like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimises the contrast, colour saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time at the touch of a single button!

## Flicker-Free technology

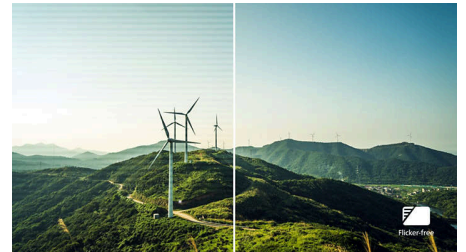


Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.




# Highlights

## LowBlue Mode

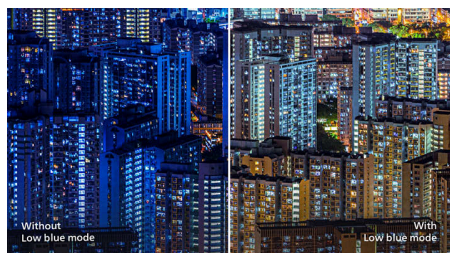


Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

## EasyRead mode

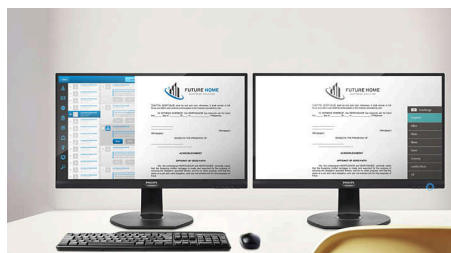

EasyRead mode for a paper-like reading experience

## HDMI Ready

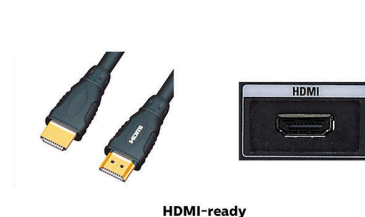

An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality digital video and audio to be transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).



# Specifications

## Picture/Display

**Panel Size:** 27 inch/68.6 cm  
**Aspect ratio:** 16:9  
**LCD panel type:** IPS technology  
**Backlight type:** W-LED system  
**Pixel pitch:** 0.311 x 0.311 mm  
**Brightness:** 250 cd/m<sup>2</sup>  
**Display colours:** 16.7 M  
**Contrast ratio (typical):** 1000:1  
**SmartContrast:** 10,000,000:1  
**Response time (typical):** 4 ms (GtG)\*  
**Viewing angle:** 178° (H)/178° (V), @ C/R &gt; 10  
**Maximum resolution:** 1920 x 1080 @ 75 Hz\*  
**Effective viewing area:** 597.89 (H) x 336.31 (V)  
**Scanning Frequency:** 30–83 kHz (H)/56–76 Hz (V)  
**sRGB**  
**Flicker-free**  
**Pixel Density:** 82 PPI  
**LowBlue Mode**  
**Display Screen Coating:** Anti-Glare, 3H, Haze 25%

## Connectivity

**Signal Input:** VGA (Analogue), DVI-D (digital, HDCP), HDMI (digital, HDCP)  
**Sync Input:** Separate Sync, Sync on Green  
**Audio (In/Out):** HDMI audio out

## Convenience

**Plug and Play Compatibility:** DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7  
**User convenience:** Power On/Off, Menu/OK,

Brightness/UP, Input/Down, SmartImage/Back  
**OSD Languages:** Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian  
**Other convenience:** Kensington lock, VESA mount (100 x 100 mm)

## Stand

**Tilt:** -5/20 degree

## Power

**Power supply:** Built-in, 100–240 VAC, 50–60 Hz  
**Off mode:** 0.3 W (typ.)  
**On mode:** 15.40 W (typ.) (EnergyStar test method)  
**Standby mode:** 0.5 W (typ.)  
**Power LED indicator:** Operation - White, Standby mode - White (flashing)  
**Energy Label Class:** E

## Dimensions

**Product with stand (mm):** 613 x 454 x 227 mm  
**Packaging in mm (W x H x D):** 664 x 452 x 134 mm  
**Product without stand (mm):** 613 x 368 x 45 mm

## Weight

**Product with packaging (kg):** 6.07 kg  
**Product with stand (kg):** 4.15 kg  
**Product without stand (kg):** 3.66 kg

## Operating conditions

**Altitude:** Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)  
**Temperature range (operation):** 0°C to 40°C °C  
**MTBF:** 50 000 (Excluded backlight) hour(s)  
**Relative humidity:** 20%–80 %  
**Temperature range (storage):** -20°C to 60°C °C

## Sustainability

**Environmental and energy:** RoHS, Mercury Free, WEEE  
**Recyclable packaging material:** 100 %

## Compliance and standards

**Regulatory Approvals:** CU, SEMKO, cETLus, TUV/ISO9241-307, CE Mark, FCC Class B, ICES-003, RCM, UKRAINIAN, VCCI, CECP, TUV Cert. — blue light cut-off

## Cabinet

**Colour:** Black  
**Finish:** Textured

## What's in the box?

**Cables:** HDMI cable, Power cable  
**Monitor with stand**  
**User Documentation**

