

PHILIPS

LCD monitor

Monitor

5000 series

34" (86.36 cm)

3440 x 1440 (WQHD)

34E1C5600HE



Collaboration simplified

with built-in webcam

This Philips monitor is designed for the remote work environment. The integrated 5 MP webcam delivers sharp images and the noise-cancelling mic helps people hear you loud and clear.

Features designed for you

- Secure sign-in with pop-up webcam
- EasySelect menu toggle key for quick on-screen menu access
- Built-in stereo speakers for multimedia
- MultiView enables simultaneous dual connection and view
- Cable management reduces cable clutter for a neat workspace
- LowBlue mode and Flicker-free easy-on-the eyes viewing
- Collaboration-ready webcam with noise-cancelling mic.
- Connect your notebook with one USB-C cable

Superb Picture Quality

- VA display delivers awesome images with wide viewing angles
- CrystalClear images with UltraWide QHD 3440 x 1440 pixels
- Ultra Wide-Color wider range of colours for a vivid picture


Monitor

LCD monitor

34E1C5600HE/00

Highlights

UltraWide CrystalClear images

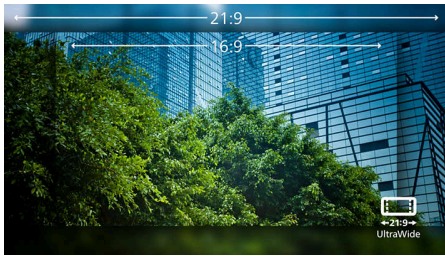

These Philips screens deliver Crystal Clear, UltraWide Quad HD 3440 x 1440 pixel images. Utilising high-performance panels with high-density pixel count and 178/178 wide viewing angles, these new displays will make your images and graphics come alive. The UltraWide 21:9 format enables more productivity with more room for side-by-side comparisons and more viewable spreadsheet columns. Whether you are a demanding professional requiring extremely detailed information for CAD-CAM solutions or a financial wizard working on huge spreadsheets, Philips displays deliver Crystal Clear images.

Ultra Wide-Color Technology



Ultra Wide-Color Technology delivers a wider spectrum of colours for a more brilliant picture. The Ultra Wide-Color wider "colour gamut" produces more natural-looking greens, vivid reds and deeper blues. Bring media entertainment, images and even productivity more alive with vivid colours from Ultra Wide-Color Technology.

USB-C connection



This Philips display features a USB type-C connector with power delivery. With intelligent and flexible power management, you can power

charge your compatible device directly. Its slim, reversible USB-C allows for easy, one-cable connection. You can watch high-resolution video and transfer data at super speed, while powering up and recharging your compatible device at the same time.

Webcam and noise-cancelling mic




This Philips monitor comes with a built-in 5 MP webcam, noise-cancelling microphone and speakers, making it perfect for working from home and collaborating remotely. It is equipped with advanced sensors that work seamlessly with Windows Hello facial recognition, allowing you to log into your Windows devices in less than 2 seconds. For added privacy, a physical camera switch lets you disable the webcam when not in use. The noise-cancelling microphone and dual 5 watt integrated speakers ensure clear communication.

Built-in stereo speakers




A pair of high-quality stereo speakers built into a display device. They may be visible front firing, or invisible down firing, top firing, rear firing etc. depending on model and design.

MultiView technology

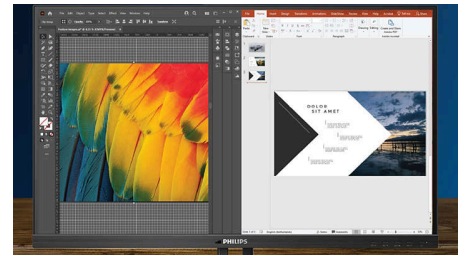


With the ultra-high resolution Philips MultiView display, you can now experience a world of connectivity. MultiView enables active dual connect and view so that you can work with multiple devices like a PC and notebook simultaneously, for complex multitasking.

Pop-up webcam

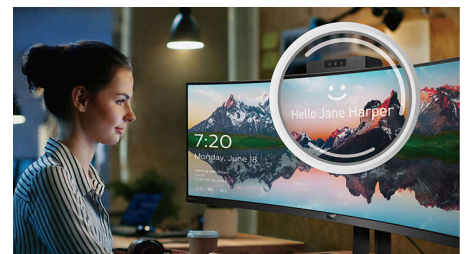

Philips' innovative and secure webcam pops up when you need it and securely tucks back into the monitor when you are not using it. The webcam is also equipped with advanced sensors for Windows Hello facial recognition, which conveniently logs you into your Windows devices in less than 2 seconds, 3 times faster than a password.

LowBlue Mode and Flicker-free

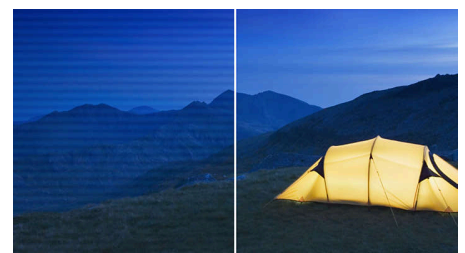

Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.



WQHD



Ultra Wide Color



Noise cancellation



Built-in Speaker



Multiview



LowBlue Mode



EasySelect



Wide Viewing Angle


Highlights

EasySelect Menu Toggle Key




The discreetly placed EasySelect Menu Toggle Key allows you to make quick and easy adjustments to monitor settings in the On-Screen Display menu.

Cable management

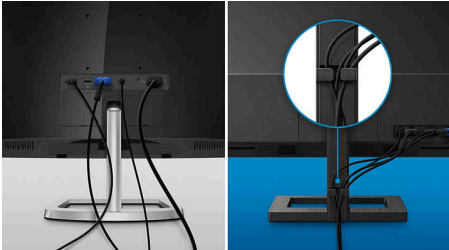

Cable management is an intimate design that maintains a tidy workspace by organising the cables and wires required for the operation of a display device.

VA display

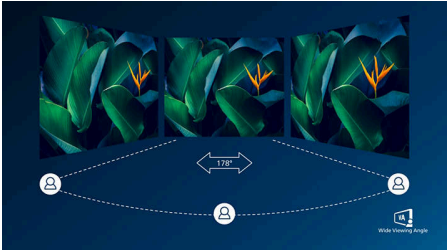

The Philips VA LED display uses an advanced multi-domain vertical alignment technology that gives you super-high static contrast ratios for extra-vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web browsing, films, gaming and demanding graphical applications. Its optimised pixel management technology gives you a 178/178 degree extra-wide viewing angle, resulting in crisp images.



WQHD



Ultra Wide Color



Noise cancellation



Built-in Speaker



Multiview



LowBlue Mode

Specifications

Picture/Display

Panel Size: 34 inch/86.36 cm

Aspect ratio: 21:9

LCD panel type: VA LCD

Backlight type: W-LED system

Pixel pitch: 0.23175 x 0.23175 mm

Brightness: 300 cd/m²

Display colours: 16.7 M

Colour gamut (typical): NTSC 99.25%*, sRGB 123.24%*

Contrast ratio (typical): 3000:1

SmartContrast: Mega Infinity DCR

Response time (typical): 4 ms (Grey to Grey)*

Viewing angle: 178° (H)/178° (V), @ C/R > 10

Picture enhancement: SmartImage game

Maximum resolution: 3440 x 1440 @ 100 Hz*

Effective viewing area: 797.22 (H) x 333.72 (V) - at a 1500R curvature*

Scanning Frequency: 30–160 kHz (H)/48–100 Hz (V)

sRGB

Flicker-free

Pixel Density: 109.68 PPI

LowBlue Mode

Display Screen Coating: Anti-Glare, 3H, Haze 25%

MPRT: 1 ms

EasyRead

Adaptive sync

Connectivity

Signal Input: HDMI 2.0 x 1, DisplayPort 1.2 x 1, USB-C x 1 (DisplayPort Alt mode, data and Power Delivery)

Sync Input: Separate Sync

Audio (In/Out): Audio out

HDCP: HDCP 1.4 (HDMI/DisplayPort/USB-C),

HDCP 2.2 (HDMI/DisplayPort/USB-C)

USB Hub: USB 3.2 Gen 1, USB-A downstream x 4 (with 1 fast charge B.C 1.2)

Power Delivery

Max power delivery: USB-C: Up to 65 W (5 V/3 A, 7 V/3 A, 9 V/3 A, 10 V/3 A, 12 V/3 A, 15 V/3 A, 20 V/3.25 A)

Version: USB PD version 3.0

Convenience

Built-in Speakers: 5 W x 2

Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10/8.1/8/7

User convenience: Power On/Off, Menu, Volume, Input, SmartImage Game

OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian

Other convenience: Kensington lock, VESA mount (100 x 100 mm)

MultiView: PIP/PBP mode, 2 x devices

Built-in webcam: 5.0 megapixel camera with microphone and LED indicator

Noise cancellation

Stand

Height adjustment: 130 mm

Tilt: -5/20 degree

Power

Power supply: Internal, 100–240 VAC, 50–60 Hz

Off mode: 0.3 W (typ.)

On mode: 57.0 W (typ.)

Standby mode: 0.5 W (typ.)

Power LED indicator: Operation - White, Standby mode - White (flashing)

Energy Label Class: G

Dimensions

Product with stand (mm): 808 x 557 x 281 mm

Packaging in mm (W x H x D):

980 x 519 x 226 mm

Product without stand (mm):

808 x 381 x 111 mm

Weight

Product with packaging (kg): 12.43 kg

Product with stand (kg): 9.29 kg

Product without stand (kg): 7.16 kg

Operating conditions

Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)

Temperature range (operation): 0 to 40 °C

MTBF: 50,000 (excluding backlight) hour(s)

Relative humidity: 20%-80 %

Temperature range (storage): -20 to 60 °C

Sustainability

Environmental and energy: RoHS

Recyclable packaging material: 100 %

Specific Substances: Mercury free, PVC/BFR free housing

Compliance and standards

Regulatory Approvals: CB, CE Mark, CU-EAC, EAEU RoHS, FCC Class B, ICES-003, TUV/ISO9241-307, TUV-BAUART

Cabinet

Colour: Black

Finish: Textured

What's in the box?

Cables: HDMI cable, USB-C to USB-A/C Y cable, Power cable

Monitor with stand

User Documentation

- * Radius of the arc of the display curvature in mm
- * The maximum resolution works for either HDMI input or DP input.
- * For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
- * Response time value equal to SmartResponse
- * MPRT adjusts the brightness for blur reduction, so the brightness cannot be adjusted while MPRT is turned on. To reduce motion blur, the LED backlight will strobe in time with the screen refresh rate, which may cause a noticeable change in brightness.
- * MPRT is a gaming-optimised mode. Turning on MPRT may cause noticeable screen flickering. It is recommended to turn this mode off when you are not using the gaming function.
- * NTSC Area based on CIE 1976
- * sRGB Area based on CIE1931
- * For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
- * For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
- * The monitor may look different from feature images.

