

PHILIPS

LCD monitor with
USB-C docking

Monitor

B Line

27" (68.6 cm)

2560 x 1440 (QHD)

276B1



Simplify your connections

with USB-C docking

This Philips monitor offers 90W power delivery and a simple laptop docking solution. View QHD images, recharge a laptop and stay connected to Ethernet, all at the same time with a single USB-C cable. Eye comfort with TUV certification to reduce eye fatigue.

Designed for the way you work

- Built-in stereo speakers for multimedia
- SmartErgoBase enables user-friendly ergonomic adjustments
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity
- EasyRead mode for a paper-like reading experience
- TUV Eye Comfort certified to reduce eye fatigue
- Crystal clear images with Quad HD 2560 x 1440 pixels

Single cable USB-C connection

- Built-in RJ-45 Ethernet gives data security
- USB-C enables laptop power charging directly from a monitor
- USB 3.2 high-speed data transfer

Designed for sustainability

- LightSensor for the perfect brightness with minimal power
- PowerSensor saves up to 70% energy costs


Highlights

USB Type-C connection



This Philips display features a built-in USB type-C docking station with power delivery. With intelligent and flexible power management, you can power charge your compatible* laptop directly. Its slim, reversible USB-C connector allows for easy, one-cable docking. Simplify by connecting all your peripherals like keyboard, mouse and your RJ-45 Ethernet cable to the monitor's docking station. You can watch high-resolution video and transfer data at super-speed, while powering up and re-charging your notebook at the same time.

CrystalClear images

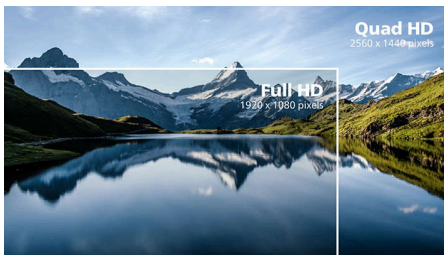

These Philips screens deliver Crystal Clear, Quad HD 2560 x 1440 or 2560 x 1080 pixel images. Utilising high-performance panels with a high-density pixel count, enabled by high bandwidth sources like USB-C, Displayport and HDMI, these new displays will make your images and graphics come alive. Whether you are a demanding professional who requires extremely detailed information for CAD-CAM solutions and uses 3D graphic applications, or a financial wizard working on huge spreadsheets, Philips displays will give you Crystal Clear images.

TUV Rheinland Eye Comfort




Philips displays meet TUV Rheinland Eye Comfort standard to prevent eye strain caused by prolonged computer use. With TUV Eye Comfort certification, Philips displays ensure flicker-free, low-blue mode, no disturbing reflections, a wide viewing angle, less reduction of image quality from different angles and ergonomic stand designs for an ideal viewing experience. Keep your eyes healthy and boost work productivity.

Flicker-Free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.


LowBlue Mode

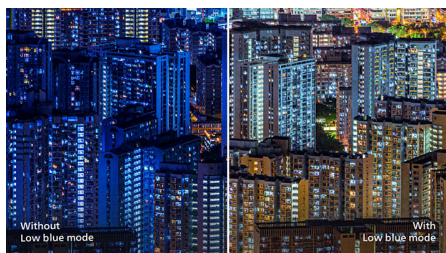

Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye

damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

SmartErgoBase

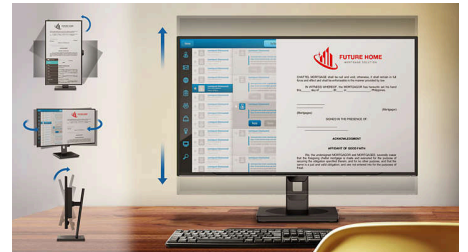

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height-adjustable stand guarantees the optimal viewing level, reducing the physical strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.

Built-in stereo speakers



A pair of high-quality stereo speakers built into a display device. They may be visible front firing, or invisible down firing, top firing, rear firing etc. depending on model and design.



Quad HD



Flicker-free



LowBlue Mode



SmartErgo Base



Built-in Speaker



PowerSensor



LightSensor


Monitor

LCD monitor with USB-C docking

276B1/00


Highlights

PowerSensor

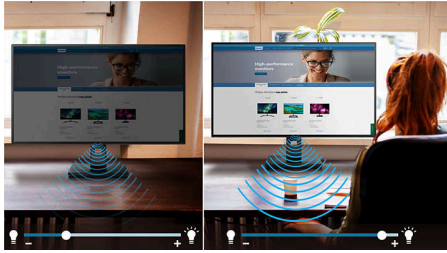


PowerSensor is a built-in 'people sensor' that transmits and receives harmless infrared signals to determine if the user is present and automatically reduces monitor brightness when the user steps away from the desk, cutting energy costs by up to 70 percent and prolonging monitor life.

LightSensor

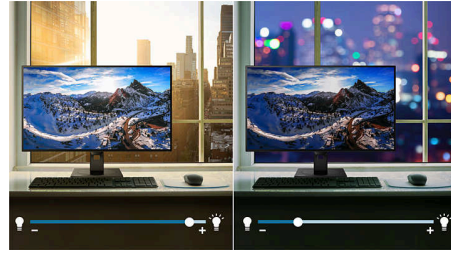

LightSensor uses a smart sensor to adjust the picture brightness depending on the light conditions in the room for the perfect picture with minimal power usage.

EasyRead mode

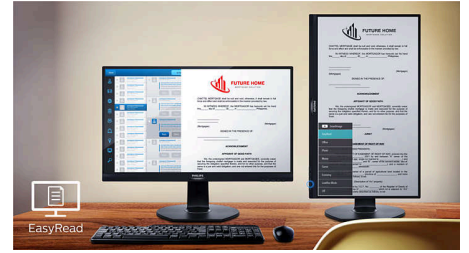

EasyRead mode for a paper-like reading experience



Specifications

Picture/Display

Panel Size: 27 inch/68.6 cm
 Aspect ratio: 16:9
 LCD panel type: IPS technology
 Backlight type: W-LED system
 Pixel pitch: 0.2331 x 0.2331 mm
 Brightness: 350 cd/m²
 Display colours: 16.7 M
 Colour gamut (typical): NTSC 104%*, sRGB 107%*
 Contrast ratio (typical): 1000:1
 SmartContrast: 50,000,000:1
 Response time (typical): 4 ms (Grey to Grey)*
 Viewing angle: 178° (H)/178° (V), @ C/R > 10
 Picture enhancement: SmartImage
 Maximum resolution: 2560 x 1440 @ 75 Hz*
 Effective viewing area: 596.736 (H) x 335.664 (V)
 Scanning Frequency: 30–114 kHz (H)/48–75 Hz (V)
 sRGB
 Flicker-free
 Pixel Density: 109 PPI
 LowBlue Mode
 Display Screen Coating: Anti-Glare, 3H, Haze 25%
 EasyRead

Connectivity

Signal Input: DisplayPort 1.4 x 1, HDMI 1.4 x 2,
 USB-C 3.2 Gen 2 x 1 (upstream, power delivery up to 90 W)
 Sync Input: Separate Sync
 Audio (In/Out): Audio out
 RJ45: Ethernet LAN up to 1 G*, Wake on LAN
 Signal Output: DisplayPort out
 USB:: USB-C x 1 (upstream), USB 3.2 x 4 (downstream with 1 fast charge B.C 1.2)
 HDCP: HDCP 1.4 (HDMI/DP/USB-C)
 HBR3: for USB-C

USB

Power delivery: USB PD version 3.0
 Super speed: Data and Video transfer
 DP: Built-in Display Port Alt mode
 USB-C max. power delivery: Up to 90 W (5 V/3 A;

7 V/3 A; 9 V/3 A; 10 V/3 A; 12 V/3 A; 15 V/3 A; 20 V/4.5 A)
 USB-C: Reversible plug connector

Convenience

Built-in Speakers: 2 W x 2
 Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10/8.1/8/7
 User convenience: SmartImage, Input, PowerSensor, Menu, Power On/Off
 OSD Languages: Brazil Portuguese, Czech, Dutch, English, French, Finnish, German, Greek, Hungarian, Italian, Japanese, Korean, Portuguese, Polish, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
 Other convenience: Kensington lock, VESA mount (100 x 100 mm)
 Control software: SmartControl

Stand

Height adjustment: 150 mm
 Pivot: -90/+90
 Swivel: -180/+180 degree
 Tilt: -5/35 degree

Power

ECO mode: 16.4 W (typ.)
 Power supply: Built-in, 100–240 VAC, 50–60 Hz
 Off mode: Zero watts with Zero switch
 On mode: 20.2 W (typ.) (EnergyStar test method)
 Standby mode: 0.3 W
 Power LED indicator: Operation - White, Standby mode - White (flashing)
 Energy Label Class: E

Dimensions

Packaging in mm (W x H x D): 730 x 471 x 193 mm
 Product without stand (mm): 613 x 366 x 54 mm
 Product with stand (max height): 613 x 537 x 225 mm

Weight

Product with packaging (kg): 10.94 kg
 Product with stand (kg): 7.26 kg
 Product without stand (kg): 5.47 kg

Operating conditions

Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
 Temperature range (operation): 0°C to 40°C °C
 Relative humidity: 20%-80 %
 Temperature range (storage): -20°C to 60°C °C
 MTBF (demonstrated): 70,000 hrs (excluded backlight)

Sustainability

Environmental and energy: PowerSensor, LightSensor, Energy Star 8.0, EPEAT*, TCO Certified Edge, RoHS
 Post-consumer recycled plastic: 85%
 Recyclable packaging material: 100 %
 Specific Substances: Mercury free, PVC/BFR free housing

Compliance and standards

Regulatory Approvals: cETLus, CB, TUV/GS, TUV Ergo, SEMKO, CU-EAC, EAEU RoHS, CE Mark, FCC Class B, ICES-003, UKRAINIAN, TUV Eye Comfort certified, CCC, CECP, CEL

Cabinet

Finish: Texture
 Foot: Black
 Front bezel: Black
 Rear cover: Black

What's in the box?

Cables: HDMI cable, DP cable, USB-C cable, Power cable
 Monitor with stand
 User Documentation



* The maximum resolution works for either USB-C, DP or HDMI input.
 * Response time value equal to SmartResponse
 * NTSC Area based on CIE 1976
 * sRGB Area based on CIE1931
 * For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
 * Activities such as screen sharing and online streaming over the Internet can impact your network performance. Your hardware and network bandwidth will determine the overall audio and video quality.
 * For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
 * If your Ethernet connection seems slow, please enter the OSD menu and select USB 3.0 or a higher version that can support the LAN speed up to 1G.
 * EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.
 * The monitor may look different from feature images.