

Philips Signage Solutions
Q-Line Display

32"

Direct LED Backlight
Full HD

32BDL3010Q



Intensify your signage experience

with priceless smart performance

Deliver startlingly clear images in a more eco-friendly way. High on performance and reliability, yet low on power consumption, it is ideal for projects where no compromise is accepted.

Innovative solutions for any signage application

- Connect and control your content via the cloud with HTML5
- Schedule what you want, when you want with SmartPlayer
- Free and easy-to-use content management with SmartCMS
- Save and play content with internal memory

Care about you, your business and your audience

- SmartPower for energy saving
- Show clinical images consistently with D-image

Maximizing the impact of your message

- Manage and control your network remotely via SmartControl
- Full HD LED for brilliant images with incredible contrast

PHILIPS

Highlights

Full HD LED technology


Picture Quality matters. Regular displays deliver quality, but you expect more. Imagine crisp detail paired with high brightness, incredible contrast and realistic colors for a true to life picture.

SmartControl



SmartControl lets you remotely control and manage your network of displays via RJ45 and RS232C. Easily fine-tune all display settings including resolution, brightness, contrast and cloning of your settings over your complete network.

SmartCMS

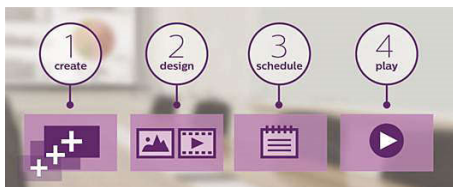


Free and easy-to-use content management system that works exclusively with Philips Sigage Solutions displays to manage your digital signage content. With SmartCMS you can create and schedule your own content over 24 hours every day. Simply create your network, design your content, schedule your playlist and you are ready to play!

SmartBrowser



Connect and control your content via the cloud with the integrated HTML5 browser. Design your signage content online and connect it with a display or with your complete network. Simply plug in a RJ45 internet cable for network connection, connect the display with the dedicated url-address and you are ready to play your cloud based content.

Internal Memory

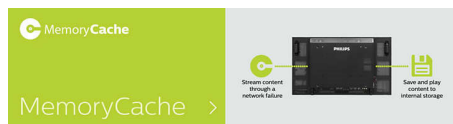

Save and play content with internal memory. Upload your media into the display and playback content immediately. Working in conjunction with the internal browser, it also serves as a memory cache when streaming online content. If the network ever fails, the internal memory keeps content running by playing a cached version of the content, ensuring that your media stays up even if the network goes down.

SmartPlayer



Turn your USB into a true cost effective digital signage device. Simply save your content


(video, audio, pictures) on your USB and plug into your display. Create your playlist and schedule your content via the on screen menu, and enjoy your own created playlists anytime, anywhere.

Clinical D-image



D-image helps you to review and diagnose clinical images with consistent and accurate display performance. To achieve reliable clinical interpretations our professional displays are factory calibrated to give optimized greyscale standard display performance. D-image helps you to excel in every aspect of patient care.

SmartPower

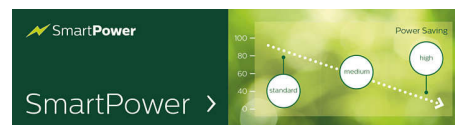

The backlight intensity can be controlled and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs.

Specifications

Connectivity

- Audio output: Audio Left/Right (RCA)
- Video input: DVI-I (x 1), HDMI (x2), USB, VGA (via DVI)
- Audio input: 3.5 mm jack
- External control: RJ45, RS232C (in/out) 2.5 mm jack, IR (in/out) 3.5 mm jack

Picture/Display

- Diagonal screen size (metric): 80 cm
- Diagonal screen size (inch): 31.5 inch
- Aspect ratio: 16:9
- Panel resolution: 1920x1080p
- Pixel pitch: 0.36375 x 0.36375 mm
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 350 cd/m²
- Display colors: 16.7 Million
- Contrast ratio (typical): 1200:1
- Dynamic contrast ratio: 500,000:1
- Response time (typical): 8 ms
- Viewing angle (horizontal): 178 degree
- Viewing angle (vertical): 178 degree
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, 3D MA deinterlacing, Dynamic contrast enhancement, Motion compens. deinterlacing, Progressive scan
- DICOM: Clinical D-image
- Panel technology: VA

Convenience

- Placement: Landscape
- Tiled Matrix: Up to 15 x 15
- Keyboard control: Lockable, Hidden
- Remote control signal: Lockable
- Signal loop through: RS232, IR Loopthrough
- Energy saving functions: Smart Power
- Network controllable: RS232, RJ45
- Start-up: Switch on delay, Switch on status
- Start-up window: enable / disable Philips logo

Sound

- Built-in speakers: 2 x 10W RMS

Power

- Mains power: 100 - 240V~, 50-60Hz, 1.5A
- Consumption (On mode): 50 W
- Consumption (Typical): 50 W
- Consumption (Max): 75 W
- Standby power consumption: <0.5 W
- Power Saving Features: Smart Power

Supported Display Resolution

- Computer formats: 640 x 480, 60, 67, 72, 75Hz,

- 800 x 600, 56, 60, 72, 75Hz, 1280 x 800, 60Hz, 1440 x 900, 60Hz, 1600 x 1200, 60Hz, 1920 x 1080, 60Hz, 1024 x 768, 60, 70, 75Hz, 1152 x 870, 75Hz, 1280 x 1024, 60Hz, 1280 x 720, 60Hz, 1680 x 1050, 60Hz, 720 x 400, 70Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 576p, 50Hz, 576i, 50Hz, 1080i, 50Hz, 1080i, 60Hz, 1080p, 60Hz, 720p, 60Hz

Dimensions

- Set Width: 726.5 mm
- Product weight: 5.20 kg
- Set Height: 425.4 mm
- Set Depth: 63.6 mm
- Set Width (inch): 28.6 inch
- Set Height (inch): 16.75 inch
- Wall Mount: 100x100mm, 200x200 mm, M4
- Set Depth (inch): 2.5 inch
- Bezel width: 11.9 (TLR) / 17.2 (B) mm
- Product weight (lb): 14.74 lb

Operating conditions

- Altitude: 0 ~ 3000 m
- Temperature range (operation): 5 ~ 40 °C
- MTBF: 50,000 hour(s)
- Temperature range (storage): -20 ~ 60 °C
- Humidity range (operation)[RH]: 20 ~ 80% RH (No condensation)
- Humidity range (storage) [RH]: 5 ~ 95% RH (No condensation)

Multimedia Applications

- USB Playback Video: MPEG, H.264, JPEG
- USB Playback Picture: BMP, JPEG, PNG
- USB Playback Audio: AAC, WMA, HEAAC, MPEG

Accessories

- Included accessories: AC Power Cord, RS232 cable, Remote Control, Batteries for remote control, Quick start guide
- Included Accessories: IR sensor cable (1.8 m) (x1), RS232 daisy-chain cable, USB Cover and screw x1
- Stand: BM02541/BM05911(optional)

Miscellaneous

- On-Screen Display Languages: English, French, German, Italian, Polish, Turkish, Russian, Simplified Chinese, Spanish, Traditional Chinese, Arabic, Japanese
- Warranty: 3 year warranty
- Regulatory approvals: CB, CE, FCC, Class B



Issue date 2024-03-23

Version: 1.0.1

EAN: 87 12581 75399 3

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com