

# PHILIPS

LCD monitor with  
Ultra Wide-Color

E Line

27" (68.6 cm)

1920 x 1080 (Full HD)

276E9QDSB



## Stunning colour, stylish design

The Philips E line monitor features stylish design with extraordinary picture performance. A narrow border Full HD display with Ultra Wide-Color brings you to real true-to-life visuals. Enjoy superior viewing in a stylish design.

### Features designed for you

- HDMI ensures universal digital connectivity
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity
- Narrow-border display for a seamless appearance

### Greener every day

- Low power consumption saves energy bills
- Eco-friendly materials meet major international standards

### Superb Picture Quality

- 16:9 Full HD display for crisp, detailed images
- IPS LED wide view technology for image and colour accuracy
- Ultra Wide-Color wider range of colours for a vivid picture
- Effortlessly smooth gameplay with AMD FreeSync™ technology


# Highlights

## Ultra Wide-Color Technology



Ultra Wide-Color Technology delivers a wider spectrum of colours for a more brilliant picture. The Ultra Wide-Color wider "colour gamut" produces more natural-looking greens, vivid reds and deeper blues. Bring media entertainment, images and even productivity more alive with vivid colours from Ultra Wide-Color Technology.

## IPS technology

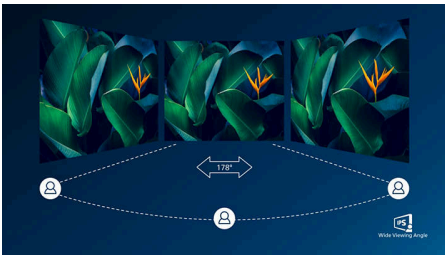

IPS displays use an advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays give you remarkably crisp images with vivid colours, making them ideal not only for Photos, movies and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

## 16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080


resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colours, expect a true-to-life picture.

## Ultra-smooth gaming



Gaming shouldn't be a choice between choppy gameplay or broken frames. With the new Philips monitor it doesn't have to be. Get fluid, artefact-free performance at virtually any frame rate with AMD FreeSync™ technology, smooth, quick refresh and ultra-fast response time.

## Ultra-narrow Border

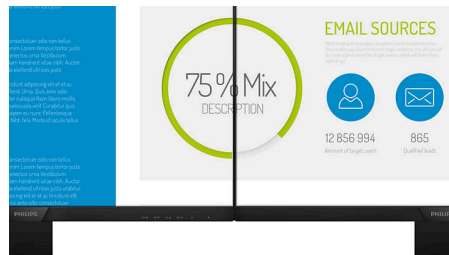

The new Philips displays feature ultra-narrow borders which allow for minimal distractions and maximum viewing size. Especially suited for multi-display or tiling setups like gaming, graphic design and professional applications, the ultra-narrow border display gives you the feeling of using one large display.

## Flicker-Free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips

Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

## LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

## HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality digital video and audio to be transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

## Eco-friendly materials

"Philips is committed to using sustainable, eco-friendly materials across its monitor range. All body plastic parts, metal chassis parts and packing materials use 100% recyclable materials. In some selected models, we use up to 65% post-consumer recycled plastics. Strict adherence to RoHS standards ensures a substantial reduction or elimination of toxic substances like lead, for example. Mercury content in monitors with a CCFL backlight has been reduced significantly, and has been eliminated completely in monitors with an LED backlight.



# Specifications

## Picture/Display

Panel Size: 27 inch/68.6 cm  
 Aspect ratio: 16:9  
 LCD panel type: IPS technology  
 Backlight type: W-LED system  
 Pixel pitch: 0.311 x 0.311 mm  
 Brightness: 250 cd/m<sup>2</sup>  
 Display colours: 16.7 M  
 Colour gamut (typical): NTSC 93%\*, sRGB 124%\*  
 Contrast ratio (typical): 1000:1  
 SmartContrast: 20,000,000:1  
 Response time (typical): 4 ms (Grey to Grey)\*  
 Viewing angle: 178° (H)/178° (V), @ C/R > 10  
 Picture enhancement: SmartImage game  
 Maximum resolution: 1920 x 1080 @ 75 Hz\*  
 Effective viewing area: 597.9 (H) x 336.3 (V)  
 Scanning Frequency: 38 - 89 kHz (H) / 50 - 75 Hz (V)  
 sRGB  
 Flicker-free  
 Pixel Density: 82 PPI  
 LowBlue Mode  
 Display Screen Coating: Anti-Glare, 3H, Haze 25%  
 AMD FreeSync™ technology

## Connectivity

Signal Input: VGA (Analogue), DVI-D (digital, HDCP), HDMI (digital, HDCP)  
 Sync Input: Separate Sync, Sync on Green  
 Audio (In/Out): HDMI audio out

## Convenience

Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7  
 User convenience: Power On/Off, Menu, Brightness, Input, SmartImage Game  
 OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian  
 Other convenience: Kensington lock, VESA mount (100 x 100 mm)

## Stand

Tilt: -5/20 degree

## Power

Power supply: External, 100–240 VAC, 50–60 Hz  
 Off mode: 0.5 W (typ.)  
 On mode: 15.5 W (typ.) (EnergyStar test method)  
 Standby mode: 0.5 W (typ.)  
 Power LED indicator: Operation - White, Standby mode - White (flashing)  
 Energy Label Class: E

## Dimensions

Product with stand (mm): 614 x 465 x 220 mm  
 Packaging in mm (W x H x D): 660 x 514 x 155 mm  
 Product without stand (mm): 614 x 367 x 40 mm

## Weight

Product with packaging (kg): 5.91 kg  
 Product with stand (kg): 3.97 kg  
 Product without stand (kg): 3.30 kg

## Operating conditions

Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)  
 Temperature range (operation): 0 to 40 °C  
 MTBF: 50,000 (excluding backlight) hour(s)  
 Relative humidity: 20%-80 %  
 Temperature range (storage): -20 to 60 °C

## Sustainability

Environmental and energy: EnergyStar 8.0, RoHS, Mercury Free  
 Recyclable packaging material: 100 %

## Compliance and standards

Regulatory Approvals: CE Mark, FCC Class B, TUV/ISO9241-307, EPA, WEEE, CCC, CECP, BSMI, CB, cETLus, CU-EAC, ICES-003, TUV-BAUART, UKRAINIAN

## Cabinet

Colour: Black / Silver  
 Finish: Glossy

## What's in the box?

Cables: HDMI cable, Power cable  
 Monitor with stand  
 User Documentation

