

Philips
LCD monitor

V Line

22 (21.5"/54.6 cm diag.)
1920 x 1080 (Full HD)

221V8LD



Vivid, crisp images beyond boundaries

Philips V line wide-view monitor gives viewing beyond boundaries and great value with essential features. Adaptive-Sync provides flawless viewing without screen tearing. Features like LowBlue mode and flicker-free make it easy on the eyes.

Perfectly designed for your space

- VESA mount allows for flexibility

Easy on the eyes

- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity

Experience true multimedia

- HDMI ensures universal digital connectivity

Vivid pictures every time


- 16:9 Full HD display for crisp, detailed images
- SmartImage pre-sets for easy optimised image settings
- VA display delivers awesome images with wide viewing angles
- Effortlessly smooth action with Adaptive-Sync technology

PHILIPS

LCD monitor
V Line 22 (21.5"/54.6 cm diag.), 1920 x 1080 (Full HD)

Highlights

VA display

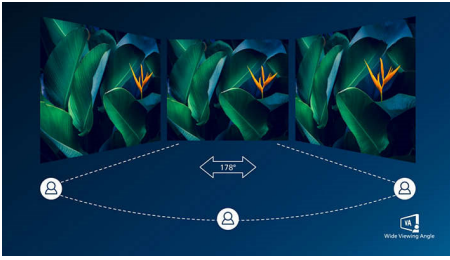

The Philips VA LED display uses an advanced multi-domain vertical alignment technology that gives you super-high static contrast ratios for extra-vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web browsing, films, gaming and demanding graphical applications. Its optimised pixel management technology gives you a 178/178 degree extra-wide viewing angle, resulting in crisp images.

16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colours, expect a true-to-life picture.

SmartImage



SmartImage is an exclusive leading edge Philips technology that analyses the content displayed on your screen and optimises your display

performance. This user-friendly interface allows you to select various modes, like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimises the contrast, colour saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time at the touch of a single button!

Adaptive-Sync technology



Gaming shouldn't be a choice between choppy gameplay or broken frames. Get fluid, artefact-free performance at virtually any frame rate with Adaptive-Sync technology, smooth quick refresh and ultra-fast response time.

Flicker-Free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

221V8LD/01

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

EasyRead mode



EasyRead mode for a paper-like reading experience

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality digital video and audio to be transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

VESA mount

VESA mount allows for flexibility



Specifications

Connectivity

- Signal Input: VGA (Analogue), DVI-D (digital, HDCP), HDMI 1.4
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Audio out

Picture/Display

- Panel Size: 21.5 inch/54.6 cm
- Aspect ratio: 16:9
- LCD panel type: VA LCD
- Backlight type: W-LED system
- Pixel pitch: 0.2493 x 0.241 mm
- Brightness: 250 cd/m²
- Display colours: 16.7 M
- Contrast ratio (typical): 3000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 4 ms (GtG)*
- Viewing angle: 178° (H)/178° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Maximum resolution: 1920 x 1080 @ 75 Hz*
- Effective viewing area: 478.656 (H) x 260.28 (V)
- Scanning Frequency: 30–85 kHz (H) / 48–75 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 102 PPI
- LowBlue Mode
- Display Screen Coating: Anti-glare, 3H, Haze 25%
- EasyRead
- Adaptive sync

Convenience

- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu/OK, Brightness/UP, Input/Down, SmartImage/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)

Stand

- Tilt: -5/20 degree

Power

- Power supply: Built-in, 100–240 VAC, 50–60 Hz
- Off mode: 0.3 W (typ.)
- On mode: 13.3 W (typ.) (EnergyStar test method)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)
- Energy Label Class: E

Dimensions

- Product with stand (mm): 493 x 369 x 220 mm
- Packaging in mm (W x H x D): 565 x 440 x 111 mm
- Product without stand (mm): 493 x 286 x 44 mm

Weight

- Product with packaging (kg): 3.73 kg
- Product with stand (kg): 2.69 kg
- Product without stand (kg): 2.30 kg

Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 50 000 (Excluded backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: EnergyStar 8.0, TCO Certified, RoHS, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: CB, UKRAINIAN, TUV/GS, TUV Ergo, CU-EAC, EAEU RoHS, CE Mark

Cabinet

- Colour: Black
- Finish: Textured

What's in the box?

- Cables: HDMI cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-04-24

Version: 3.0.1

EAN: 87 12581 77172 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The maximum resolution works for HDMI input only.
* Response time value equal to SmartResponse
* The monitor may look different from feature images.