



Philips Brilliance  
32:9 SuperWide curved  
LCD display

### P Line

49 (48.8" / 124 cm diag.)  
5120 x 1440 (Dual QHD)

**Brilliance**

**499P9H1**



# Wide open possibilities

with two high-performance monitors in one

Our award-winning 49" curved 32:9 SuperWide display is like two full-size high-performance monitors in-one. Productivity enhancing features like USB-C and pop-up webcam with Windows Hello deliver performance and convenience you expect.

#### Expand your horizons

- 32:9 SuperWide screen designed to replace multiscreen setups
- MultiView enables simultaneous dual connection and view
- 1800r curved display for a more immersive experience
- Effortlessly smooth action with Adaptive-Sync technology

#### Optimal Connectivity

- Built in USB-C docking station
- Built-in KVM switch to easily switch between sources

#### Designed for the way you work

- Securely sign in with pop-up webcam with Windows Hello™
- DisplayHDR 400 for more lifelike and outstanding visuals
- Tilt, swivel and height-adjust for an ideal viewing position
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity



reddot award 2018  
winner


**PHILIPS**

32:9 SuperWide curved LCD display  
P Line 49 (48.8" / 124 cm diag.), 5120 x 1440 (Dual QHD)

499P9H1/56

# Highlights

## 32:9 SuperWide

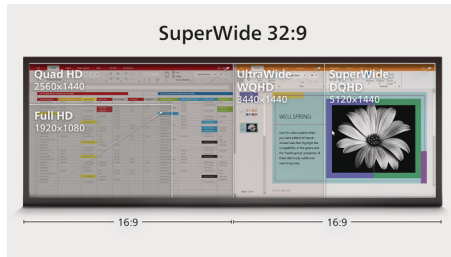

32:9 SuperWide 49" screen, with 5120 x 1440 resolution, is designed to replace multiscreen setups for massive wide view. It's like having two 27" 16:9 Quad HD displays side-by-side. SuperWide monitors offer screen area of dual monitors without the complicated setup.

## Adaptive-Sync technology



Gaming shouldn't be a choice between choppy gameplay or broken frames. Get fluid, artifact-free performance at virtually any framerate with Adaptive-Sync technology, smooth quick refresh and ultra-fast response time.

## Built in USB-C docking station



This Philips display features a built-in USB type-C docking station with power delivery. Its slim,


reversible USB-C connector allows for easy, one-cable docking. Simplify by connecting all your peripherals like keyboard, mouse and your RJ-45 Ethernet cable to the monitor's docking station. Simply connect your notebook and this monitor with a single USB-C cable to watch high-resolution video and transfer super-speed data, while powering up and re-charging your notebook at the same time.

## MultiClient Integrated KVM



With MultiClient Integrated KVM switch, you can control two separate PCs with one monitor-keyboard-mouse set up. A convenient button allows you to quickly switch between sources. Handy with set-ups that require dual PC computing power or sharing one large monitor to show two different PCs.

## Windows Hello™ pop-up webcam

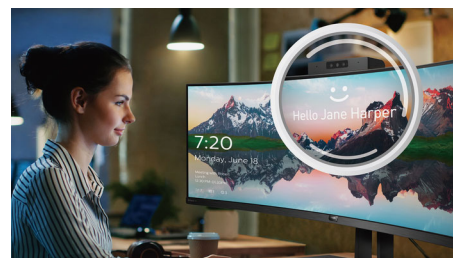

Philips' innovative and secure webcam pops up when you need it and securely tucks back into the monitor when you are not using it. The webcam is also equipped with advanced sensors for Windows Hello™ facial recognition, which conveniently logs you into

your Windows devices in less than 2 seconds, 3 times faster than a password.

## DisplayHDR 400



VESA-certified DisplayHDR 400 delivers a significant step-up from normal SDR displays. Unlike, other 'HDR compatible' screens, true DisplayHDR 400 produces astonishing brightness, contrast and colors. With global dimming and peak brightness up-to 400 nits, images come to life with notable highlights while featuring deeper, more nuanced blacks. It renders a fuller palette of rich new colors, delivering a visual experience that engages your senses.



## iF Design

iF DESIGN AWARD is a seal of quality for exceptional design, also a symbol that consumers can trust.

iF DESIGN AWARD is a seal of quality for exceptional design, also a symbol that consumers can trust.



reddot award 2018  
winner

## Red Dot

Red Dot stands for belonging to the best in design and business.

The task of placing this large screen on a stand with a similar presence is met in an exemplary manner. The result is a monitor appearing as an artistic entity



# Specifications

## Picture/Display

- LCD panel type: VA LCD
- Backlight type: W-LED system
- Panel Size: 48.8 inch / 124 cm
- Display Screen Coating: Anti-Glare, 2H, Haze 25%
- Effective viewing area: 1193.5 (H) x 335.7 (V) mm at a 1800R curvature\*
- Aspect ratio: 32:9
- Maximum resolution: 5120 x 1440 @ 70 Hz\*
- Pixel Density: 109 PPI
- Response time (typical): 5 ms (Gray to Gray)\*
- Brightness: 450 cd/m<sup>2</sup>
- Contrast ratio (typical): 3000:1
- SmartContrast: 80,000,000:1
- Pixel pitch: 0.233 x 0.233 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Flicker-free
- Picture enhancement: SmartImage
- Display colors: 1.07B (8bit + FRC)
- Color gamut (min.): BT. 709 Coverage: 99.67%\*, DCI-P3 Coverage: 94.62%\*
- Color gamut (typical): NTSC 103%\*, sRGB 121%\*, Adobe RGB 91%\*
- HDR: DisplayHDR 400 certified (DP / HDMI)
- Scanning Frequency: 30 - 230 kHz (H) / 48 - 70 Hz (V); Adaptive sync (for HDMI/DP)
- SmartUniformity: 97 ~ 102%

- Delta E: < 2
- sRGB
- LowBlue Mode
- EasyRead
- Adaptive sync

## Connectivity

- Signal Input: DisplayPort 1.4\* x 1, HDMI 2.0 b x 2, USB-C x 1 (upstream, power delivery up to 90 W)
- HDCP: HDCP 1.4 (HDMI / DP / USB-C), HDCP 2.2 (HDMI / DP / USB-C)
- USB Hub: USB 3.2 Gen 2, USB-B upstream x 1, USB-A downstream x 3 (with x 1 fast charge B.C 1.2)
- HBR3: HBR3 (USB-C)
- Audio (In/Out): Headphone out
- RJ45: Ethernet LAN up to 1G\*, Wake on LAN
- Sync Input: Separate Sync

## USB

- USB-C: Reversible plug connector
- Super speed: Data and Video transfer
- DP: Built-in Display Port Alt mode
- Power delivery: USB PD version 3.0
- USB-C max. power delivery: Up to 90W (5V/3A; 9V/3A; 10V/3A; 12V/3A; 15V/3A; 20V/4.5A)

## Convenience


- Built-in Speakers: 5 W x 2
- Built-in webcam: Pop-up 2.0 megapixel FHD camera with microphone and LED indicator (for Windows 10 Hello)
- MultiView: PBP (2x devices)
- User convenience: SmartImage, Input, User, Menu, Power On/Off
- Control software: SmartControl
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7

## Stand

- Height adjustment: 130 mm
- Swivel: -/+ 20 degree
- Tilt: -5~15 degree

## Power

- ECO mode: 43.3 W (typ.)
- On mode: 41.25 W (typ.) (EnergyStar test method)

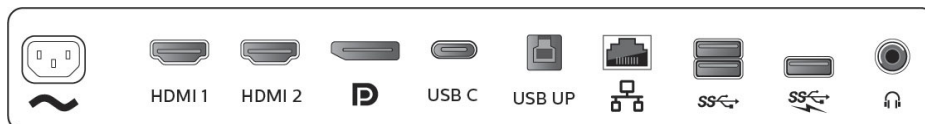

# Specifications

- Standby mode: 0.3 W (typ.)
- Off mode: Zero watts with Zero switch
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50-60Hz

## Dimensions

- Product with stand(max height): 1194 x 568 x 303 mm
- Product without stand (mm): 1194 x 369 x 156 mm
- Packaging in mm (WxHxD): 1308 x 384 x 553 mm

## Weight

- Product with stand (kg): 15.30 kg
- Product without stand (kg): 11.00 kg
- Product with packaging (kg): 21.48 kg

## Operating conditions

- Temperature range (operation): 0°C to 40 °C
- Temperature range (storage): -20°C to 60 °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF (demonstrated): 70,000 hrs (excluded

backlight)

## Sustainability

- Environmental and energy: EnergyStar 8.0, EPEAT\*, TCO Certified Edge, RoHS, WEEE
- Recyclable packaging material: 100 %
- Post consumer recycled plastic: 85%
- Specific Substances: PVC / BFR free housing, Mercury free

## Compliance and standards

- Regulatory Approvals: CB, CE Mark, FCC Class B, cETLus, CU-EAC, TUV Ergo, TUV/GS, ICES-003, PC-Recycle, PSB

## Cabinet

- Front bezel: Black
- Rear cover: Black
- Foot: Black
- Finish: Texture

## Accessories

- Included Accessories: Philips RC6 remote control



Issue date 2023-09-28

Version: 9.0.1

12 NC: 8670 001 60686  
EAN: 87 12581 76011 3

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

- \* Radius of the arc of the display curvature in mm
- \* The maximum resolution works for either USB-C, DP or HDMI input.
- \* Response time value equal to SmartResponse
- \* BT, 709 / DCI-P3 Coverage based on CIE1976
- \* NTSC Area based on CIE1976
- \* sRGB Area based on CIE1931
- \* Adobe RGB Coverage based on CIE1976
- \* Display colors: 10bits can be reached by QHD@170Hz with DP port (DP 10bits support 4:4:4) and QHD@144Hz with HDMI port (HDMI 10bits support 4:2:2 / 4:2:0).
- \* DisplayPort 1.4 version is for HDR
- \* Activities such as screen sharing, on-line streaming video and audio over the Internet can impact your network performance. Your hardware, network bandwidth and its performance will determine overall audio and video quality.
- \* For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
- \* For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
- \* If your Ethernet connection seems slow, please enter OSD menu and select USB 3.0 or higher version which can support the LAN speed to 1G.
- \* EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.
- \* The monitor may look different from feature images.