



Philips Signage Solutions
Video Wall Display

55"

Direct LED Backlight
Full HD
500cd/m²

SignageSolutions

BDL5588XL

Create new stopping power

with Ultra Narrow Bezel displays

Impress your audience with the most impactful video wall. With ultra narrow bezel and stunning picture quality, you are sure to create the most memorable visual experience

Optimized for public viewing

- Full HD LED technology for brilliant images
- IPS wide view technology for image and color accuracy
- Designed for 24/7 operation

Maximizing the impact of your message

- Immersive visual experience with Ultra Narrow Bezel
- Colour Calibration kit to ensure uniform colours
- Manage and control your video wall remotely via SmartControl

Innovative solutions for any signage application

- Optional OPS Insert to create an all-in-one solution

Care about you, your business and your audience

- SmartPower for energy saving
- Keep your content up and running with FailOver

Highlights

Full HD LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

IPS Display Technology

Philips IPS displays uses an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle - even in portrait mode. IPS displays gives you remarkably crisp images with vivid colors, especially suitable for professional video wall and menuboard applications which demand color accuracy and consistent brightness at all times.

Ultra Narrow Bezel



The next generation of video wall displays is designed with industry narrowest bezels and advanced alignment solutions. Fully exploit your impactful signage content with ultra narrow bezel displays, and make sure your message does not get lost by thick bezels. With the ultra narrow bezels you can create seamless video wall configurations of virtually any size.

SmartControl

Connect and control your video wall from a central admin computer. SmartControl is display-based software to manage your network of displays from a single location via RJ45 and RS232. Easily identify your displays and fine-tune all display settings including resolution, brightness, contrast and SmartPower.

Advanced Colour Calibration



The Advanced Colour Calibration kit controls the luminance of the backlight, standardizes the gamma curve and calibrates the greyscale of your display network. Whether you have an impressive video wall, a catchy mosaic layout, a menu board installation or a control room each display can be adjusted to the same colour values. With this optional kit you ensure consistent colour performance over all displays in your network.

FailOver

Keeping your content up and running is critical for demanding commercial applications. While it is unlikely you will face a content disaster, FailOver provides content protection with a revolutionary technology that plays back-up content on screen in the event of a media player failure. FailOver automatically kicks in when the primary input fails. Simply select a primary input connection and a FailOver connection and your ready for instant protection.

SmartPower

The backlight intensity can be controlled and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs.

OPS Insert

Turn your display into an all-in-one digital signage solution and create a display network which is connected, intelligent and secure. Open Pluggable Specification (OPS) is an industry standard slot into which you can add an OPS-standardized media player. This cable free solution gives you the ability to install, use or maintain your hardware whenever you need.

Designed for 24/7 operation

Because business never sleeps, our signage displays are designed for 24/7 use. Taking advantage of superior components to ensure a higher level of quality, you can count on this range of models for complete around-the-clock reliability.

SmartCollection

SmartCollection

SmartCollection offers you customizable solutions to meet your specific requirements.

Both integrators and solution providers are offered the latest innovations, while the audience can enjoy impactful solutions. When developing smart innovations we focus on Caring, Innovative and Impactful solutions.

Specifications

Picture/Display

- Diagonal screen size: 54.6 inch / 138.7 cm
- Panel resolution: 1920x1080p
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 500 cd/m²
- Contrast ratio (typical): 1400:1
- Dynamic contrast ratio: 500,000:1
- Response time (typical): 12 ms
- Aspect ratio: 16:9
- Viewing angle (H / V): 178 / 178 degree
- Pixel pitch: 0.63 x 0.63 mm
- Display colors: 1073 M
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Motion compens. deinterlacing, Progressive scan, 3D MA deinterlacing, Dynamic contrast enhancement

Supported Display Resolution

• Computer formats

Resolution	Refresh rate
640 x 480	60, 67, 72, 75Hz
800 x 600	56, 60, 72, 75Hz
1024 x 768	60Hz
1280 x 768	60Hz
1280 x 800	60Hz
1280 x 1024	60Hz
1360 x 768	60Hz
1366 x 768	60Hz
1440 x 900	60Hz
1600 x 1200	60Hz
1920 x 1080	60Hz
1920 x 1200	60Hz

• Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576p	50Hz
576i	50Hz
720p	50, 60Hz
1080i	50, 60Hz
1080p	50, 60Hz

Connectivity

- Video input: Component (RCA), Composite (RCA), DVI-D, HDMI (x2), VGA (Analog D-Sub), DisplayPort (1.2)
- Video output: DisplayPort, DVI-I, VGA (via DVI-I)
- Audio input: 3.5 mm jack, Audio Left/Right (RCA)
- Audio output: Audio Left/Right (RCA), External speaker connector
- External control: IR (in/out) 3.5 mm jack, RJ45,

- RS232C (in/out) 2.5 mm jack
- Other connections: OPS

Convenience

- Signal loop through: RS232, VGA, DisplayPort, DVI, IR Loopthrough
- Ease of installation: Carrying Handles
- Energy saving functions: Ambient light sensor, Smart Power
- Network controllable: RS232, RJ45, Card OPS RS232, One Wire (HDMI-CEC)
- Placement: Portrait, Landscape
- Screen saving functions: Pixel Shift, Low Bright
- Tiled Matrix: Up to 10 x 10

Dimensions

- Bezel thickness: 3.5 mm A-to-A
- Bezel width: Top/Left: 2.3mm, Bottom/Right: 1.2mm
- Set dimensions (W x H x D): 1213.4 x 684.2 x 103.35 mm
- Product weight: 29.2 kg
- Wall Mount: 400 x 400 mm

Operating conditions

- Temperature range (operation): 0 ~ 40 °C
- Temperature range (storage): -20 ~ 60 °C
- Altitude: 0 ~ 3000 m
- Relative humidity: 20 ~ 80 %
- MTBF: 50,000 hour(s)

Power

- Consumption (On mode): 110 W (EnergyStar 6.0 test method)
- Standby power consumption: <0.5W

Sound

- Built-in speakers: 2 x 10W (RMS)

Accessories


- Included accessories: Remote Control, Batteries for remote control, AC Power Cord, VGA cable, RS232 cable, User manual on CD-ROM, Quick start guide, Edge alignment pins, Edge alignment plates
- Optional accessories: Edge finishing kit, ColourCalibrationKit (CCK4602), HDBaseT OPS Receiver (CRD25)

Miscellaneous

- On-Screen Display Languages: Arabic, Simplified Chinese, Traditional Chinese, English, French,

- German, Italian, Japanese, Polish, Russian, Spanish, Turkish

- Regulatory approvals: CE, FCC, Class B, UL/cUL, CB, GOST, EPEAT
- Warranty: 3 year warranty

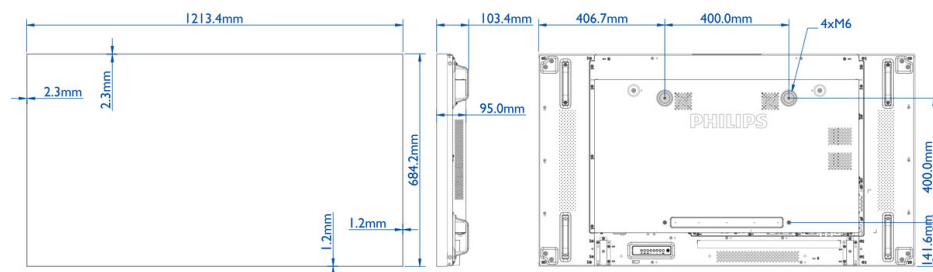

Issue date 2022-07-14

Version: 4.3.1

12 NC: 8670 001 22362
EAN: 87 12581 73040 6

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com