




Philips  
LCD monitor with LED  
backlight

- V-line
- 19" / 48.3 cm

190V4LAB

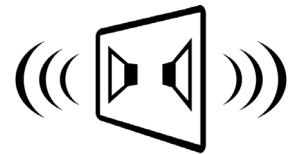

**Built-in** Speakers

## Enjoy great LED pictures in vivid colors

with stereo speakers

Enjoy vivid LED pictures with this attractive, glossy design display. Equipped with stereo speakers and SmartControl lite, it's a great choice!

### **Vivid pictures every time**

- LED technology for vivid colors
- SmartContrast for rich black details
- Bigger viewing area with 16:10 format
- Easy display performance tuning with SmartControl Lite

### **Modern design**

- Attractive glossy design
- Small footprint saves space
- VESA mount allows for flexibility

### **Greener everyday**

- Mercury Free eco-friendly display
- Energy Star for energy efficiency and low power consumption
- Low power consumption saves energy bills

### **Experience multimedia**

- Powerful sound with 2x2 watts RMS speakers

# PHILIPS

# Highlights

## LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

## Built-in stereo speakers

Now you can enjoy all your multimedia and social applications with stereo sound. These built in speakers not only sound great, but also helps you to get rid of external wire clutter and save valuable desktop space.

## SmartControl Lite

SmartControl Lite is the next generation 3D icon based GUI monitor control software. This allows user to fine-tune most parameters of the monitor like Color, Brightness, screen

calibration, Multi-media, ID management, etc with the mouse.

## SmartContrast



SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

## Mercury Free

Philips monitors with LED backlighting are free of Mercury content, one of the most toxic natural substances which affects humans and animals. This allows for a eco-friendly display through out its life-cycle from manufacturing to disposal.

## Energy Star 5.0

Energy Star is a US EPA sponsored energy efficiency program also adopted by many other countries. Energy Star certification ensures that you are buying a product which meets the latest power efficiency standards which operates with maximum power efficiency at all operational levels. New Philips monitors are certified for Energy Star 5.0 specifications and meet or exceed the standard. For example, in sleep mode Energy Star 5.0 requires less than 1watt power consumption, whereas Philips monitors consume less than 0.5watts. Further details can be obtained from [www.energystar.gov](http://www.energystar.gov)



# Specifications

## Picture/Display

- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Panel Size: 19 inch / 48.3 cm
- Effective viewing area: 408.24 (H) x 255.15 (V)
- Aspect ratio: 16:10
- Optimum resolution: 1440 x 900 @ 60 Hz
- Response time (typical): 5 ms
- Brightness: 250 cd/m<sup>2</sup>
- SmartContrast: 10,000,000:1
- Contrast ratio (typical): 1000:1
- Pixel pitch: 0.2835x0.2835 mm
- Viewing angle: 170° (H) / 160° (V), @ C/R > 10
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

## Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green
- Audio In/Out: PC audio-in

## Convenience

- Built-in Audio: 2.0W x 2
- User convenience: Auto/Down, Brightness/Back, Menu/OK, Power On/Off, Volume/Up
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Spanish, Simplified Chinese, Turkish
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7, Windows XP

## Stand

- Tilt: -5/20 degree

## Power

- On mode: 14.53 W (EnergyStar 5.0 test method)
- Standby mode: 0.5 W
- Off mode: 0.5 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50-60Hz

## Dimensions

- Product with stand (mm): 442 x 373 x 201 mm
- Product without stand (mm): 442 x 305 x 48 mm
- Packaging in mm (WxHxD): 490 x 378 x 124 mm

## Weight

- Product with stand (kg): 2.98 kg
- Product without stand (kg): 2.65 kg
- Product with packaging (kg): 4.03 kg

## Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- MTBF: 30,000 hour(s)

## Sustainability

- Environmental and energy: EnergyStar 5.0, EPEAT Silver, RoHS, Lead-free, Mercury Free
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, PSB, SASO, SEMKO, TCO certified, TUV/ISO9241-307, UL/cUL, WEEE

## Cabinet

- Color: Black
- Finish: Glossy (front bezel) /Texture (rear cover)



Issue date 2013-06-06

Version: 2.0.1

12 NC: 8670 000 92919  
EAN: 87 12581 65345 3

© 2013 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)