

Philips Evnia Gaming  
Monitor  
Quad HD gaming monitor

### Evnia 5000

32 (31.5"/80 cm diag.)  
2560 x 1440 (QHD)

32M1N5500VS



## Feel your game

This Philips gaming monitor delivers crystal-clear visuals and smooth gameplay. A rapid 165 Hz with DisplayHDR 400 create a polished and lifelike experience. The slim-frame display with Ultra Wide-Color enhances visual immersion.

#### Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- Built-in stereo speakers for multimedia
- LowBlue mode and Flicker-free easy-on-the eyes viewing
- SIAA-certified antibacterial treatment to keep surfaces sanitary

#### Immersive visuals

- VA display delivers awesome images with wide viewing angles
- Crystal clear images with Quad HD 2560 x 1440 pixels
- Ultra Wide-Color wider range of colours for a vivid picture
- SmartImage HDR gives optimal viewing from your HDR content

#### The gaming advantage is yours

- 165 Hz refresh rates for ultra-smooth, brilliant images
- 1 ms (MPRT) fast response for crisp images and smooth gameplay
- AMD FreeSync™ Premium; tear free, stutter free, fluid gaming
- Low input lag reduces time delay between devices to monitor

EVNIA

PHILIPS

Quad HD gaming monitor  
Evnia 5000 32 (31.5"/80 cm diag.), 2560 x 1440 (QHD)

32M1N5500VS/01

# Highlights

## AMD FreeSync™ Premium



Gaming shouldn't be a choice between choppy gameplay or broken frames. AMD FreeSync™ Premium equips serious gamers with a fluid, tear-free gameplay experience at peak performance. There are no compromises, game confidently with a high refresh rate, low framerate compensation and low latency.

## 165 Hz Gaming




You play intense, competitive gaming. You demand display with lag free, ultra-smooth images. This Philips display redraws the screen image up to 165 times per second, effectively faster than a standard display. A lower frame rate can make enemies appear to jump from spot to spot on the screen, making them difficult targets to hit. With 165 Hz frame rate, you get those critical missing images on the screen which shows enemy movement in ultra-smooth motion so you can easily target them. With ultra-low input lag and no screen tearing, this Philips display is your perfect gaming partner

## 1 ms MPRT fast response




MPRT (motion picture response time) is a more intuitive way to describe response time, which directly refers to the duration between seeing blurry noise and clean, crisp images. The Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur and delivers sharper and more precise visuals to enhance your gaming experience. The best choice for playing thrilling and twitch-sensitive games.

## Low Input Lag

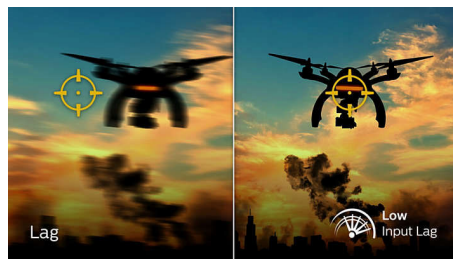

Input lag is the amount of time that elapses between performing an action with connected devices and seeing the result on screen. Low input lag reduces the time delay between entering a command from your devices to monitor, greatly improving play on twitch-sensitive video games, particularly important for playing fast-paced, competitive games.

## CrystalClear images

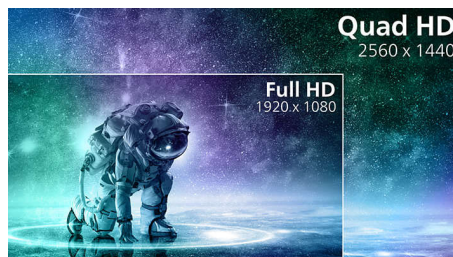

These Philips screens deliver Crystal Clear, Quad HD 2560 x 1440 or 2560 x 1080 pixel

images. Utilising high-performance panels with a high-density pixel count, enabled by high bandwidth sources like USB-C, Displayport and HDMI, these new displays will make your images and graphics come alive. Whether you are a demanding professional who requires extremely detailed information for CAD-CAM solutions and uses 3D graphic applications, or a financial wizard working on huge spreadsheets, Philips displays will give you Crystal Clear images.

## SmartImage HDR



Select one of SmartImage HDR modes to best suit your needs. HDR Game: optimised for playing video games. With brighter white and darker black, the gaming scene is vivid and reveals more details, easily spot enemies hiding in the dark corners and shadows. HDR Movie: ideal for watching HDR movie. Delivers better contrast and brightness for a more realistic and immersive viewing experience. HDR Photo: enhanced red, green and blue for lively visuals. DisplayHDR: VESA DisplayHDR certified\*. Personal: customised settings in picture menu. \*Please refer to specification for HDR grade.

## Antibacterial-treated surface



Bacteria are often transferred by touching infected surfaces. Philips introduces antibacterial agents with ionic silver treatment on monitor surfaces to inhibit bacterial growth and reduce bacterial adhesion on parts that are constantly touched, in order to keep the surface clean and reduce the spread of bacteria.



# Specifications

## Connectivity

- Signal Input: HDMI 2.0 x 2, DisplayPort 1.4 x 2
- Sync Input: Separate Sync
- Audio (In/Out): Audio out
- USB: USB-B x 1 (upstream), USB 3.2 Gen 1 x 4 (downstream with 2 fast charge B.C 1.2)
- HDCP: HDCP 1.4 (HDMI/DP), HDCP 2.2 (HDMI/DP)

## Picture/Display

- Panel Size: 31.5 inch/80 cm
- Aspect ratio: 16:9
- LCD panel type: VA LCD
- Backlight type: W-LED system
- Pixel pitch: 0.2724 x 0.2724 mm
- Brightness: 550 cd/m<sup>2</sup>
- Display colours: 16.7 M
- Colour gamut (typical): NTSC 100.8%\*, sRGB 120.6%\*, Adobe RGB 89.9%\*
- Contrast ratio (typical): 3000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 4 ms (Grey to Grey)\*
- Viewing angle: 178° (H)/178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage game
- Maximum resolution: HDMI: 2560 x 1440 @ 144 Hz, DP: 2560 x 1440 @ 165 Hz\*
- Effective viewing area: 697.344 (H) x 392.256 (V)
- Scanning Frequency: HDMI: 30 - 230 kHz (H) / 48 - 144 Hz (V), DP: 30 - 250 kHz (H) / 48 - 165 Hz\* (V)
- sRGB
- Delta E: <math>\leq 2</math> (sRGB)
- Flicker-free
- Pixel Density: 93.24 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- SmartUniformity: 93 ~ 105%
- MPRT: 1 ms
- Low Input Lag
- EasyRead
- AMD FreeSync™ technology: Premium
- HDR: DisplayHDR 400 certified

## Convenience

- Built-in Speakers: 5 W x 2
- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu/OK, Input/Up, Game Settings/Down, SmartImage game/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese,

- Swedish, Turkish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)

## Stand

- Tilt: -5/20 degree

## Power

- Power supply: Internal, 100–240 VAC, 50–60 Hz
- Off mode: 0.3 W (typ.)
- On mode: 49.2 W (typ.)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)
- Energy Label Class: F

## Dimensions

- Packaging in mm (W x H x D): 930 x 524 x 162 mm
- Product without stand (mm): 715 x 420 x 60 mm
- Product with stand (max height): 715 x 639 x 297 mm

## Weight

- Product with packaging (kg): 13.31 kg
- Product with stand (kg): 8.65 kg
- Product without stand (kg): 7.20 kg

## Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40 °C
- MTBF: 50 000 (Excluded backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60 °C

## Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC/BFR free housing, SIAA

## Compliance and standards

- Regulatory Approvals: CB, CE Mark, FCC Class B, ICES-003, CU-EAC, EAEU RoHS, TUV/ISO9241-307, TUV-BAUART

## Cabinet

- Colour: Black
- Finish: Textured

## What's in the box?

- Cables: HDMI cable, DisplayPort cable, USB upstream cable, Power cable
- Monitor with stand
- User Documentation

Issue date 2024-04-21

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Version: 6.2.1

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

EAN: 87 12581 78115 6

[www.philips.com](http://www.philips.com)

\* The maximum resolution works for DP input only.

\* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.

\* Response time value equal to SmartResponse

\* MPRT adjusts the brightness for blur reduction, so the brightness cannot be adjusted while MPRT is turned on. To reduce motion blur, the LED backlight will strobe in time with the screen refresh rate, which may cause a noticeable change in brightness.

\* MPRT is a gaming-optimised mode. Turning on MPRT may cause noticeable screen flickering. It is recommended to turn this mode off when you are not using the gaming function.

\* NTSC Area based on CIE 1976

\* sRGB Area based on CIE1931

\* Adobe RGB Coverage based on CIE 1976

\* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.

\* The monitor may look different from feature images.