



Philips Brilliance
LCD monitor, LED
backlight

B Line

19" (48.3 cm)
1280 x 1024 (SXGA)

19B4LCB5

Sustainable productivity

with energy efficient ergonomic LED display

The Philips LED display using 25% recycled materials and PVC, BFR free housing is ideal for eco-friendly productivity

Excellent performance

- Built-in stereo speakers for multimedia
- LED technology ensures natural colors
- TrueVision ensures lab quality images

Designed for people

- Low bezel-to-table height for maximum reading comfort
- SmartErgoBase enables people-friendly ergonomic adjustments

Sustainable Eco-design

- SmartPower: Up to 50% power saving
- PVC-BFR free housing

Easy to experience

- SmartControl for easy performance tuning
- SmartImage presets for easy optimized image settings

PHILIPS

LCD monitor, LED backlight
B Line 19" (48.3 cm), 1280 x 1024 (SXGA)


19B4LCB5/27

Highlights

LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

SmartErgoBase

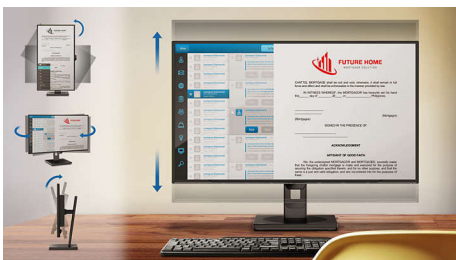

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height adjustable stand guarantees the optimal viewing level, reducing the physical strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.

Low bezel-to-table height



The Philips monitor, thanks to its advanced SmartErgoBase, can be lowered down almost to desk level for a comfortable viewing angle. Low bezel-to-table height is the perfect solution if

you use bifocals, trifocals or progressive lens glasses for your computing work. Additionally, it allows for users with greatly different heights to use the monitor in their preferred angle and height settings, helping them reduce fatigue and strain.

Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

SmartImage



SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power

savings. All in real time with the press of a single button!

SmartControl for easy tuning

PC software for fine tuning display performance and settings. Philips offers users two choices for display setting adjustment. Either navigate the multilevel On Screen Display menu through buttons on the display itself or use the Philips SmartControl software to easily adjust the various display settings in a familiar way

SmartPower

SmartPower is an artificial intelligent technology which dynamically analyzes the content of the screen image to achieve power saving. The backlight intensity can be controlled automatically and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs

TrueVision



TrueVision is a proprietary Philips technology that uses advanced algorithm for testing and aligning monitor display which gives you the ultimate display performance. Philips ensures TrueVision monitors leave the factory fine-tuned with this process giving you consistent color and picture quality.

PVC-BFR free housing

This Philips monitor housing is free from brominated flame retardant and polyvinyl chloride (PVC-BFR free)



Specifications

Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

Picture/Display

- Panel Size: 19 inch / 48.3 cm
- Aspect ratio: 5:4
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.294 x 0.294 mm
- Optimum resolution: 1280 x 1024 @ 60 Hz
- Brightness: 250 cd/m²
- Display colors: 16.7 M
- Contrast ratio (typical): 1,000:1
- SmartContrast: 20,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 170° (H) / 160° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Effective viewing area: 376.32 (H) x 301.06 (V)
- Scanning Frequency: 30 - 83 kHz (H) / 56 - 75 Hz (V)
- sRGB

Convenience

- Built-in Speakers: 1.5W x 2
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 8/7/Vista
- User convenience: SmartImage, SmartPower, Menu, Power On/Off, Volume
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Control software: SmartControl Premium

Stand

- Height adjustment: 110 mm
- Pivot: 90 degree
- Swivel: -65/65 degree
- Tilt: -5/20 degree

Power

- ECO mode: 9 W (typ.)
- Power supply: 100-240VAC, 50-60Hz, Built-in
- Off mode: 0.1 W (typ.)

- On mode: 14 W (typ.) (EnergyStar 6.0 test method)
- Standby mode: 0.1 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

- Packaging in mm (WxHxD): 460 x 448 x 159 mm
- Product without stand (mm): 404 x 346 x 61 mm
- Packaging in inch (WxHxD): 18.1 x 17.6 x 6.26 inch
- Product without stand in inch: 15.9 x 13.6 x 2.4 inch
- Product with stand(max height): 404 x 506 x 227 mm
- Product with stand(max height): 15.9 x 19.9 x 8.9 inch

Weight

- Product with packaging (kg): 6.48 kg
- Product with stand (kg): 4.61 kg
- Product with packaging (lb): 14.26 lb
- Product with stand (lb): 10.14 lb
- Product without stand (kg): 2.71 kg
- Product without stand (lb): 5.96 lb

Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0 to 40 °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20 to 60 °C

Sustainability

- Environmental and energy: EnergyStar 6.0, EPEAT*, TCO Certified, RoHS
- Recyclable packaging material: 100 %
- Specific Substances: PVC / BFR free housing, Mercury free
- Recycled material: 25%

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, cETLus, FCC Class B, GOST, SEMKO, TUV Ergo, TUV/GS, WEEE

Cabinet

- Finish: Texture
- Foot: Black
- Front bezel: Black
- Rear cover: Black



Issue date 2024-03-25

Version: 2.0.1

UPC: 6 09585 23577 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.