



Philips Brilliance  
IPS LCD monitor, LED  
backlight

**P Line**  
23" (58.4 cm)  
Full HD display

**231P4QRYEB**

# World's first ErgoSensor display

for a healthy, productive workplace

The innovative Philips ErgoSensor monitor is the world's first intelligent display that can advise you how to sit in an ergonomically correct position at your computer screen

## Brilliant performance

- DisplayPort offers audio and video over a single, long cable
- IPS LED wide view technology for image and color accuracy

## Designed for people

- Low bezel-to-table height for maximum reading comfort
- SmartErgoBase enables people-friendly ergonomic adjustments

## ErgoSensor for ultimate ergonomics

- Optimal viewing distance measurement and advice
- Neck posture detection and corrective advice
- Time-break reminder
- ErgoSensor for a healthier way of working

## Sustainable Eco-design

- Zero power consumption with 0 watt hard switch

**PHILIPS**

IPS LCD monitor, LED backlight  
P Line 23" (58.4 cm), Full HD display

# Highlights

## ErgoSensor

It is Philips firm belief that work should be suited to people, and not the other way around. To promote a healthier and productive workplace, Philips has developed world's first innovative technology called "ErgoSensor" which is embedded in the monitor to sense and measure the user's behavior. ErgoSensor advises users how to sit in an ergonomic position at their computer with a corrective feedback on optimal viewing distance, ergonomic neck angle, and a time break advice. It also saves upto 80% energy consumption if user is not present on the seat by powering off the monitor.

## IPS technology




IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle - even in 90 degree Pivot mode! Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

## DisplayPort

DisplayPort is a digital link from PC to Monitor without any conversion. With higher capabilities than DVI standard, it is fully capable

to support up to 15meter cables and 10.8 Gbps/sec data transfer. With this high performance and zero latency, you get the fastest imaging and refresh rates - making DisplayPort the best choice for not only general office or home use, but also for the demanding gaming and movies, video editing and more. It also keeps interoperability in mind via use of various adapters.

## SmartErgoBase

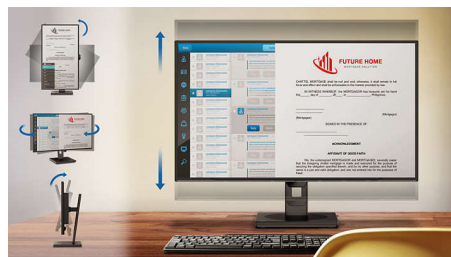

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height adjustable stand guarantees the optimal viewing level, reducing the physical strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.

231P4QRYEB/69

## Low bezel-to-table height



The Philips monitor, thanks to its advanced SmartErgoBase, can be lowered down almost to desk level for a comfortable viewing angle. Low bezel-to-table height is the perfect solution if you use bifocals, trifocals or progressive lens glasses for your computing work. Additionally, it allows for users with greatly different heights to use the monitor in their preferred angle and height settings, helping them reduce fatigue and strain.

## Zero power consumption

At the flick of the 0 watt hard switch which is conveniently located at the back, you can completely cut-off your monitor from AC power. This results in zero power consumption reducing your carbon footprint even further

## Viewing distance advice

Optimal viewing distance measurement and advice

## Time-break reminder

Time-break reminder

## Posture detection and correcti

The innovative Philips ErgoSensor monitor with intelligent posture detection sensor interactively advises you to sit in an ergonomically correct position at your computer screen.



# Specifications

## Connectivity

- Signal Input: DisplayPort x 1, DVI-D (digital, HDCP), VGA (Analog)
- USB: USB 2.0 x 4
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

## Picture/Display

- Panel Size: 23 inch / 58.4 cm
- Aspect ratio: 16:9
- LCD panel type: IPS LCD
- Backlight type: W-LED system
- Pixel pitch: 0.265 x 0.265 mm
- Optimum resolution: 1920x 1080 @ 60Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 20,000,000:1
- Response time (typical): 14 ms
- Viewing angle: 178° (H) / 178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage
- Effective viewing area: 509.18 (H) x 286.41 (V)
- Scanning Frequency: 30 - 83 kHz (H) / 56 - 75 Hz (V)
- sRGB
- SmartResponse (typical): 7 ms (Gray to Gray)

## Convenience

- Built-in Speakers: 1.5Wx2
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7/Vista/XP
- User convenience: SmartImage, Volume, Ergo, Menu, Power On/Off
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Simplified Chinese, Spanish
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Control software: SmartControl Premium

## Stand

- Height adjustment: 130 mm
- Pivot: 90 degree, clockwise, auto pivot
- Swivel: -65/65 degree
- Tilt: -5/20 degree

## Power

- ECO mode: 18 W (typ.)
- Power supply: 100-240VAC, 50-60Hz, Built-in
- Off mode: Zero watts with Zero switch
- On mode: 29.1 W (EnergyStar 5.0 test method)
- Standby mode: 0.3 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Product with stand (mm): 547 x 515 x 220 mm
- Packaging in mm (WxHxD): 600 x 400 x 263 mm
- Product without stand (mm): 547 x 343 x 60 mm

## Weight

- Product with packaging (kg): 7.70 kg
- Product with stand (kg): 5.23 kg
- Product without stand (kg): 3.09 kg

## Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability


- Environmental and energy: ErgoSensor, EnergyStar 5.0, TCO Certified Edge, RoHS
- Post consumer recycled plastic: 65%
- Recyclable packaging material: 100 %
- Specific Substances: PVC / BFR free housing, Mercury free

## Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, SASO, SEMKO, TUV Ergo, TUV/GS, UL/cUL, WEEE

## Cabinet

- Finish: Texture
- Foot: Black
- Front bezel: Black
- Rear cover: Black

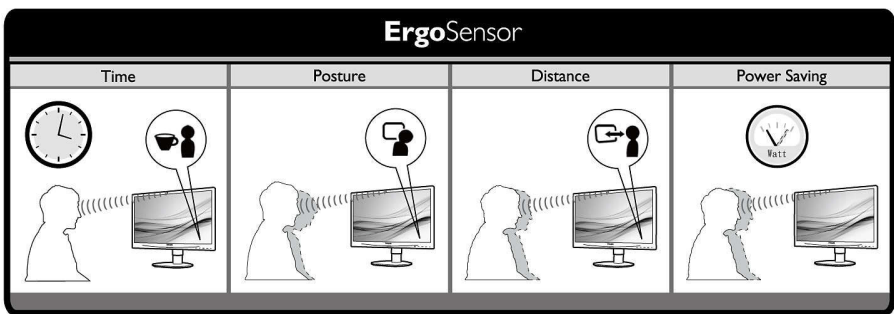

Issue date 2024-03-24

Version: 5.0.1

EAN: 87 12581 64137 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)