




Philips
LCD monitor, LED
backlight with SmartImage
Lite

- E-line
- 21.5" / 54.6 cm
- Full HD display

227E4LHAB

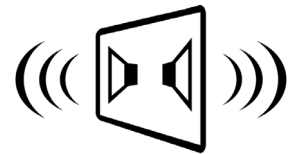

Built-in Speakers

Elegant display enhances your viewing experience

with stereo speakers

Experience awesome LED pictures with natural colors on this elegant and slim design display/ With features like HDMI and stereo speakers it's ready to entertain you!

Superb Picture Quality

- LED technology for natural colors
- 16:9 Full HD display for best viewing experience
- Fast response time up to 2ms
- TrueVision ensures lab quality images
- SmartImage Lite for an enhanced LCD viewing experience

Elegant Design

- Elegant, slim design complements your home decor
- Modern Touch controls

Experience multimedia

- HDMI-ready for Full HD entertainment
- Powerful sound with 2x2 watts RMS speakers

Greener everyday

- Low power consumption saves energy bills
- Mercury Free eco-friendly display

PHILIPS

Highlights

LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

SmartImage Lite

SmartImage Lite is an exclusive, leading edge Philips technology that analyzes the content displayed on your screen. Based on a scenario you select, SmartImage Lite dynamically enhances the contrast, color saturation and sharpness of images and videos for ultimate display performance - all in real time with the press on a single button.

HDMI Ready



HDMI ready

A HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input, high quality digital video and audio signals all transmitted over a single cable from a PC or any number of AV sources including set-top boxes, DVD players and A/V receivers and video cameras.

Built-in stereo speakers

Now you can enjoy all your multimedia and social applications with stereo sound. These built in speakers not only sound great, but also

helps you to get rid of external wire clutter and save valuable desktop space.

16:9 Full HD



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

TrueVision



TrueVision is a proprietary Philips technology that uses advanced algorithm for testing and aligning monitor display which gives you the ultimate display performance that is 4 times more stringent than Windows sRGB requirements. Only Philips ensures each and every monitor that leaves the factory is fine

tuned with this process so you can get consistent color and picture quality.

2ms GtG response time



2ms GtG response time > 2ms GtG response time

SmartResponse is an exclusive Philips overdrive technology that when turned on, automatically adjusts response times to specific application requirements like gaming and movies which require faster response times in order to produce judder, time-lag and ghost image free images

Touch controls

Touch controls are intelligent, touch sensitive icons that replace protruding buttons that let the user adjust the monitor to their requirement. Responding to your lightest touch, Touch control gives the monitor a modern feel

Mercury Free

Philips monitors with LED backlighting are free of Mercury content, one of the most toxic natural substances which affects humans and animals. This allows for an eco-friendly display throughout its life-cycle from manufacturing to disposal.



Specifications

Picture/Display

- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Panel Size: 21.5 inch / 54.6 cm
- Effective viewing area: 476.6 (H) x 268.1 (V)
- Aspect ratio: 16:9
- Optimum resolution: 1920 x 1080 @ 60Hz
- SmartResponse: 2 ms (Gray to Gray)
- Response time (typical): 5 ms
- Brightness: 250 cd/m²
- Contrast ratio (typical): 1000:1
- SmartContrast: 20,000,000:1
- Pixel pitch: 0.248 x 0.248 mm
- Viewing angle: 176° (H) / 170° (V), @ C/R > 5
- Picture enhancement: SmartImage Lite
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

Connectivity

- Signal Input: VGA (Analog), HDMI
- Sync Input: Separate Sync, Sync on Green
- Audio In/Out: PC audio-in, Headphone out

Convenience

- Built-in Speaker: 2Wx2
- User convenience: SmartImage lite, Input, Menu, Power On/Off, Volume
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Simplified Chinese, Spanish, Turkish
- Other convenience: Kensington lock
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7/Vista/XP

Stand

- Tilt: -5/20 degree

Power

- On mode: 17.2 W (EnergyStar 5.0 test method)
- Standby mode: 0.5 W
- Off mode: 0.3 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: External, 100-240VAC, 50-60Hz

Dimensions

- Product with stand (mm): 510 x 398 x 179 mm
- Product without stand (mm): 510 x 314 x 37 mm
- Packaging in mm (WxHxD): 562 x 475 x 98 mm

Weight

- Product with stand (kg): 2.20 kg
- Product without stand (kg): 1.83 kg
- Product with packaging (kg): 3.74 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF: 30,000 hour(s)

Sustainability

- Environmental and energy: EnergyStar 5.0, EPEAT Silver, RoHS, Lead-free, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, PSB, SASO, SEMKO, TCO 5.2, TUV/ISO9241-307, UL/cUL, WEEE

Cabinet

- Color: Black
- Finish: Glossy



Issue date 2013-06-06

Version: 1.0.1

12 NC: 8670 000 90907
EAN: 87 12581 64752 0

© 2013 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com