



Philips Brilliance
LCD monitor with
PowerSensor

P Line
23" (58.4 cm) Full HD

Brilliance

235P2ES



World's first PowerSensor display saves energy

Large eco-friendly Philips 235P2 Professional display with intelligent PowerSensor detects user presence and adjusts power consumption saving up to 80% of energy bills!

Sustainable Eco-friendly solution

- PowerSensor ensures lower operating costs by saving energy
- EPEAT Gold ensures lowest impact on environment
- 0.1 watt Soft-Off mode

Ergonomic design

- 130mm height adjustment for ideal sitting position
- 90 degree screen rotation and smart cable management
- Tilt and swivel adjustment for an ideal viewing angle

Outstanding display performance

- SmartImage: Optimized user-friendly display experience

Great convenience

- Built in stereo audio for multimedia experience
- USB port for convenient peripheral connections

PHILIPS

Highlights

PowerSensor



PowerSensor On


PowerSensor Off

PowerSensor is a built-in 'people sensor' that transmits and receives harmless infrared signals to determine if user is present and automatically reduces monitor brightness when user steps away from the desk, cutting energy costs by up to 80 percent and prolonging monitor life.

EPEAT Gold

Philips EPEAT GOLD certified monitors ensure protection for human health and environment, and are highly energy efficient ensuring low emissions of climate changing green house gases. EPEAT program helps purchasers evaluate, compare and select Monitors based on 51 environmental criteria supported by US EPA. GOLD certification ensures that at least 30% of plastic used is Post Consumer Resin, which ensures reduction in use of toxic and hazardous materials. EPEAT Gold is valid only where Philips registers the product. Please visit www.epeat.net for registration status in your country.

SmartImage

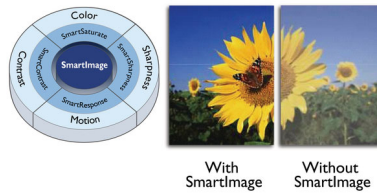

With SmartImage

Without SmartImage

SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Image, Entertainment, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

USB 2.0 port



USB port allows user to conveniently connect their plug and play multimedia devices such as USB memory devices, camera, portable HDD, Web camera, PDA, Printer and many other

devices which has USB connection available. The conveniently located USB 2.0 port on the monitor allows USB 2.0 signals to pass thru to the computer. Note that many devices like cameras and HDD may need to be powered On independently, as they have higher power requirements than the monitor USB port can provide

ScreenRotate

ScreenRotate makes it possible to use a monitor in either the landscape and portrait mode; to change orientation for a better view of a selected document or image, the monitor is rotated to the desired orientation.

Screen tilt and swivel

Screen tilt and swivel is a mechanism built into the base permits the monitor to swivel and tilt backward or forward.

130mm height adjustment

The Super Ergo Base is a 'people friendly' Philips monitor base that not only tilts and swivels, but is also height adjustable and pivots to 90 degree, so that each user can adjust the monitor to their personal preference for maximum viewing comfort and efficiency.

Built-in stereo audio

A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.



Specifications

Picture/Display

- LCD panel type: TFT-LCD
- Panel Size: 23 inch / 58.4 cm
- Aspect ratio: 16:9
- Optimum resolution: 1920 x 1080 @ 60Hz
- Response time (typical): 5 ms
- Brightness: 300 cd/m²
- Contrast ratio (typical): 1000:1
- SmartContrast: 500,000:1
- Pixel pitch: 0.265 x 0.265 mm
- Viewing angle: 176° (H) / 170° (V), @ C/R > 5
- Picture enhancement: SmartImage
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- USB: USB 2.0 x 1
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Stereo Audio, Earphone out (3.5 mm jack)x 1, PC audio-in

Convenience

- Built-in Audio: 1.5Wx2
- User convenience: SmartImage, Volume, Power On/Off, PowerSensor, Menu
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese
- Other convenience: VESA mount (100x100mm), Kensington lock
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7/Vista/XP

Stand

- Height adjustment: 130 mm
- Pivot: Yes (auto pivot)
- Swivel: -65/65 degree
- Tilt: -5/20 degree

Power

- On mode: 28.62 W (EnergyStar 5.0 test method)
- Standby mode: 0.1 W
- Off mode: 0.1 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50/60Hz

Dimensions

- Product with stand (mm): 566 x 517 x 250 mm
- Product without stand (mm): 566 x 360 x 57 mm
- Packaging in mm (WxHxD): 672 x 268 x 434 mm

Weight

- Product with stand (kg): 6.40 kg
- Product without stand (kg): 4.20 kg
- Product with packaging (kg): 8.10 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- MTBF: 50,000 hour(s)

Sustainability

- Environmental and energy: EPEAT Gold, RoHS, EnergyStar 5.0
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC, Class B, GOST, SEMKO, TCO 5.0, TUV/GS, TUV Ergo, UL/cUL

Cabinet

- Color: Silver/Black
- Finish: Texture



Issue date 2022-05-11

Version: 1.0.2

12 NC: 8670 000 68246
EAN: 87 12581 56450 6

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com