



Philips
LCD monitor with LED
backlight

V Line
21.5" (54.6 cm)

226V4LSB2

Enjoy great LED pictures in vivid colors

Enjoy vivid LED pictures with this attractive, glossy design display. Equipped with SmartControl lite, it's a great choice!

Vivid pictures every time

- LED technology for vivid colors
- SmartContrast for rich black details
- 16:9 Full HD display for best viewing experience
- Easy display performance tuning with SmartControl Lite

Modern design

- Attractive glossy design
- Small footprint saves space
- VESA mount allows for flexibility

Greener everyday

- Mercury Free eco-friendly display
- Energy Star for energy efficiency and low power consumption
- Low power consumption saves energy bills

PHILIPS

Specifications

Picture/Display

- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Panel Size: 21.5 inch / 54.6 cm
- Effective viewing area: 476.64 (H) x 268.11 (V)
- Aspect ratio: 16:9
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Response time (typical): 5 ms
- Brightness: 200 cd/m²
- SmartContrast: 10,000,000:1
- Contrast ratio (typical): 600:1
- Pixel pitch: 0.248x 0.248 mm
- Viewing angle: 90° (H) / 50° (V), @ C/R > 10
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

Connectivity

- Signal Input: VGA (Analog)
- Sync Input: Separate Sync, Sync on Green

Convenience

- User convenience: Auto/Down, 4:3 Wide/Up, Brightness/Back, Menu/OK, Power On/Off
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Simplified Chinese, Spanish, Turkish
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7, Windows XP

Stand

- Tilt: -5/20 degree

Power

- On mode: 19.18 W (typ.) (EnergyStar 6.0 test method)

- Standby mode: 0.5 W (typ.)
- Off mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50-60Hz

Dimensions

- Product with stand (mm): 514 x 388 x 213 mm
- Product without stand (mm): 514 x 320 x 48 mm
- Packaging in mm (WxHxD): 567x 396 x 124 mm

Weight

- Product with stand (kg): 3.34 kg
- Product without stand (kg): 3.00 kg
- Product with packaging (kg): 4.55 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF: 30,000 hour(s)

Sustainability

- Environmental and energy: EnergyStar 6.0, EPEAT Silver, RoHS, Lead-free, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, PSB, SASO, SEMKO, TUV/ISO9241-307, UL/cUL, WEEE

Cabinet

- Color: Black
- Finish: Glossy (front bezel) /Texture (rear cover)

Highlights


LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

SmartControl Lite

SmartControl Lite is the next generation 3D icon based GUI monitor control software. This allows user to fine-tune most parameters of the monitor like Color, Brightness, screen calibration, Multimedia, ID management, etc with the mouse.

SmartContrast

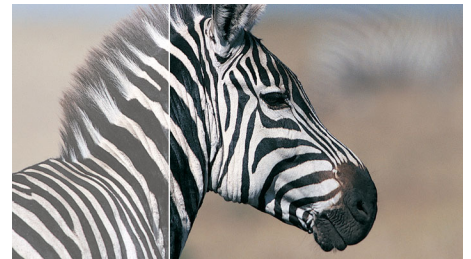

SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

16:9 Full HD



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

Mercury Free

Philips monitors with LED backlighting are free of Mercury content, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its life-cycle, from manufacturing to disposal.



Issue date 2022-04-21

Version: 3.1.1

12 NC: 8670 000 95242
EAN: 87 12581 66027 7

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com