



Philips Brilliance  
LED-backlit LCD monitor

### P Line

22 (21.5"/54.6 cm diag.)  
Full HD (1920 x 1080)

221P6QPYES

## Brilliant performance from every angle

with a full HD AH-IPS display

The Philips PowerSensor AH-IPS LED display, which uses 65% post-consumer recycled plastics and PVC, BFR-free housing, is ideal for eco-friendly productivity

#### Brilliant performance

- SmartImage pre-sets for easy optimised image settings
- AH-IPS display for brilliant images with vivid colours
- Less eye fatigue with Flicker-Free technology

#### Designed for people

- Low bezel-to-table height for maximum reading comfort
- SmartErgoBase enables user-friendly ergonomic adjustments

#### Sustainable Eco-design

- PowerSensor saves up to 80% energy costs
- LightSensor for the perfect brightness with minimal power

#### Easy to experience

- Built-in stereo speakers for multimedia
- DisplayPort connection for maximum visuals
- USB 3.0 Hub for convenient access and fast charging

# PHILIPS

LED-backlit LCD monitor  
P Line 22 (21.5"/54.6 cm diag.), Full HD (1920 x 1080)

# Highlights

## AH-IPS technology



This latest Philips display uses advanced AH-IPS panels, resulting in superior colour reproduction, response time and power consumption. Unlike standard TN panels, AH-IPS panels show consistent colour even at 178-degree wide angles and in pivot mode. With remarkable performance, AH-IPS is best suited for applications demanding colour accuracy and consistent brightness at all times, such as photo retouching, graphics applications and web browsing.

## Flicker-Free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

## SmartImage



SmartImage is an exclusive leading edge Philips technology that analyses the content displayed

on your screen and optimises your display performance. This user-friendly interface allows you to select various modes, like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimises the contrast, colour saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time at the touch of a single button!

## SmartErgoBase



The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The user-friendly height, swivel, tilt and rotation angle adjustments of the base allow the monitor to be positioned for maximum comfort to help ease the physical strains of a long workday. In addition, cable management reduces cable clutter and keeps the workspace neat and professional.

## Low bezel-to-table height



Thanks to its advanced SmartErgoBase, the Philips monitor can be lowered down almost to desk level for a comfortable viewing angle. Low bezel-to-table height is the perfect solution if you use bifocals, trifocals or progressive lens glasses for your computing work. Additionally, it allows users of different heights to use the monitor at their preferred

221P6QPYES/00

angle and height settings, helping them to reduce fatigue and strain.

## Built-in stereo speakers




A pair of high-quality stereo speakers built into a display device. They may be visible front firing, or invisible down firing, top firing, rear firing etc. depending on model and design.

## USB 3.0 Hub with FastCharge

Super Speed USB 3.0 deploys 5.0 gbit/s transfer rate, which is about 10 times faster than USB 2.0 standard, significantly reducing data transfer time to save you time and money. With more bandwidth, super speed transfer rates, better power management and superior overall performance, USB 3.0 sets the latest global standard and allows you to use large capacity storage devices. Now you don't have to wait so long for devices to charge. New FastCharge enables quick charging to charge and go. USB 3.0 is also backward compatible with USB 2.0 devices.

## LightSensor

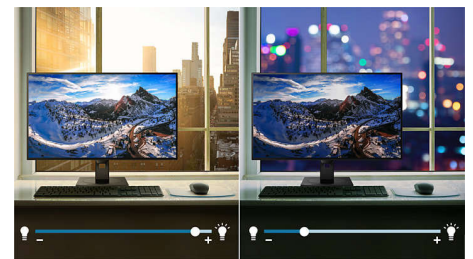

LightSensor uses a smart sensor to adjust the picture brightness depending on the light conditions in the room for the perfect picture with minimal power usage.



# Specifications

## Connectivity

- Signal Input: DisplayPort x 1, DVI-D (digital, HDCP), VGA (Analogue)
- USB: USB 3.0x4 (1 w/fast charging)\*
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

## Picture/Display

- Panel Size: 21.5 inch/54.6 cm
- Aspect ratio: 16:9
- LCD panel type: AH-IPS LCD
- Backlight type: W-LED system
- Pixel pitch: 0.248 x 0.248 mm
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colours: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 20,000,000:1
- Response time (typical): 14 ms
- Viewing angle: 178° (H)/178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage
- Effective viewing area: 476.06 (H) x 267.79 (V)
- Scanning Frequency: 30 - 83 kHz (H) / 56 - 76 Hz (V)
- sRGB
- SmartResponse (typical): 5 ms (Grey to Grey)

## Convenience

- Built-in Speakers: 2 W x 2
- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 8.1 / 8 / 7
- User convenience: SmartImage, Volume, PowerSensor, Menu, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)
- Control software: SmartControl Premium

## Stand

- Height adjustment: 130 mm
- Pivot: 90 degree
- Swivel: -175/+175 degree
- Tilt: -5/20 degree

## Power

- ECO mode: 13.4 W (typ.)

- Power supply: 100–240 VAC, 50–60 Hz, Built-in
- Off mode: Zero watts with AC switch
- On mode: 15.45 W (typ.) (EnergyStar 6.0 test method)
- Standby mode: &lt; 0.3 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)

## Dimensions

- Product with stand (mm): 511 x 488 x 257 mm
- Packaging in mm (W x H x D): 565 x 493 x 184 mm
- Product without stand (mm): 511 x 319 x 52 mm

## Weight

- Product with packaging (kg): 7.94 kg
- Product with stand (kg): 5.60 kg
- Product without stand (kg): 3.10 kg

## Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%–80% %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: PowerSensor, LightSensor, EnergyStar 6.0, TCO Certified Edge, RoHS
- Post-consumer recycled plastic: 65%
- Recyclable packaging material: 100 %
- Specific Substances: PVC/BFR free housing, Mercury free

## Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, cETLus, FCC Class B, GOST, SASO, SEMKO, TUV Ergo, TUV/GS, WEEE

## Cabinet

- Finish: Texture
- Foot: Black
- Front bezel: Silver
- Rear cover: Black

## What's in the box?

- Cables: VGA, DVI, DP, Audio, Power
- Monitor with stand
- User Documentation



Issue date 2024-04-08

Version: 3.0.1

EAN: 87 12581 72453 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* "AH-IPS" word mark/trademark and related patents on technologies belong to their respective owners.

\* Smart response time is the optimum value from either GtG or GtG (BW) tests.