



Philips Signage Solutions  
Q-Line Display

32"

Direct LED Backlight  
Full HD

**Signage**Solutions

32BDL3010Q

## Intensify your signage experience

Easy-setup 18/7 display.

Inform and enthrall with a Philips Q-Line Professional Full HD Display. This reliable solution can be up and running as quickly as you need-with no additional hardware.

### **Effortless setup. Total control.**

- Operate, monitor and maintain with CMND & Control

### **Cost-effective system solution**

- Energy-saving automatic backlight control
- Integrated media player. Easily schedule USB content
- Easy control. Remotely manage networked displays
- FailOver ensures content is always playing

**PHILIPS**

# Highlights

## CMND & Control




Run your display network over a local (LAN) connection. CMND & Control allows you to perform vital functions like controlling inputs and monitoring display status. Whether you're in charge of one screen or 100.

## Integrated media player

Easily schedule content to play from USB. Your Philips Professional Display will wake from standby to play the content you want, and then return to standby once playback is done.

## FailOver

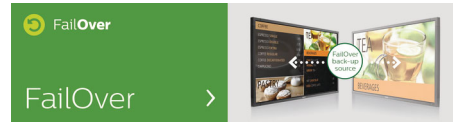

From waiting room to meeting room, never show a blank screen. FailOver lets your Philips

Professional Display switch automatically between primary and secondary inputs ensuring content keeps playing even if the primary source goes down. Simply set a list of alternate inputs to be sure your business is always on.

# Specifications

## Picture/Display

- Diagonal screen size: 31.5 inch / 80 cm
- Panel resolution: 1920x1080p
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 350 cd/m<sup>2</sup>
- Contrast ratio (typical): 1200:1
- Dynamic contrast ratio: 500,000:1
- Response time (typical): 8 ms
- Aspect ratio: 16:9
- Viewing angle (H / V): 178 / 178 degree
- Pixel pitch: 0.36375 x 0.36375 mm
- Display colors: 16.7 Million
- Panel technology: VA
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, 3D MA deinterlacing, Dynamic contrast enhancement, Motion compens. deinterlacing, Progressive scan
- Clinical image: D-Image preset (dicom part 14 compatible)

## Supported Display Resolution

### • Computer formats

Resolution	Refresh rate
1920 x 1080	60Hz
1680 x 1050	60Hz
1600 x 1200	60Hz
1440 x 900	60Hz
1280 x 1024	60Hz
1280 x 800	60Hz
1280 x 720	60Hz
1152 x 870	75Hz
1024 x 768	60, 70, 75Hz
800 x 600	56, 60, 72, 75Hz
720 x 400	70Hz
640 x 480	60, 67, 72, 75Hz

### • Video formats

Resolution	Refresh rate
1080p	60Hz
1080i	60Hz
1080i	50Hz
720p	60Hz
576p	50Hz
576i	50Hz
480p	60Hz
480i	60Hz

## Connectivity

- Video input: DVI-I (x 1), HDMI (x2), USB, VGA (via DVI)

- Audio input: 3.5 mm jack
- Audio output: Audio Left/Right (RCA)
- External control: RJ45, RS232C (in/out) 2.5 mm jack, IR (in/out) 3.5 mm jack

## Convenience

- Energy saving functions: Smart Power
- Tiled Matrix: Up to 15 x 15
- Start-up: Switch on delay, Switch on status, Boot on source
- Start-up window: enable / disable Philips logo
- Keyboard control: Lockable, Hidden
- Network controllable: RS232, RJ45
- Signal loop through: RS232, IR Loophrough
- Placement: Landscape
- Remote control signal: Lockable

## Dimensions

- Bezel width: 11.9 (TLR) / 17.2 (B) mm
- Set dimensions (W x H x D): 726.5 x 425.4 x 63.6 mm
- Set dimensions in inch (W x H x D): 28.6 x 16.75 x 2.5 inch
- Wall Mount: 100mm x100mm, 200mm x 200mm ,M4
- Product weight: 5.2 kg
- Product weight (lb): 11.47 lb

## Operating conditions

- Temperature range (operation): 5 ~ 40 °C
- Temperature range (storage): -20 ~ 60 °C
- MTBF: 50,000 hour(s)
- Altitude: 0 ~ 3000 m
- Humidity range (operation)[RH]: 20 ~ 80% RH (No condensation)
- Humidity range (storage) [RH]: 5 ~ 95% RH (No condensation)

## Power

- Consumption (On mode): 50 W
- Mains power: 100 - 240V~, 50-60Hz, 1.5A
- Standby power consumption: <0.5 W
- Consumption (Max): 75 W
- Consumption (Typical): 50 W
- Power Saving Features: Smart Power
- Energy Label Class: G

## Sound

- Built-in speakers: 2 x 10W RMS

## Multimedia Applications

- USB Playback Video: MPEG, H.264, JPEG
- USB Playback Picture: BMP, JPEG, PNG
- USB Playback Audio: AAC, WMA, HEAAC, MPEG


## Accessories

- Included accessories: AC Power Cord, RS232 cable, Remote Control, Batteries for remote control, Quick start guide
- Included Accessories: IR sensor cable (1.8 m) (x1), RS232 daisy-chain cable, USB Cover and screw x1
- Stand: BM02541/BM05911(optional)

## Miscellaneous

- Warranty: 3 year warranty
- On-Screen Display Languages: English, French, German, Italian, Polish, Turkish, Russian, Simplified Chinese, Spanish, Traditional Chinese, Arabic, Japanese
- Regulatory approvals: CB, CE, FCC, Class B

Philips 32BDL3010Q  
Version: 1.0  
Release Date: 2018/12/06

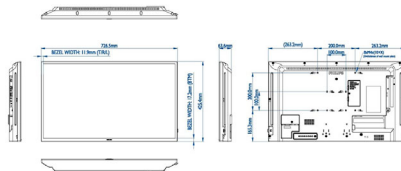

Issue date 2022-07-14

Version: 3.1.1

12 NC: 8670 001 56773  
EAN: 87 12581 75398 6

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)