

Philips Signage Solutions  
Q-Line Display

75"

3840 x 2160 (4K UHD)  
Ultra HD

75BDL3050Q



## Intensify your signage experience

With priceless performance

Deliver startlingly clear images in a more eco-friendly way with the Q-Line display. High on performance and reliability, yet low on power consumption, it is ideal for projects where no compromise is accepted.

### **Optimized for public viewing**

- 4K Ultra HD: resolution like you've never seen it before

### **Innovative solutions for any signage application**

- Connect and control your content via the cloud with HTML5
- Schedule what you want, when you want with SmartPlayer
- Android: Run your own app or choose your favorite app to run
- CMND: Take control of your displays
- Create and update content with CMND & Create

### **Care about you, your business and your audience**

- SmartPower for energy saving
- Manage settings of multiple displays with CMND & Control

# PHILIPS

Q-Line Display  
75" 3840 x 2160 (4K UHD), Ultra HD

# Highlights


## 4K Ultra HD Resolution

See your Signage Solutions like never before thanks to four times the resolution of a conventional Full HD display. 3840 x 2160 pixels provide an image so refined, so lifelike, it's a window to a new world.

## Powered by Android

With Android OS integrated into the display, you can work with the most developed OS on the planet and save your own app directly into the display. Or, choose from the large library of Android apps and play content from there. With the built-in scheduler, you can daypart your apps and content based on your customer and time of day and with the auto orientation feature, showing content in portrait or landscape is as simple as turning the display.

## CMND



A robust display management platform, CMND puts the power back into your hands. Update and manage content with CMND & Create or control your settings with CMND & Control. It's all possible with CMND.

## CMND & Control



With CMND & Control, easily manage multiple displays in a central location. With real time display monitoring, setting and software updates from a remote location, and the ability to customize and configure multiple displays at once, such as video wall or menu board displays, controlling your suite of displays has never been easier.

## CMND & Create



Design and create compelling content with CMND & Create, a powerful authoring tool. With a drag and drop interface, preloaded templates, and integrated widgets, you'll be able to amaze your customers with compelling content. Available in portrait and landscape mode.

## SmartPlayer




Turn your USB into a true cost effective digital signage device. Simply save your content

75BDL3050Q/75

(video, audio, pictures) on your USB and plug into your display. Create your playlist and schedule your content via the on screen menu, and enjoy your own created playlists anytime, anywhere.

## SmartPower

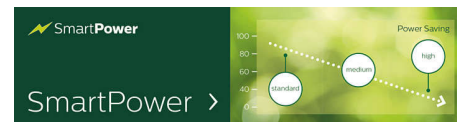

The backlight intensity can be controlled and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs.

## SmartBrowser



Connect and control your content via the cloud with the integrated HTML5 browser. Design your signage content online and connect it with a display or with your complete network. Simply plug in a RJ45 internet cable for network connection, connect the display with the dedicated url-address and you are ready to play your cloud based content.

# Specifications

## Connectivity

- Audio output: Audio Left/Right (RCA)
- Video input: VGA (Analog D-Sub), DisplayPort (1.2), HDMI (x4), USB 2.0 (x2)
- Audio input: 3.5 mm jack
- Other connections: OPS, IR out, AC-out, Analog (D-sub input), Analog audio Left/Right out, Display Port, HDMI, micro SD, PC Audio in, RS232 Serial, USB 2.0, USB power outlet (5 V. 2 amp)
- External control: RS232C (in/out) 2.5 mm jack, IR (in/out) 3.5 mm jack, RJ45

## Picture/Display

- Diagonal screen size (metric): 189.27 cm
- Diagonal screen size (inch): 74.52 inch
- Aspect ratio: 16:9
- Panel resolution: 3840 x 2160
- Pixel pitch: 0.429 x 0.429 mm
- Optimum resolution: 3840 x 2160 @ 60 Hz
- Brightness: 410 cd/m<sup>2</sup>
- Display colors: 1.07 Billion
- Contrast ratio (typical): 1200:1
- Response time (typical): 8 ms
- Viewing angle (horizontal): 178 degree
- Viewing angle (vertical): 178 degree
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Progressive scan, 3D MA deinterlacing, Dynamic contrast enhancement, Color Enhancement, Color Temperature Adjustment, De-interlacer, Noise Reduction, Smart Picture
- Panel technology: IPS
- Operating system: Android 5.0.1

## Convenience

- Placement: Landscape
- Tiled Matrix: Up to 10 x 15
- Screen saving functions: Pixel Shift, Low Brightness
- Keyboard control: Lockable
- Remote control signal: Lockable
- Signal loop through: RS232, IR Loophthrough
- Ease of installation: Smart Insert, AC Out, Carrying Handles
- Energy saving functions: Smart Power
- Network controllable: LAN (RJ45), RS232, Card OPS RS232, HDMI (One Wire)
- Memory: 8GB eMMC

## Sound

- Built-in speakers: 2 x 10W RMS

## Power

- Mains power: 100 ~ 240 VAC, 50 ~ 60 Hz
- Consumption (On mode): 237 W
- Standby power consumption: <0.5W
- Power Saving Features: Smart Power

## Supported Display Resolution

- Computer formats: 640 x 480, 60, 72, 75Hz, 720 x

- 400, 70Hz, 800 x 600, 60, 75Hz, 1024 x 768, 60, 75Hz, 1280 x 768, 60Hz, 1280 x 800, 60Hz, 1280 x 1024, 60Hz, 1360 x 768, 60Hz, 1600 x 1200, 60Hz, 1920 x 1080, 60Hz, 3840 x 2160, 30, 60Hz
- Video formats: 480i, 30, 60Hz, 480p, 30, 60Hz, 576i, 25, 50Hz, 576p, 25, 50Hz, 720p, 50, 60Hz, 1080i, 25, 30Hz, 1080p, 50, 60Hz, 2160p, 30, 50, 60Hz

## Dimensions

- Set Width: 1676.6 mm
- Product weight: 53.3 kg
- Set Height: 955 mm
- Set Depth: 73.8 mm
- Set Width (inch): 66.01 inch
- Set Height (inch): 37.60 inch
- Wall Mount: 600 x 600 mm M8
- Set Depth (inch): 2.91 inch
- Bezel width: 12.5 (Top/Left/Right) 16.0 (Bottom) mm
- Product weight (lb): 117.5 lb

## Operating conditions

- Altitude: 0 ~ 3000 m
- Temperature range (operation): 0 ~ 40 °C
- MTBF: 50,000 hour(s)
- Relative humidity: 20 ~ 80 (operation), 10 - 90%(storage) %
- Temperature range (storage): -20 ~ 60 °C

## Multimedia Applications

- USB Playback Video: MKV, MP4, MPEG, MPG, TS, WMV, ASF, AVI, DAT, FLV, MOV, TRP, VOB, WEBM
- USB Playback Picture: BMP, JPEG, JPG, PNG
- USB Playback Audio: AAC, M4A, MP3, WMA

## Internal Player

- CPU: Quad Core Full HD
- Memory: 2GB DDR3
- Storage: 8GB eMMC

## Accessories

- Included accessories: AC Power Cord, RS232 cable, Batteries for remote control, Quick start guide, Remote Control, HDMI cable, IR sensor cable (1.8M)
- Included Accessories: RS232 daisy-chain cable, USB Cover and screw x1

## Miscellaneous

- On-Screen Display Languages: Arabic, Simplified Chinese, Traditional Chinese, English, French, German, Italian, Polish, Russian, Spanish, Turkish, Japanese, Czech, Danish, Dutch, Finnish, Norwegian, Portuguese, Swedish
- Warranty: 3 year warranty
- Regulatory approvals: CE, UL/cUL, CB, FCC, Class B, BSMI, CCC, EAC, EMF, PSB



Issue date 2024-03-23

Version: 5.0.1

EAN: 87 12581 75155 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)