



LCD monitor

- Momentum
- 27" (68.6 cm)
- 1920 x 1080 (Full HD)

272M8/89

Get in the moment

This Momentum monitor gets you in the moment. AMD FreeSync™ technology and 144Hz fast refresh rate give flawlessly smooth entertainment experience for playing games and watching movies. Scenes look more real with Ultra Wide-Color.

Benefits

Built for fast action

- AMD FreeSync™ Premium; tear free, stutter free, fluid gaming
- 144Hz refresh rates for ultra-smooth, brilliant images
- SmartImage game mode optimized for gamers
- 1ms (MPRT) fast response for crisp image and smooth gameplay

Superb Picture Quality

- Ultra Wide-Color wider range of colors for a vivid picture
- IPS LED wide view technology for image and color accuracy

Features designed for you

- HDMI ensures universal digital connectivity
- DisplayPort connection for maximum visuals

Get comfortable

- LowBlue Mode for easy on-the-eyes productivity
- Screen tilts to your ideal, individualized viewing angle
- Less eye fatigue with Flicker-free technology

PHILIPS

Gaming Monitor

Features

AMD FreeSync™ Premium



Gaming shouldn't be a choice between choppy gameplay or broken frames. AMD FreeSync™ Premium equips serious gamers with a fluid, tear-free gameplay experience at peak performance. There are no compromises, game confidently with a high refresh rate, low framerate compensation, and low latency.

144Hz Gaming



You play intense, competitive gaming. You demand display with lag free, ultra-smooth images. This Philips display redraws the screen image up-to 144 times per second, effectively 2.4x faster than a standard display. A lower frame rate can make enemies appear to jump from spot to spot on the screen, making them difficult targets to hit. With 144Hz frame rate, you get those critical missing images on the screen which shows enemy movement in ultra-smooth motion so you can easily target them. With ultra-low input lag and no screen tearing, this Philips display is your perfect gaming partner

SmartImage Game mode



The new Philips gaming display has quick access OSD fine tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts display with fastest response time, high color, along with image adjustments. "RTS" mode (Real time strategy) has a special SmartFrame mode which enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customized settings based on different games, ensuring best performance.

1ms MPRT fast response



MPRT (motion picture response time) is more intuitive way to describe the response time, which directly refers the duration from seeing blurry noise to clean and crisp images. Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur, delivers sharper and precise visuals to enhance gaming experience. Best choice for playing thrilling and twitch-sensitive games.

Ultra Wide-Color Technology



Ultra Wide-Color Technology delivers a wider spectrum of colors for a more brilliant picture. Ultra Wide-Color wider "color gamut" produces more natural-looking greens, vivid reds and deeper blues. Bring, media entertainment, images, and even productivity more alive and vivid colors from Ultra Wide-Color Technology.

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

DisplayPort connection



DisplayPort is a digital link from PC to Monitor without any conversion. With higher capabilities than DVI standard, it is fully capable to support up to 15meter cables and 10.8 Gbps/sec data transfer. With this high performance and zero latency, you get the fastest imaging and refresh rates - making DisplayPort the best choice for not only general office or home use, but also for the demanding gaming and movies, video editing and more. It also keeps interoperability in mind via use of various adapters.

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.


Gaming Monitor

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

IPS technology

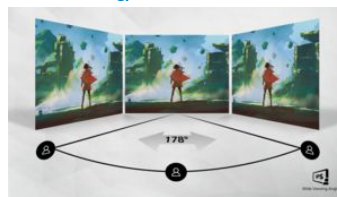

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

Specifications

[field not found 'disclaimer_text']

Picture/Display

AMD FreeSync™ technology	Premium
LCD panel type	IPS technology
Backlight type	W-LED system
Panel Size	27 inch / 68.6 cm
Display Screen Coating	Anti-Glare, 3H, Haze 25%
Effective viewing area	597.89 (H) x 336.31 (V)
Aspect ratio	16:9
Optimum resolution	1920 x 1080 @ 144 Hz
Pixel Density	82 PPI
Response time (typical)	1 ms (MPRT)
Brightness	250 cd/m²
SmartContrast	80,000,000:1
Contrast ratio (typical)	1000:1
Pixel pitch	0.311 x 0.311 mm
Viewing angle	178° (H) / 178° (V) @ C/R > 10
Color gamut (typical)	NTSC 105%*, sRGB 119%*
Picture enhancement	SmartImage game
Display colors	16.7 M
Scanning Frequency	30 - 160 kHz (H) / 48 - 144 Hz (V)
Flicker-free	Yes
LowBlue Mode	Yes
sRGB	Yes

Connectivity

Signal Input	VGA (Analog) HDMI (digital, HDCP) DisplayPort x 1
Sync Input	Separate Sync Sync on Green
Audio (In/Out)	Audio out

Convenience

User convenience	Power On/Off Menu/OK Brightness/UP Input/Down SmartImage game/Back
OSD Languages	Brazil Portuguese Czech Dutch English Finnish French German Greek Hungarian Italian Japanese Korean Polish Portuguese

Other convenience	Russian Spanish Simplified Chinese Swedish Turkish Traditional Chinese Ukrainian Kensington lock VESA mount (100x100mm)
Plug & Play Compatibility	DDC/CI Mac OS X sRGB Windows 10 / 8.1 / 8 / 7

Stand

Tilt	-5/20 degree
------	--------------

Power

On mode	30.4 W (typ.)
Standby mode	< 0.5 W (typ.)
Off mode	< 0.3 W (typ.)
Power LED indicator	Operation - White Standby mode- White (blinking)
Power supply	External 100-240VAC, 50-60Hz

Dimensions

Product with stand(max height)	613 x 461 x 210 mm
Product without stand (mm)	613 x 368 x 42 mm
Packaging in mm (WxHxD)	683 x 525 x 249 mm

Weight

Product with stand (kg)	3.95 kg
Product without stand (kg)	3.40 kg
Product with packaging (kg)	6.35 kg

Operating conditions

Temperature range (operation)	0°C to 40 °C
Temperature range (storage)	-20°C to 60 °C
Relative humidity	20%-80 %
Altitude	Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
MTBF	50,000 (Excluded backlight) hour(s)

Sustainability

Environmental and energy	RoHS
--------------------------	------

Gaming Monitor

Recyclable packaging material	100 %			PSB
Specific Substances	Mercury free PVC / BFR free housing	Cabinet	Color Finish	Black Textured
Compliance and standards				
Regulatory Approvals	CB CE Mark			

* Response time value equal to SmartResponse
* NTSC Area based on CIE1976
* sRGB Area based on CIE1931
* For any questions related to 144Hz performance please refer to your card vendor directly.
* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.
* The monitor may look different from feature images.



data subject to change
2023, June 20
Version: 4.0.1
EAN: 8712581765774

© 2023 Koninklijke Philips N.V.
All rights reserved.
Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.
www.philips.com