

# PHILIPS

LCD monitor with  
PowerSensor

B Line

25" (63.4 cm)

1920 x 1200 (WUXGA)

252B9



## Clear vision, beyond boundaries

Expand beyond boundaries with the new 16:10 frameless design Philips B Line monitor. Loaded with features to improve productivity and sustainability, this monitor takes it to the next level.

### Excellent performance

- IPS technology for full colours and wide viewing angles
- 16:10 aspect ratio for more vertical screen height

### Designed for the way you work


- SmartErgoBase enables user-friendly ergonomic adjustments
- VESA mount allows for the perfect setup
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity
- EasyRead mode for a paper-like reading experience

### Designed for sustainability

- 100% recycled packing material
- PowerSensor saves up to 70% energy costs
- Zero power consumption with 0 watt hard switch

# Highlights

## PowerSensor

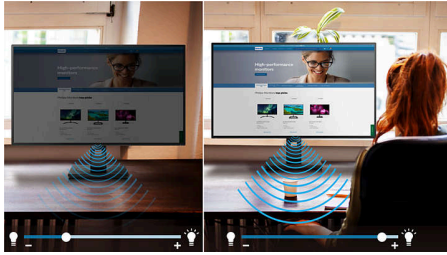


PowerSensor is a built-in 'people sensor' that transmits and receives harmless infrared signals to determine if the user is present and automatically reduces monitor brightness when the user steps away from the desk, cutting energy costs by up to 70 percent and prolonging monitor life.

## Zero power consumption

At the flick of the 0 watt hard switch, which is conveniently located at the back of the monitor, you can completely cut off your monitor from AC power. This results in zero power consumption, reducing your carbon footprint even further


## IPS technology

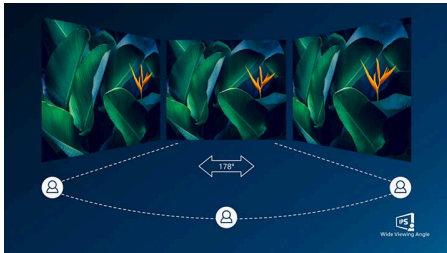

IPS displays use advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle — even in 90-degree Pivot mode! Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colours, making it ideal not only for Photos,

films and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

## SmartErgoBase

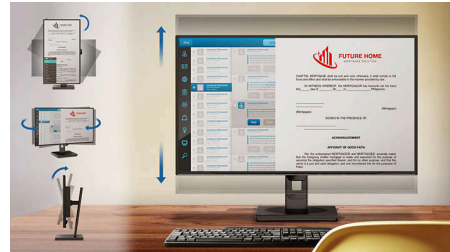

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height-adjustable stand guarantees the optimal viewing level, reducing the physical strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.

## VESA mount

VESA pattern guarantees compatibility with hundreds of innovative mounting solutions.

## Flicker-Free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips


Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

## LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

## EasyRead mode

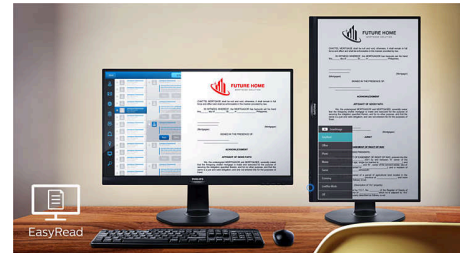

EasyRead mode for a paper-like reading experience



# Specifications

## Picture/Display

**Panel Size:** 25 inch / 63.4 cm  
**Aspect ratio:** 16:10  
**LCD panel type:** IPS technology  
**Backlight type:** W-LED system  
**Pixel pitch:** 0.279 x 0.282 mm  
**Optimum resolution:** 1920 x 1200 @ 60 Hz  
**Brightness:** 300 cd/m<sup>2</sup>  
**Display colours:** 16.7 M  
**Colour gamut (typical):** NTSC 90%\*, sRGB 107.5%\*  
**Contrast ratio (typical):** 1000:1  
**SmartContrast:** 50,000,000:1  
**Response time (typical):** 5 ms (Grey to Grey)\*  
**Viewing angle:** 178° (H)/178° (V), @ C/R > 10  
**Picture enhancement:** SmartImage  
**Effective viewing area:** 535.5 (H) x 338.8 (V)  
**Scanning Frequency:** 30-96 kHz (H)/48-76 Hz (V) sRGB  
**Flicker-free**  
**Pixel Density:** 91 PPI  
**LowBlue Mode**  
**Display Screen Coating:** Anti-Glare, 3H, Haze 25%  
**EasyRead**

## Connectivity

**Signal Input:** VGA (Analogue), DVI-D (digital), HDCP, DisplayPort 1.2, HDMI 1.4  
**Sync Input:** Separate Sync, Sync on Green  
**Audio (In/Out):** PC audio-in, Headphone out  
**USB:** USB 3.1 x 1 (upstream), USB 3.1 x 4 (downstream with 1 fast charge B.C 1.2)  
**HDCP:** HDCP 1.4 (HDMI/ DP)

## Convenience

**Built-in Speakers:** 2 W x 2  
**Plug and Play Compatibility:** DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7

**User convenience:** SmartImage, Input, Brightness, Menu, Power On/Off  
**OSD Languages:** Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian  
**Other convenience:** Kensington lock, VESA mount (100 x 100 mm)  
**Control software:** SmartControl

## Stand

**Height adjustment:** 150 mm  
**Pivot:** -/+ 90 degree  
**Swivel:** -/+ 175 degree  
**Tilt:** -5~30 degree

## Power

**ECO mode:** 12.3 W (typ.)  
**Power supply:** Built-in, 100–240 VAC, 50–60 Hz  
**Off mode:** Zero watts with Zero switch  
**On mode:** 14.70 W (typ.) (EnergyStar test method)  
**Standby mode:** < 0.5 W (typ.)  
**Power LED indicator:** Operation - White, Standby mode - White (flashing)  
**Energy Label Class:** E

## Dimensions

**Packaging in mm (W x H x D):** 608 x 524 x 197 mm  
**Product without stand (mm):** 546 x 367 x 49 mm  
**Product with stand (max height):** 546 x 541 x 206 mm

## Weight

**Product with packaging (kg):** 7.44 kg  
**Product with stand (kg):** 5.09 kg  
**Product without stand (kg):** 3.50 kg

## Operating conditions

**Altitude:** Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)  
**Temperature range (operation):** 0°C to 40°C °C  
**Relative humidity:** 20%-80 %  
**Temperature range (storage):** -20°C to 60°C °C  
**MTBF (demonstrated):** 70,000 hrs (excluded backlight)

## Sustainability

**Environmental and energy:** EnergyStar 8.0, PowerSensor, EPEAT\*, TCO Certified, WEEE, RoHS  
**Post-consumer recycled plastic:** 85%  
**Recyclable packaging material:** 100 %  
**Specific Substances:** PVC/BFR free housing, Mercury free

## Compliance and standards

**Regulatory Approvals:** CE Mark, FCC Class B, SEMKO, cETLus, CU-EAC, TUV Ergo, TUV/GS, EPA, ICES-003, UKRAINIAN

## Cabinet

**Finish:** Texture  
**Foot:** Black  
**Front bezel:** Black  
**Rear cover:** Black

## What's in the box?

**Cables:** D-Sub cable, DVI-D cable, HDMI cable, DP cable, Audio cable, Power cable  
**Monitor with stand**  
**User Documentation**

