

Philips 6000 series
Wireless keyboard-mouse
combo

Multi-device functionality

Detachable palm rest
Low-profile design
Up to 3200 DPI (adjustable)



SPT6607B



Wireless convenience, compact design

This keyboard-mouse combo is made for productivity. It features a wireless connection, detachable palm rest, 3200 DPI in mouse sensitivity, and has the capacity to connect to up to three devices for the best and most connected workspace.

Wireless convenience

- 2.4G wireless connection for a completely cordless workspace
- Pair it with up to 3 devices for ultimate convenience
- Intelligent power saving

Designed with comfort in mind

- Ergonomic palm rest for extra comfort

Advanced technology for ultimate performance

- Up to 3,200 DPI

Designed for performance

- Convenient multi-media shortcuts
- Low-profile keys are quick and stylish looking
- Multi-OS compatibility for multi devices

PHILIPS

Wireless keyboard-mouse combo
Multi-device functionality Detachable palm rest, Low-profile design, Up to 3200 DPI (adjustable)

SPT6607B/00

Highlights

2.4G wireless connection



Keep the computer wires at bay. For any keyboard/mouse equipped with this feature, you can connect the accessory to any PC via a speedy 2.4Hz wireless connection. The simple setup process, along with the accessory's sleek design, is sure to leave your workspace looking clean and wire-free.

Pair it with up to 3 devices




Beautiful work-on-everything keyboard mouse combo with easy switching between three devices, including any computer, tablet and smartphone. Rewrite the rules of working for one device, you can easily switch and go.

Ergonomic palm rest




The palm rest helps position your hands comfortably on the keyboard, and offers a comfortable place to rest your palms when you are not typing.

multi-media shortcuts

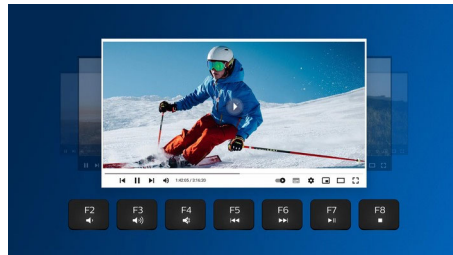


With these multi-media shortcuts, you can easily switch to music, volume, or video play by a simple click.

Intelligent power saving

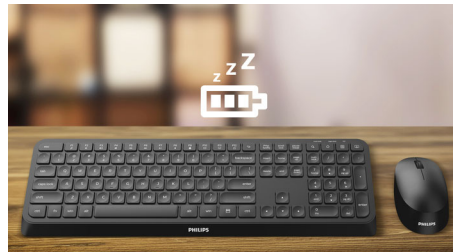

With the intelligent power saving function, this combo can go into standby and therefore save power when not in use.

Up to 3,200 DPI

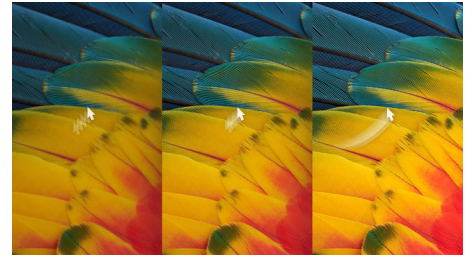

This mouse delivers 800/1200/1600/2400/3200 5 levels precision tracking. Up to 3,200 DPI gives higher smoothing and accuracy.

Multi-OS compatibility



Compatible with iOS, MAC, and Windows, you can easily switch among them via shortcuts.

Low-profile keys



The low-profile keys add a stylish look and are quick and responsive for typing.

Specifications

Technical specifications

- Product Type: Wireless keyboard-mouse combo
- Connectivity: 2.4GHz and Bluetooth 3.0/5.0
- Front Panel Material-Keyboard: Plastics front-panel
- Keys: 110 keys
- Optical Sensor Precision-Mouse: 800-1200(Default)-1600-2400-3200 DPI
- Handed Type: Right-handed mouse
- What's in the box: Wireless keyboard and mouse, Wireless receiver, Detachable wrist rest, User manual and important information, 1*AA and

1*AAA batteries

Physical Dimensions

- Dimensions (LxWxH): Keyboard: 433 x 196 x 22 mm Mouse: 117 x 75 x 39 mm
- Weight: Keyboard: 739 g Mouse: 97 g

OS/System Requirements

- System Requirements: Microsoft Windows 7, Windows 8, Windows 10 or later; Linux V1.24 and above; Mac OS 10.5 and above;



Issue date 2023-06-20

Version: 9.2.2

12 NC: 8670 001 78703
EAN: 87 12581 77898 9

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com