



Philips  
LCD monitor

### B Line

23 (22.5" / 57.2 cm diag.)  
1920 x 1200 (WUXGA)

230B8QJEB

## Clear image, efficient performance

for maximum productivity

Get your best work done with the Philips 23" monitor. The 16:10 ratio display gives you extra vertical height for increased productivity. Features like height-adjustment, Flicker-free and LowBlue mode make work easy-on-the eyes.

#### Features for the way you work

- Built-in stereo speakers for multimedia
- HDMI ensures universal digital connectivity
- Narrow border display for a seamless appearance

#### Great performance

- IPS technology for full colors and wide viewing angles
- 16:10 aspect ratio for more vertical screen height
- SmartImage presets for easy optimized image settings

#### Sustainable Eco-design

- 100% recyclable packaging

#### Designed for comfortable productivity

- SmartErgoBase enables people-friendly ergonomic adjustments
- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity


# PHILIPS

LCD monitor  
B Line 23 (22.5" / 57.2 cm diag.), 1920 x 1200 (WUXGA)

230B8QJEB/00

# Highlights

## IPS technology

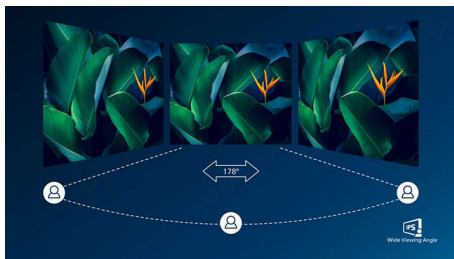

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle - even in 90 degree Pivot mode! Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

## SmartImage



SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

## LowBlue Mode




Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

## Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.


## SmartErgoBase

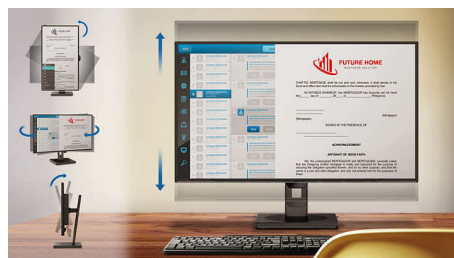

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height adjustable stand guarantees the optimal viewing level, reducing the physical strains of a

long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.

## EasyRead mode

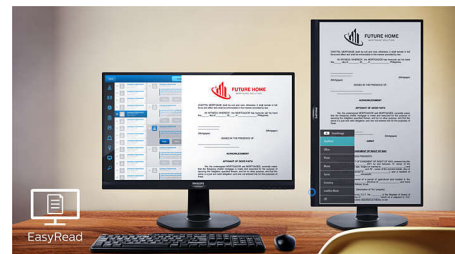

EasyRead mode for a paper-like reading experience

## UltraNarrow Border



The new Philips displays feature ultra-narrow borders which allow for minimal distractions and maximum viewing size. Especially suited for multi-display or tiling setup like gaming, graphic design and professional applications, the ultra-narrow border display gives you the feeling of using one large display.

## HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).



# Specifications

## Picture/Display

- Panel Size: 22.5 inch / 57.2 cm
- Aspect ratio: 16:10
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.25425 x 0.24765 mm
- Optimum resolution: 1920 x 1200 @ 60Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16.7M
- Color gamut (typical): NTSC 85%\*, sRGB 101.8%\*
- Contrast ratio (typical): 1000:1
- SmartContrast: 50,000,000:1
- Response time (typical): 5 ms (Gray to Gray)\*
- Viewing angle: 178° (H) / 178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage
- Effective viewing area: 488.16 (H) x 297.18 (V)
- Scanning Frequency: 30 - 96 kHz (H) / 48 - 76 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 101 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- EasyRead
- Adaptive sync

## Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP), HDMI 1.4, DisplayPort 1.2
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

## Convenience

- Built-in Speakers: 2 W x 2
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: SmartImage, Input, Brightness, Menu, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Control software: SmartControl

## Stand

- Height adjustment: 130 mm
- Pivot: +/- 90 degree
- Swivel: -175 ~ 175 degree
- Tilt: -5 ~ 30 degree

## Power

- ECO mode: 8.5 W (typ.)
- Power supply: Built-in, 100-240VAC, 50-60Hz
- Off mode: Zero watts with Zero switch
- On mode: 13.6 W (typ.) (EnergyStar 8.0 test method)
- Standby mode: < 0.3 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Energy Label Class: E

## Dimensions

- Packaging in mm (WxHxD): 565 x 519 x 161 mm
- Product without stand (mm): 499 x 323 x 56 mm
- Product with stand(max height): 499 x 512 x 216 mm

## Weight

- Product with packaging (kg): 6.25 kg
- Product with stand (kg): 4.30 kg
- Product without stand (kg): 2.70 kg

## Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 70,000 hrs (excluded backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: EnergyStar 8.0, EPEAT\*, TCO Certified Edge, WEEE, RoHS
- Recyclable packaging material: 100 %
- Specific Substances: PVC / BFR free housing, Mercury free
- Recycled material: 85%

## Compliance and standards

- Regulatory Approvals: CE Mark, FCC Class B, EPA, UKRAINIAN, ICES-003, TUV Ergo, TUV/GS, CU-EAC

## Cabinet

- Finish: Texture
- Foot: Black/Black
- Front bezel: Black/Black
- Rear cover: Black/Black

## What's in the box?

- Cables: D-Sub cable, DVI-D cable, HDMI cable, DP cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-10-21

Version: 3.0.1

EAN: 87 12581 76281 0

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.  
\* Response time value equal to SmartResponse  
\* NTSC Area based on CIE1976  
\* sRGB Area based on CIE1931  
\* EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.  
\* The monitor may look different from feature images.