

Philips Gaming Monitor  
LCD monitor

## Momentum

24 (23.8" / 60.5 cm diag.)  
1920 x 1080 (Full HD)

242M8



## Get in the moment

This Momentum monitor gets you in the moment. AMD FreeSync™ technology and 144Hz fast refresh rate give flawlessly smooth entertainment experience for playing games and watching movies. Scenes look more real with Ultra Wide-Color.

### Features designed for you

- DisplayPort connection for maximum visuals
- HDMI ensures universal digital connectivity

### Built for fast action

- 144Hz refresh rates for ultra-smooth, brilliant images
- AMD FreeSync™ Premium; tear free, stutter free, fluid gaming
- SmartImage game mode optimized for gamers
- 1ms (MPRT) fast response for crisp image and smooth gameplay

### Superb Picture Quality

- IPS LED wide view technology for image and color accuracy
- Ultra Wide-Color wider range of colors for a vivid picture

### Get comfortable

- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity
- Screen tilts to your ideal, individualized viewing angle

# PHILIPS

LCD monitor  
Momentum 24 (23.8" / 60.5 cm diag.), 1920 x 1080 (Full HD)

242M8/89

# Highlights

## AMD FreeSync™ Premium



Gaming shouldn't be a choice between choppy gameplay or broken frames. AMD FreeSync™ Premium equips serious gamers with a fluid, tear-free gameplay experience at peak performance. There are no compromises, game confidently with a high refresh rate, low framerate compensation, and low latency.

## 144Hz Gaming




You play intense, competitive gaming. You demand display with lag free, ultra-smooth images. This Philips display redraws the screen image up-to 144 times per second, effectively 2.4x faster than a standard display. A lower frame rate can make enemies appear to jump from spot to spot on the screen, making them difficult targets to hit. With 144Hz frame rate, you get those critical missing images on the screen which shows enemy movement in ultra-smooth motion so you can easily target them. With ultra-low input lag and no screen tearing, this Philips display is your perfect gaming partner

## SmartImage Game mode



The new Philips gaming display has quick access OSD fine tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts display with fastest response time, high color, along with image adjustments. "RTS" mode (Real time strategy) has a special SmartFrame mode which enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customized settings based on different games, ensuring best performance.

## 1ms MPRT fast response

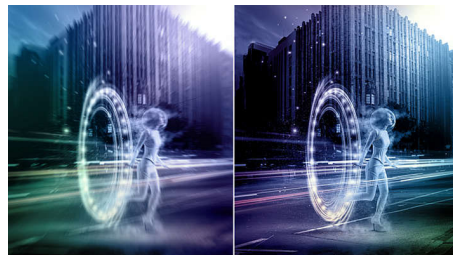

MPRT (motion picture response time) is more intuitive way to describe the response time, which directly refers the duration from seeing blurry noise to clean and crisp images. Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur, delivers sharper and precise visuals to enhance gaming

experience. Best choice for playing thrilling and twitch-sensitive games.

## IPS technology



IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

## Ultra Wide-Color Technology



Ultra Wide-Color Technology delivers a wider spectrum of colors for a more brilliant picture. Ultra Wide-Color wider "color gamut" produces more natural-looking greens, vivid reds and deeper blues. Bring media entertainment, images, and even productivity more alive and vivid colors from Ultra Wide-Color Technology.

AMD  
FreeSync  
Premium

144Hz

SmartImage™  
Game

Fast Response  
1ms MPRT

Ultra Wide Color

HDMI™  
HIGH DEFINITION MULTIMEDIA INTERFACE

LowBlue Mode

Flicker-free

D D

# Specifications

## Picture/Display

- Panel Size: 23.8 inch / 60.5 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.2745 x 0.2745 mm
- Optimum resolution: 1920 x 1080 @ 144 Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16.7 M
- Color gamut (typical): NTSC 111%\*, sRGB 127%\*
- Contrast ratio (typical): 1000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 1 ms (MPRT)
- Viewing angle: 178° (H) / 178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage game
- Effective viewing area: 529.04 (H) x 296.46 (V)
- Scanning Frequency: 30 - 160 kHz (H) / 48 - 144 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 93 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- AMD FreeSync™ technology: Premium

## Connectivity

- Signal Input: VGA (Analog), HDMI (digital, HDCP), DisplayPort x 1
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Audio out

## Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu/OK, Brightness/UP, Input/Down, SmartImage game/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)

## Stand

- Tilt: -5/20 degree

## Power

- Power supply: External, 100-240VAC, 50-60Hz
- Off mode: <math>0.3\text{ W}</math> (typ.)
- On mode: 16.7 W (typ.)
- Standby mode: <math>0.5\text{ W}</math> (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Packaging in mm (WxHxD): 600 x 479 x 224 mm
- Product without stand (mm): 540 x 325 x 43 mm
- Product with stand(max height): 540 x 416 x 185 mm

## Weight

- Product with packaging (kg): 5.04 kg
- Product with stand (kg): 2.97 kg
- Product without stand (kg): 2.49 kg

## Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40 °C
- MTBF: 50,000 (Excluded backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60 °C

## Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC / BFR free housing

## Compliance and standards

- Regulatory Approvals: CB, FCC Class B, ICES-003, CE Mark, CCC, CECP, CEL

## Cabinet

- Color: Black
- Finish: Textured



Issue date 2024-03-14

Version: 4.0.2

EAN: 87 12581 76628 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* For any questions related to 144Hz performance please refer to your card vendor directly.

\* Response time value equal to SmartResponse

\* NTSC Area based on CIE1976

\* sRGB Area based on CIE1931

\* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.

\* The monitor may look different from feature images.