

PHILIPS

LCD monitor with
USB-C docking

Business Monitor

5000 series

27" (68.5 cm)

2560 x 1440 (QHD)

27B1U5601H



Daily routine simplified

with a pop-up webcam

This USB-C monitor is great for watching videos, data transfer and power delivery. The integrated 5 MP webcam delivers sharp images, and a noise-cancelling mic lets people hear you clearly. Features a pop-up webcam for quick access and robust security.

Excellent performance

- IPS technology for full colours and wide viewing angles
- Crystal clear images with Quad HD 2560 x 1440 pixels

Single cable USB-C connection

- RJ-45 to USB-C gives easy network connection with security
- USB 3.2 high-speed data transfer

Designed for the way you work


- MultiView enables simultaneous dual connection and view
- Secure sign-in with pop-up webcam
- DisplayPort-out for connecting additional displays
- TUV Eye Comfort certified to reduce eye fatigue
- Built-in KVM switch to easily switch between sources
- Collaboration-ready webcam with noise-cancelling mic.

Designed for sustainability

- PowerSensor saves up to 75% energy costs


Highlights

IPS technology

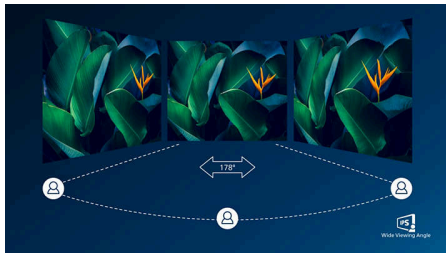

IPS displays use advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle — even in 90-degree Pivot mode! Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colours, making it ideal not only for Photos, films and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.


CrystalClear images

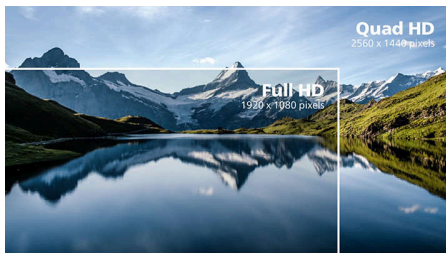

These Philips screens deliver Crystal Clear, Quad HD 2560 x 1440 or 2560 x 1080 pixel images. Utilising high-performance panels with a high-density pixel count, enabled by high bandwidth sources like USB-C, Displayport and HDMI, these new displays will make your images and graphics come alive. Whether you are a demanding professional who requires extremely detailed information for CAD-CAM solutions and uses 3D


graphic applications, or a financial wizard working on huge spreadsheets, Philips displays will give you Crystal Clear images.

MultiView technology

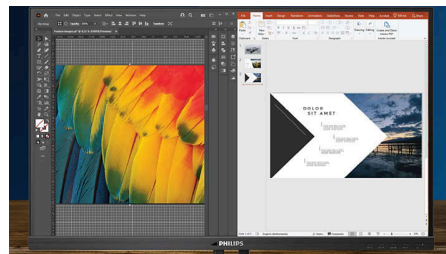

With the ultra-high resolution Philips MultiView display, you can now experience a world of connectivity. MultiView enables active dual connect and view so that you can work with multiple devices like a PC and notebook simultaneously, for complex multitasking.

Pop-up webcam

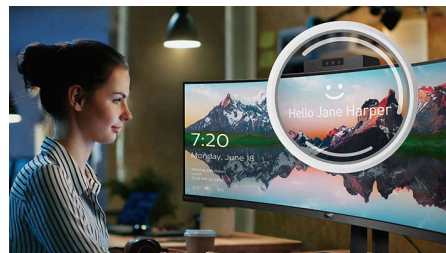

Philips' innovative and secure webcam pops up when you need it and securely tucks back into the monitor when you are not using it. The webcam is also equipped with advanced sensors for Windows Hello facial recognition, which conveniently logs you into your Windows devices in less than 2 seconds, 3 times faster than a password.

DisplayPort-out



With DisplayPort-out you can connect multiple high-resolution displays with just one cable from your first display to the PC. The ability to daisy chain multiple displays enables you to maintain a clean desktop without the hassle of too many wires.

TUV Rheinland Eye Comfort



Philips displays meet TUV Rheinland Eye Comfort standard to prevent eye strain caused by prolonged computer use. With TUV Eye Comfort certification, Philips displays ensure flicker-free, low-blue mode, no disturbing reflections, a wide viewing angle, less reduction of image quality from different angles and ergonomic stand designs for an ideal viewing experience. Keep your eyes healthy and boost work productivity.



Highlights

MultiClient Integrated KVM



With the MultiClient Integrated KVM switch, you can control two separate PCs with one monitor-keyboard-mouse setup. A convenient button allows you to quickly switch between sources. Handy with setups that require dual PC computing power or sharing one large monitor to show two different PCs.

Webcam and noise-cancelling mic



This Philips monitor comes with a built-in 5 MP webcam, noise-cancelling microphone and speakers, making it perfect for working from home and collaborating remotely. It is equipped with advanced sensors that work seamlessly with Windows Hello facial recognition, allowing you to log into your Windows devices in less than 2 seconds. For added privacy, a physical camera switch lets you disable the webcam when not in use. The noise-cancelling microphone and dual 5 watt integrated speakers ensure clear communication.

USB-C Docking with RJ45



Simplify all peripherals from monitor to PC using one-cable docking USB Type-C connector, including networking, high-resolution video output from PC to monitor, and surfing on the Internet without an additional network cable, even without a LAN port on your notebook. RJ45 connection through USB-C offers a fast and secure connection when needed. Getting the fastest data speeds allows you to transfer data from a HDD to your PC faster than ever. Additionally, USB-C with power delivery can even enable you to power and charge your notebook from the monitor, eliminating the need for extra power cables.



Specifications

Picture/Display

Panel Size: 27 inch/68.5 cm
 Aspect ratio: 16:9
 LCD panel type: IPS technology
 Backlight type: W-LED system
 Pixel pitch: 0.2331 x 0.2331 mm
 Brightness: 350 cd/m²
 Display colours: 16.7 M (8 bit)
 Colour gamut (typical): NTSC 89%*, sRGB 101%*
 Contrast ratio (typical): 1000:1
 SmartContrast: 50,000,000:1
 Response time (typical): 4 ms (Grey to Grey)*
 Viewing angle: 178° (H)/178° (V), @ C/R > 10
 Picture enhancement: SmartImage
 Maximum resolution: 2560 x 1440 @ 75 Hz*
 Effective viewing area: 596.736 (H) x 335.664 (V)
 Scanning Frequency: 30–114 kHz (H)/48–75 Hz (V)
 sRGB
 Flicker-free
 Pixel Density: 109 PPI
 LowBlue Mode
 Display Screen Coating: Anti-Glare, 3H, Haze 25%
 EasyRead

Connectivity

Signal Input: HDMI 1.4 x 1, DisplayPort 1.4 x 1,
 USB-C x 1 (upstream, DP Alt mode, Data, PD up to 100 W)
 Sync Input: Separate Sync
 Audio (In/Out): Audio out/Microphone in
 combo jack
 RJ45: Ethernet LAN up to 1 G*, Wake on LAN
 Signal Output: DisplayPort out x 1
 HDCP: HDCP 1.4 (HDMI/DisplayPort/USB-C),
 HDCP 2.2 (HDMI/DisplayPort/USB-C)
 HBR3: HBR 3 (DisplayPort/USB-C)
 USB Hub: USB 3.2, Gen 2/10 Gbps, USB-C
 upstream x 1 (Data), USB-A downstream x 4 (with
 1 for fast charge B.C 1.2), USB-C downstream x 1
 (Data, PD 15 W)

Power Delivery

Max power delivery: USB-C up to 100 W*
 (5 V/3 A, 7 V/3 A, 9 V/3 A, 10 V/3 A, 12 V/3 A,
 15 V/3 A, 20 V/4.8 A)
 Version: USB PD version 3.0

Convenience

Built-in Speakers: 5 W x 2
 Plug and Play Compatibility: DDC/CI, Mac OS X,
 sRGB, Windows 11/10/8.1/8/7
 User convenience: SmartImage, Input, User,
 Menu, Power On/Off
 OSD Languages: Brazil Portuguese, Czech, Dutch,
 English, French, Finnish, German, Greek,
 Hungarian, Italian, Japanese, Korean,
 Portuguese, Polish, Russian, Simplified Chinese,
 Spanish, Swedish, Traditional Chinese, Turkish,
 Ukrainian
 Other convenience: Kensington lock, VESA
 mount (100 x 100 mm)
 Control software: SmartControl
 MultiView: PIP/PBP mode, 2 x devices
 Built-in webcam: Pop-up 5.0 megapixel camera
 with a microphone and LED indicator (for
 Windows Hello)
 KVM: Yes (USB-C/USB-C)
 Noise cancellation

Stand

Height adjustment: 150 mm
 Pivot: -/+90 degree
 Swivel: -/+ 180 degree
 Tilt: -5/30 degree

Power

Power supply: Built-in, 100–240 VAC, 50–60 Hz
 Off mode: Zero watts with AC switch
 On mode: 21.5 W (typ.) (EnergyStar test method)
 Standby mode: 0.4 W (typ.)
 Power LED indicator: Operation - White, Standby
 mode - White (flashing)
 Energy Label Class: E

Dimensions

Packaging in mm (W x H x D): 730 x 471 x
 193 mm
 Product without stand (mm): 613 x 366 x 55 mm
 Product with stand (max height): 613 x 537 x
 225 mm

Weight

Product with packaging (kg): 10.88 kg
 Product with stand (kg): 7.30 kg
 Product without stand (kg): 5.54 kg

Operating conditions

Altitude: Operation: +12,000 ft (3658 m), Non-
 operation: +40,000 ft (12,192 m)
 Temperature range (operation): 0°C to 40 °C
 Relative humidity: 20%-80 %
 Temperature range (storage): -20°C to 60 °C
 MTBF (demonstrated): 70,000 hrs (excluded
 backlight)

Sustainability

Environmental and energy: PowerSensor,
 LightSensor, Energy Star 8.0, EPEAT*, TCO
 Certified Edge, RoHS
 Post-consumer recycled plastic: 85%
 Recyclable packaging material: 100 %
 Specific Substances: Mercury free, PVC/BFR free
 housing

Compliance and standards

Regulatory Approvals: CB, CE Mark, FCC Class B,
 ICES-003, CU-EAC, EAEU RoHS, TUV Ergo,
 TUV/GS, TUV Eye Comfort certified

Cabinet

Finish: Texture
 Foot: Black
 Front bezel: Black
 Rear cover: Black

What's in the box?

Cables: HDMI cable, DP cable, USB-C cable,
 Power cable
 Monitor with stand
 User Documentation



* "IPS" word mark / trademark and related patents on
 technologies belong to their respective owners.

* Response time value equal to SmartResponse

* NTSC Area based on CIE 1976

* sRGB Area based on CIE1931

* For Video transmission via USB-C, your Notebook/device
 must support USB-C DP Alt mode

* Activities such as screen sharing and online streaming over
 the Internet can impact your network performance. Your
 hardware and network bandwidth will determine the
 overall audio and video quality.

* For USB-C power and charging function, your
 Notebook/device must support USB-C standard Power
 Delivery specifications. Please check with your Notebook
 user manual or manufacturer for more details.

* If your Ethernet connection seems slow, please enter the
 OSD menu and select USB 3.0 or a higher version that can
 support the LAN speed up to 1G.

* The USB-C power delivery of this display is up to 100 W
 (96 W in typical). The maximum power delivery will depend
 on your device.

* When calculating energy costs saving from PowerSensor,
 both USB and Power delivery are excluded.

* EPEAT rating is valid only where Philips registers the
 product. Please visit <https://www.epeat.net/> for
 registration status in your country.

* The monitor may look different from feature images.