



LCD monitor

- B Line
- 27" (68.6 cm)
- Full HD (1920 x 1080)

271B8QJEB/00

Clear image, efficient performance

for maximum productivity

Get your best work done with the Philips 27" Full HD monitor. Crisp and vivid Full HD gives you the space and clarity to see your work. Features like height-adjustment, Flicker-free and LowBlue mode make work easy-on-the eyes.

Benefits

Brilliant performance

- IPS technology for full colors and wide viewing angles
- 16:9 Full HD display for crisp detailed images
- SmartImage presets for easy optimized image settings

Designed for comfortable productivity

- LowBlue Mode for easy on-the-eyes productivity
- Less eye fatigue with Flicker-free technology
- SmartErgoBase enables people-friendly ergonomic adjustments
- EasyRead mode for a paper-like reading experience

Features for the way you work

- Built-in stereo speakers for multimedia
- USB 3.0 enables fast data transfers and smart phone charging
- SmartConnect with DisplayPort, HDMI and VGA connections

Sustainable Eco-design

- 85% post consumer recycled plastics with TCO Edge

PHILIPS

Features

IPS technology




IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle - even in 90 degree Pivot mode! Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

SmartImage

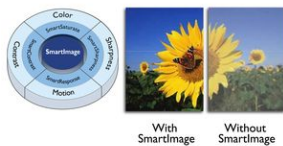

SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

SmartErgoBase



The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base's people-friendly height, swivel, tilt and rotation angle adjustments position the monitor for maximum comfort that can ease the physical strains of a long workday; cable management reduces cable clutter and keeps the workspace neat and professional.

EasyRead mode



Built-in stereo speakers

A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

USB 3.0 super speed

Super Speed USB 3.0 deploys 5.0 gbit/s transfer rate, which is about 10 times faster than USB 2.0 standard significantly reducing data transfer time saving you time and money. With more bandwidth, super speed transfer rates, better power management and superior overall performance, USB 3.0 sets the global standard allowing you to use the large capacity storage devices. Sync-N-Go technology ensures you don't have to wait anymore for bandwidth to be freed up. Your investment in USB 2.0 devices is protected as it is backward compatible.

SmartConnect

With a plethora of connectivity, these Philips displays come equipped with multi connections like VGA, Display Port, universal HDMI connector, enabling you to enjoy high resolution uncompressed video and audio content. USB connections ensures that you can have super speed data transfers while having global connectivity. Regardless of what source you use, you can rest assured that this Philips display will ensure your investment is not made obsolete any time soon!

TCO Edge

TCO Edge certification is given to products which go beyond existing eco-labeling programs. Over and above standard TCO requirements, it further mandates that the product uses minimum 85% of post consumer recycled plastics, is energy efficient, uses minimal hazardous materials, has 100% recyclable packaging, and is designed for easy recycling amongst other

requirements. You can rest assured that this Philips monitor is a cutting edge technology product which is best in class ICT, benefitting you and the planet while helping you make a responsible green IT purchase!

Specifications

[field not found 'disclaimer_text']

Picture/Display

LCD panel type	IPS technology
Backlight type	W-LED system
Panel Size	27 inch / 68.6 cm
Display Screen Coating	Anti-Glare, 3H, Haze 25%
Effective viewing area	597.89 (H) x 336.31 (V)
Aspect ratio	16:9
Optimum resolution	1920 x 1080 @ 60Hz
Pixel Density	82 PPI
Response time (typical)	5 ms (Gray to Gray)*
Brightness	250 cd/m ²
Contrast ratio (typical)	1000:1
SmartContrast	20,000,000:1
Pixel pitch	0.311 x 0.311 mm
Viewing angle	178° (H) / 178° (V) @ C/R > 10
Flicker-free	Yes
Picture enhancement	SmartImage
Display colors	16.7 M
Scanning Frequency	30 - 83 kHz (H) / 50 - 76 Hz (V)
sRGB	Yes
EasyRead	Yes
LowBlue Mode	Yes
Adaptive sync	Yes

Connectivity

Signal Input	VGA (Analog) DVI-D (digital, HDCP) DisplayPort 1.2 HDMI 1.4
USB	USB 3.0x2 (1 w/fast charging)* USB 2.0 x 2
Sync Input	Separate Sync Sync on Green
Audio (In/Out)	PC audio-in Headphone out

Convenience

Built-in Speakers	2 W x 2
User convenience	SmartImage Input Brightness Menu Power On/Off
Control software	SmartControl
OSD Languages	Brazil Portuguese Czech Dutch English Finnish French German Greek Hungarian Italian Japanese Korean Polish Portuguese Russian Simplified Chinese Spanish Swedish Traditional Chinese Turkish Ukrainian
Other convenience	Kensington lock

Plug & Play Compatibility	VESA mount (100x100mm) DDC/CI Mac OS X sRGB Windows 10 / 8.1 / 8 / 7
---------------------------	----------------------------------------------------------------------------------

Stand

Height adjustment	130 mm
Pivot	-/+ 90 degree
Swivel	-175/175 degree
Tilt	-5/30 degree

Power

ECO mode	11.5 W (typ.)
On mode	17.4 W (typ.) (EnergyStar 7.0 test method)
Standby mode	< 0.5 W (typ.)
Off mode	< 0.3 W (typ.)
Energy Label Class	A+
Power LED indicator	Operation - White Standby mode- White (blinking)
Power supply	Built-in 100-240VAC, 50-60Hz

Dimensions

Product with stand(max height)	625 x 530 x 224 mm
Product without stand (mm)	625 x 370 x 51 mm
Packaging in mm (WxHxD)	699 x 454 x 242 mm

Weight

Product with stand (kg)	6.76 kg
Product without stand (kg)	4.42 kg
Product with packaging (kg)	9.82 kg

Operating conditions

Temperature range (operation)	0°C to 40°C °C
Temperature range (storage)	-20°C to 60°C °C
Relative humidity	20%-80 %
Altitude	Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
MTBF (demonstrated)	70,000 hrs (excluded backlight)

Sustainability

Environmental and energy	EnergyStar 7.0 EPEAT* TCO Certified Edge RoHS WEEE
Recyclable packaging material	100 %
Post consumer recycled plastic	85%
Specific Substances	PVC / BFR free housing Mercury free Lead free

Compliance and standards

Regulatory Approvals	CE Mark
----------------------	---------

FCC Class B
SEMKO
cETLus
CU-EAC
TUV Ergo
TUV/GS
EPA
ICES-003
UKRAINIAN
MEPS
PSE

Rear cover Black
Foot Black
Finish Texture

What's in the box?

Monitor with stand Yes
Cables D-Sub cable, HDMI cable, DP cable,
 Audio cable, Power cable
User Documentation Yes

Cabinet

Front bezel Black

- * "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
- * EPEAT rating is valid only where Philips registers the product. Please visit <https://epeat.sourcemap.com/> for registration status in your country.
- * Fast charging complies with USB BC 1.2 standard
- * Response time value equal to SmartResponse
- * The monitor may look different from feature images.



data subject to change
2019, August 4
Version: 4.0.1
EAN: 8712581750459

© 2019 Koninklijke Philips N.V.
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com