



Philips Brilliance  
LED monitor with  
PowerSensor

**P Line**  
23" (58.4 cm) Full HD

**235PL2ES**

## World's first PowerSensor LED display saves energy

Large eco-friendly Philips 235PL2 Professional LED display with intelligent PowerSensor detects user presence and adjusts power consumption saving up to 80% of energy bills!

### **Outstanding display performance**

- LED technology ensures natural colors
- SmartImage: Optimized user-friendly display experience

### **Sustainable Eco-friendly solution**

- PowerSensor ensures lower operating costs by saving energy
- EPEAT Gold ensures lowest impact on environment
- Mercury Free eco-friendly display
- 0.1 watt Soft-Off mode

### **Great convenience**

- USB port for convenient peripheral connections
- Built in stereo audio for multimedia experience

### **Ergonomic design**

- 130mm height adjustment for ideal sitting position
- 90 degree screen rotation and smart cable management
- Tilt and swivel adjustment for an ideal viewing angle

# PHILIPS

# Highlights

## PowerSensor



PowerSensor On

PowerSensor Off

PowerSensor is a built-in 'people sensor' that transmits and receives harmless infrared signals to determine if user is present and automatically reduces monitor brightness when user steps away from the desk, cutting energy costs by up to 80 percent and prolonging monitor life.

## LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.


## EPEAT Gold

Philips EPEAT GOLD certified monitors ensure protection for human health and environment, and are highly energy efficient ensuring low emissions of climate changing green house gases. EPEAT program helps purchasers evaluate, compare and select Monitors based on 51 environmental criteria supported by US EPA. GOLD certification ensures that at least 30% of plastic used is Post Consumer Resin, which ensures reduction in use of toxic and hazardous materials. EPEAT Gold is valid only where Philips registers the product. Please visit [www.epeat.net](http://www.epeat.net) for registration status in your country.

## Mercury Free

Philips monitors with LED backlighting are free of Mercury content, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its life-cycle, from manufacturing to disposal.

## SmartImage

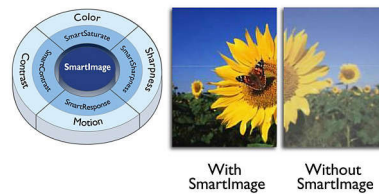

SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Image, Entertainment, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

## ScreenRotate

ScreenRotate makes it possible to use a monitor in either the landscape and portrait mode; to change orientation for a better view of a selected document or image, the monitor is rotated to the desired orientation.

## Screen tilt and swivel

Screen tilt and swivel is a mechanism built into the base permits the monitor to swivel and tilt backward or forward.

## 130mm height adjustment

The Super Ergo Base is a 'people friendly' Philips monitor base that not only tilts and swivels, but is also height adjustable and pivots to 90 degree, so that each user can adjust the monitor to their personal preference for maximum viewing comfort and efficiency.

## Built-in stereo audio

A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

## 0.1 Watt Standby mode

0.1 watt Soft-Off mode

## USB 2.0 port



USB port allows user to conveniently connect their plug and play multimedia devices such as USB memory devices, camera, portable HDD, Web camera, PDA, Printer and many other devices which has USB connection available. The conveniently located USB 2.0 port on the monitor allows USB 2.0 signals to pass thru to the computer. Note that many devices like cameras and HDD may need to be powered On independently, as they have higher power requirements than the monitor USB port can provide



# Specifications

## Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- USB: USB 2.0 x 1
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Stereo Audio, Earphone out (3.5 mm jack) x 1, PC audio-in

## Picture/Display

- Panel Size: 23 inch / 58.4 cm
- Aspect ratio: 16:9
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.265 x 0.265 mm
- Optimum resolution: 1920 x 1080 @ 60Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16.7 M
- SmartContrast: 20,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 176° (H) / 170° (V), @ C/R &gt; 5
- Picture enhancement: SmartImage
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

## Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7/Vista/XP
- Built-in Audio: 1.5Wx2
- User convenience: SmartImage, Volume, Power On/Off, PowerSensor, Menu
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese
- Other convenience: VESA mount (100x100mm), Kensington lock

## Stand

- Height adjustment: 130 mm
- Pivot: Yes (auto pivot)
- Swivel: -65/65 degree
- Tilt: -5/20 degree

## Power

- ECO mode: 17.74 W
- Power supply: Built-in, 100-240VAC, 50/60Hz
- Off mode: 0.1 W
- On mode: 22.47 W (EnergyStar 5.0 test method)
- Standby mode: 0.1 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Product with stand (mm): 566 x 517 x 250 mm
- Packaging in mm (WxHxD): 672 x 268 x 434 mm
- Product without stand (mm): 566 x 360 x 57 mm

## Weight

- Product with packaging (kg): 8.10 kg
- Product with stand (kg): 6.40 kg
- Product without stand (kg): 4.20 kg

## Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: EPEAT Gold, RoHS, EnergyStar 5.0
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC, Class B, GOST, SEMKO, TCO 5.0, TUV/GS, TUV Ergo, UL/cUL

## Cabinet

- Color: Silver/Black
- Finish: Texture



Issue date 2024-03-24

Version: 1.0.1

EAN: 87 12581 56052 2

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)