



Philips
LED monitor with HDMI

E Line
24" (61 cm)

244EL2SB

Great entertainment on your big HDMI LED display

This Big 244EL2 HDMI Full HD multimedia LED display with stylish SmartTouch controls is ready to engage you in the gaming and movie world

Great picture quality

- Full HD LCD display, 1920x1080p resolution
- 16:9 display for best widescreen gaming and video
- SmartContrast 20000000:1 for incredible rich black details
- SmartImage Lite for an enhanced LCD viewing experience

Design that complements any interior

- Stylish SmartTouch controls

Experience true multimedia

- HDMI-ready for top quality, multimedia experience

Great convenience

- Easy picture format control switching in wide and 4:3 format
- Easy display performance tuning with SmartControl Lite

PHILIPS

LED monitor with HDMI
E Line 24" (61 cm)

Highlights

Full HD 1920x1080p LCD display

Enjoy crisp and crystal clear picture quality to give your audience a truly memorable visual experience. Your viewers will be treated to unsurpassed video, with an amazing color gamut and the sharpest pictures around.

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).


16:9 widescreen aspect ratio

An aspect ratio is an expression of a video image's width compared to its height. The 16:9 widescreen aspect ratio is standard for universal to high-definition television and European digital television. A native 16:9 aspect ratio means outstanding game and video display without bars at top and bottom of the picture and without the quality loss than comes from scaling, altering an image to fit on a different screen size.

SmartImage Lite

SmartImage Lite is an exclusive, leading edge Philips technology that analyzes the content displayed on your screen. Based on a scenario you select, SmartImage Lite dynamically enhances the contrast, color saturation and sharpness of images and videos for ultimate display performance - all in real time with the press on a single button.

SmartContrast ratio 20000000:1

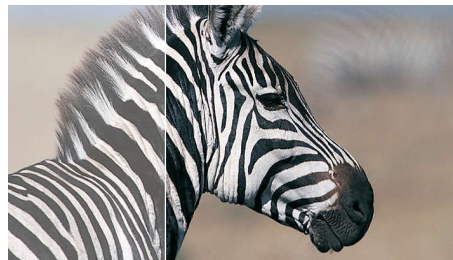

You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

SmartControl Lite

SmartControl Lite is the next generation 3D icon based GUI monitor control software. This allows user to fine-tune most parameters of the monitor like Color, Brightness, screen calibration, Multi-media, ID management, etc with the mouse.


244EL2SB/00

SmartTouch controls




SmartTouch controls are intelligent, touch sensitive icons that replace protruding buttons. Responding to your lightest touch, SmartTouch controls, for example, power up your monitor or brighten and sharpen your display with SmartImage Lite. When activated, SmartTouch icons glow to indicate that your commands have been implemented.

Easy picture format control

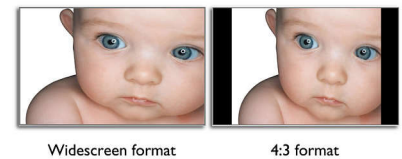

Philips easy picture format control on OSD is to switch from the 4:3 aspect ratio to the widescreen mode and back again to match the display's aspect ratio with your content for working with wide documents without scrolling or viewing widescreen media in the widescreen mode and distortion-free, native mode display of 4:3 ratio content.



Specifications

Connectivity

- Audio output: HDMI audio out (3.5 mm jack)x1
- Signal Input: VGA (Analog), DVI-D (digital, HDCP), HDMI
- Sync Input: Separate Sync, Sync on Green

Picture/Display

- Panel Size: 24 inch / 61 cm
- Aspect ratio: 16:9
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.276 x 0.276
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 250 cd/m²
- Display colors: 16.7 M
- SmartContrast: 20,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 176° (H) / 170° (V), @ C/R > 5
- Picture enhancement: SmartImage Lite
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

Convenience

- Plug & Play Compatibility: DDC/CI, Windows 7 / Vista, Mac OS X, sRGB
- User convenience: SmartImage lite, SmartControl lite, Volume, Menu, Input, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese, Turkish
- Other convenience: VESA mount (100x100mm), Kensington lock

Stand

- Tilt: -5/+20 degree

Power

- Power supply: Built-in, 100-240VAC, 50/60Hz
- Off mode: 0.5 W
- On mode: 22.8 W (EnergyStar 5.0 test method)
- Standby mode: 0.5 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

- Product with stand (mm): 570 x 437 x 225 mm
- Packaging in mm (WxHxD): 626 x 500 x 171 mm
- Product without stand (mm): 570 x 353 x 62 mm

Weight

- Product with packaging (kg): 6.7 kg
- Product with stand (kg): 4.9 kg
- Product without stand (kg): 4.5 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: RoHS, EPEAT Silver, EnergyStar 5.0

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC, Class B, GOST, UL/cUL, TCO 5.1

Cabinet

- Color: Black / Black
- Finish: Glossy



Issue date 2024-03-24

Version: 3.0.1

EAN: 87 12581 58422 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com