



Philips  
Full HD Curved LCD  
monitor

**E Line**  
27" (68.6 cm)  
1920 x 1080 (Full HD)

**271E1CA**

## Simply immersive

The 27" curved E line display offers a truly immersive experience in a stylish design. Experience crisp Full HD visuals, and smooth action with AMD FreeSync technology.

### **Curved design inspired by the world around us**

- Curved display design for more immersive experience

### **Superb Picture Quality**

- VA display delivers awesome images with wide viewing angles
- 16:9 Full HD display for crisp detailed images
- Effortlessly smooth gameplay with AMD FreeSync™ technology
- SmartContrast for rich black details
- SmartImage game mode optimized for gamers

### **Features designed for you**


- Cable management reduces cable clutter for neat workspace
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity
- HDMI ensures universal digital connectivity
- Built-in stereo speakers for multimedia

# PHILIPS

Full HD Curved LCD monitor  
E Line 27" (68.6 cm), 1920 x 1080 (Full HD)


# Highlights

## Curved display design

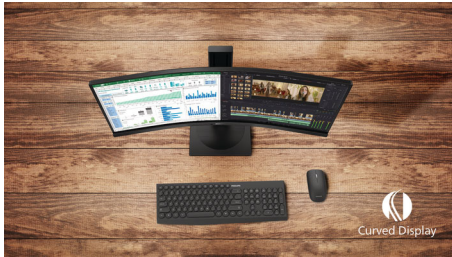


Desktop monitors offer a personal user experience, which suits a curve design very well. The curved screen provides a pleasant yet subtle immersion effect, which focuses on you at the center of your desk.

## VA display

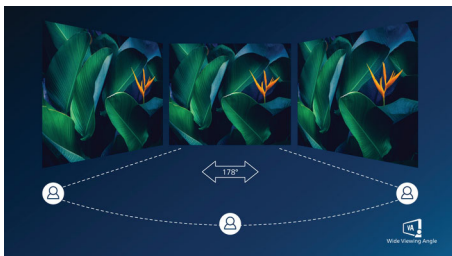

Philips VA LED display uses an advanced multi-domain vertical alignment technology which gives you super-high static contrast ratios for extra vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web-browsing, movies, gaming, and demanding graphical applications. It's optimized pixel management technology gives you 178/178 degree extra wide viewing angle, resulting in crisp images.

## 16:9 Full HD display

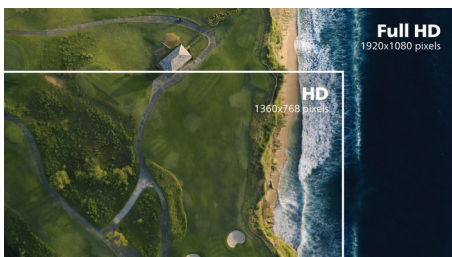

Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired


with high brightness, incredible contrast and realistic colors expect a true to life picture.

## Ultra-smooth gaming



Gaming shouldn't be a choice between choppy gameplay or broken frames. With the new Philips monitor it doesn't have to be. Get fluid, artifact-free performance at virtually any framerate with AMD FreeSync™ technology, smooth quick refresh and ultra-fast response time.

## SmartImage Game mode

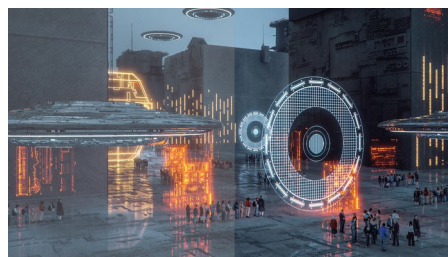

The new Philips gaming display has quick access OSD fine tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts display with fastest response time, high color, along with image adjustments. "RTS" mode (Real time strategy) has a special SmartFrame mode which enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customized settings based on different games, ensuring best performance.

271E1CA/00

## Concealed cables




For a cleaner workspace, this monitor features an elegant solution for cable management. No need to bundle cables with extra ties. An elongated slot provides a hidden storage for cables. It conceals cables and looks great in most environments, especially for a small space or the desk that faces a wall or a window. This design cleans up messy cables, for a more organized desk.

## Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

## LowBlue Mode

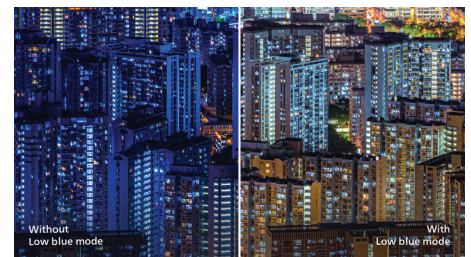

Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.



# Specifications

## Picture/Display

- LCD panel type: VA LCD
- Backlight type: W-LED system
- Panel Size: 27 inch / 68.6 cm
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- Effective viewing area: 597.9 (H) x 336.3 (V) mm - at a 1500R curvature\*
- Aspect ratio: 16:9
- Maximum resolution: 1920 x 1080 @ 75 Hz\*
- Pixel Density: 82 PPI
- Response time (typical): 4 ms (Gray to Gray)\*
- Brightness: 250 cd/m<sup>2</sup>
- Contrast ratio (typical): 3000:1
- SmartContrast: Mega Infinity DCR
- Pixel pitch: 0.311 x 0.311 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Picture enhancement: SmartImage game
- Color gamut (typical): NTSC 83%\*, sRGB 100%\*
- Display colors: 16.7 M
- Scanning Frequency: 30 - 85 kHz (H) / 48 - 76 Hz (V)
- sRGB
- Flicker-free
- LowBlue Mode
- AMD FreeSync™ technology

## Connectivity

- Signal Input: VGA (Analog), HDMI (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

## Convenience

- Built-in Speakers: 3 W x 2
- User convenience: Power On/Off, Menu, Volume, Input, SmartImage Game
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7

## Stand

- Tilt: -5/20 degree

## Power

- On mode: 33.2 W (typ.)
- Standby mode: < 0.5 W (typ.)
- Off mode: < 0.3 W (typ.)
- Energy Label Class: E
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: External, 100-240VAC, 50-60Hz

## Dimensions

- Product with stand (mm): 611 x 462 x 203 mm
- Product without stand (mm): 611 x 367 x 43 mm
- Packaging in mm (WxHxD): 730 x 538 x 186 mm

## Weight

- Product with stand (kg): 4.41 kg
- Product without stand (kg): 3.81 kg
- Product with packaging (kg): 6.86 kg

## Operating conditions

- Temperature range (operation): 0 to 40 °C
- Temperature range (storage): -20 to 60 °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF: 50,000 hrs (excluding backlight) hour(s)

## Sustainability

- Environmental and energy: RoHS, Mercury Free
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: CE Mark, CU-EAC, TUV-BAUART, CB, cETLus, TUV/ISO9241-307, UKRAINIAN

## Cabinet

- Color: Black
- Finish: Textured

## What's in the box?

- Monitor with stand
- Cables: HDMI cable, Audio cable, Power cable
- User Documentation



Issue date 2023-03-26

Version: 4.0.1

12 NC: 8670 001 61053  
EAN: 87 12581 76094 6

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Radius of the arc of the display curvature in mm

\* The maximum resolution works for HDMI input only.

\* Response time value equal to SmartResponse

\* NTSC Area based on CIE1976

\* sRGB Area based on CIE1931

\* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.

\* The monitor may look different from feature images.