



Philips Gaming Monitor
Full HD Curved LCD
monitor

Momentum

24 (23.6" / 59.9 cm diag.)
1920 x 1080 (Full HD)

242M7

Get in the moment

The curved Momentum monitor gets you in the moment. AMD FreeSync™ technology and 144Hz fast refresh rate give flawlessly smooth entertainment experience for playing games and watching movies. Scenes look more real with Ultra Wide-Color.

Built for fast action

- 144Hz refresh rates for ultra-smooth, brilliant images
- AMD FreeSync™ Premium; tear free, stutter free, fluid gaming
- SmartImage game mode optimized for gamers

Superb Picture Quality

- VA display delivers awesome images with wide viewing angles
- Ultra Wide-Color wider range of colors for a vivid picture

Design to enhance the senses

- Curved display design for more immersive experience
- Narrow border display for a seamless appearance

Get comfortable

- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity
- Screen tilts to your ideal, individualized viewing angle


PHILIPS

Full HD Curved LCD monitor
Momentum 24 (23.6" / 59.9 cm diag.), 1920 x 1080 (Full HD)

242M7/69


Highlights

AMD FreeSync™ Premium

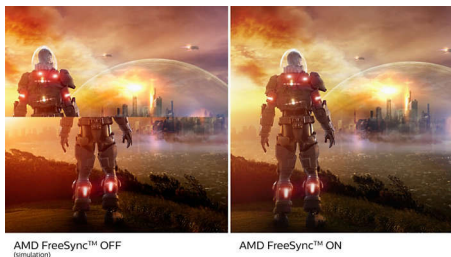

Gaming shouldn't be a choice between choppy gameplay or broken frames. AMD FreeSync™ Premium equips serious gamers with a fluid, tear-free gameplay experience at peak performance. There are no compromises, game confidently with a high refresh rate, low framerate compensation, and low latency.

144Hz Gaming

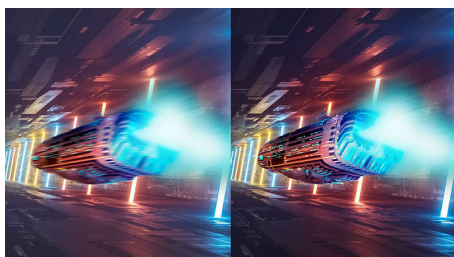

You play intense, competitive gaming. You demand display with lag free, ultra-smooth images. This Philips display redraws the screen image up-to 144 times per second, effectively 2.4x faster than a standard display. A lower frame rate can make enemies appear to jump from spot to spot on the screen, making them difficult targets to hit. With 144Hz frame rate, you get those critical missing images on the screen which shows enemy movement in ultra-smooth motion so you can easily target them. With ultra-low input lag and no screen tearing, this Philips display is your perfect gaming partner

SmartImage Game mode



The new Philips gaming display has quick access OSD fine tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts display with fastest response time, high color, along with image adjustments. "RTS" mode (Real time strategy) has a special SmartFrame mode which enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customized settings based on different games, ensuring best performance.

VA display



Philips VA LED display uses an advanced multi-domain vertical alignment technology which gives you super-high static contrast ratios for extra vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web-browsing, movies, gaming, and demanding graphical applications. It's optimized pixel management technology gives you 178/178 degree extra wide viewing angle, resulting in crisp images.

Ultra Wide-Color Technology



Ultra Wide-Color Technology delivers a wider spectrum of colors for a more brilliant picture. Ultra Wide-Color wider "color gamut" produces more natural-looking greens, vivid reds and deeper blues. Bring, media entertainment, images, and even productivity more alive and vivid colors from Ultra Wide-Color Technology.

Curved display design



Desktop monitors offer a personal user experience, which suits a curve design very well. The curved screen provides a pleasant yet subtle immersion effect, which focuses on you at the center of your desk.

UltraNarrow Border



The new Philips displays feature ultra-narrow borders which allow for minimal distractions and maximum viewing size. Especially suited for multi-display or tiling setup like gaming, graphic design and professional applications, the ultra-narrow border display gives you the feeling of using one large display.

AMD
FreeSync
Premium

144Hz

SmartImage™
Game

VA
Wide Viewing
Angle

Ultra Wide Color

CurvedDisplay

LowBlue Mode

Flicker-free

CurvedDisplay

Flicker-free

Specifications

Connectivity

- Signal Input: VGA (Analog), DisplayPort 1.2, HDMI 1.4
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Audio out

Picture/Display

- Panel Size: 23.6 inch / 59.9 cm
- Aspect ratio: 16:9
- LCD panel type: VA LCD
- Backlight type: W-LED system
- Pixel pitch: 0.272 x 0.272 mm
- Optimum resolution: 1920 x 1080 @ 144 Hz
- Brightness: 250 cd/m²
- Display colors: 16.7 M
- Color gamut (typical): NTSC 98.7%*, sRGB 121.4%*
- Contrast ratio (typical): 3000:1
- SmartContrast: 80,000,000:1
- Response time (typical): 4 ms (GtG)*
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Picture enhancement: SmartImage game
- Effective viewing area: 521.4 (H) x 293.3 (V) - at a 1500R curvature*
- Scanning Frequency: 30 - 160 kHz (H) / 48 - 144 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 93 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- AMD FreeSync™ technology: Premium

Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu/OK, Brightness/Down, Input/Up, SmartImage game/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount

(100x100mm)

Stand

- Tilt: -5/20 degree

Power

- Power supply: External, 100-240VAC, 50-60Hz
- Off mode: < 0.3 W (typ.)
- On mode: 25 W (typ.)
- Standby mode: < 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

- Product with stand (mm): 537 x 413 x 198 mm
- Packaging in mm (WxHxD): 595 x 484 x 243 mm
- Product without stand (mm): 537 x 325 x 37 mm

Weight

- Product with packaging (kg): 5.18 kg
- Product with stand (kg): 3.20 kg
- Product without stand (kg): 2.85 kg

Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40 °C
- MTBF: 50,000 (Excluded backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60 °C

Sustainability

- Environmental and energy: RoHS, WEEE
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

- Regulatory Approvals: CCC, CECP, CEL, PSB

Cabinet

- Color: Black
- Finish: Textured



Issue date 2024-03-25

Version: 5.0.1

EAN: 87 12581 75575 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Radius of the arc of the display curvature in mm

* Response time value equal to SmartResponse

* NTSC Area based on CIE1976

* sRGB Area based on CIE1931

* For any questions related to 144Hz performance please refer to your card vendor directly.

* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.

* The monitor may look different from feature images.