

Philips
QHD LCD monitor

E Line
27" (68.6 cm)
2560 x 1440 (QHD)

275E2FAE



Experience true color, unconstrained visuals

The new Philips E line monitor with 4-sides narrow border and cable management design offers a stylish enhancement to your workspace. Experience Crystal-clear Quad HD visuals, 1ms and AMD FreeSync™ technology for smooth gaming action.

Superb Picture Quality

- 4-sided frameless display
- IPS LED wide view technology for image and color accuracy
- Crystalclear images with Quad HD 2560 x 1440 pixels
- SmartContrast for rich black details

Good for Gaming

- Effortlessly smooth gameplay with AMD FreeSync™ technology
- 1ms (MPRT) fast response for crisp image and smooth gameplay
- SmartImage game mode optimized for gamers

Features designed for you

- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity
- Cable management reduces cable clutter for neat workspace
- EasySelect menu toggle key for quick on-screen menu access
- Built-in stereo speakers for multimedia

PHILIPS


Highlights

4-sided frameless




Extremely minimizing 4-sided bezels on this virtually frameless display gives minimalist look and offers an expansive viewing experience. Expand your productivity and make you focus on the vivid images with seamless visions. Significant wide view without distraction even multi monitor set-up in pivot mode.

Crystalclear images

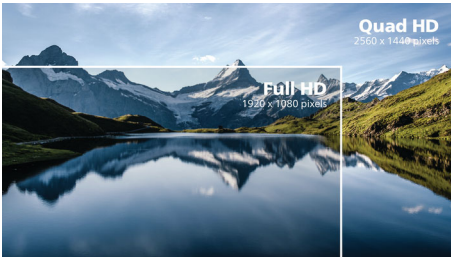


These Philips screens deliver Crystalclear, Quad HD 2560x1440 or 2560x1080 pixel images. Utilizing high performance panels with high density pixel count, enabled by high bandwidth sources like USB-C, Displayport, HDMI, these new displays will make your images and graphics come alive. Whether you are demanding professional requiring extremely detailed information for CAD-CAM solutions, using 3D graphic applications or a financial wizard working on huge spreadsheets, Philips displays will give you Crystalclear images.

Ultra-smooth gaming

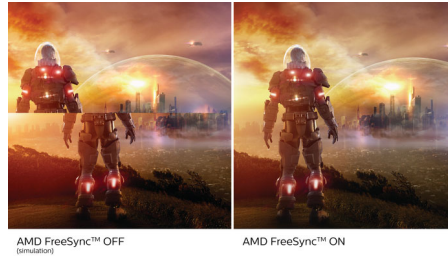

Gaming shouldn't be a choice between choppy gameplay or broken frames. With the new Philips monitor it doesn't have to be. Get fluid, artifact-free performance at virtually any framerate with AMD FreeSync™ technology, smooth quick refresh and ultra-fast response time.

1ms MPRT fast response

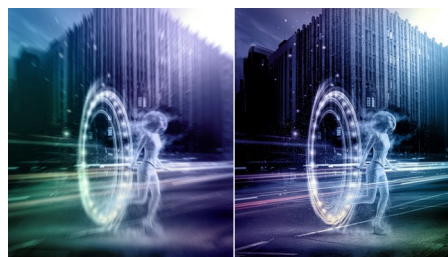

MPRT (motion picture response time) is more intuitive way to describe the response time, which directly refers the duration from seeing blurry noise to clean and crisp images. Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur, delivers sharper and precise visuals to enhance gaming experience. Best choice for playing thrilling and twitch-sensitive games.

SmartImage Game mode



The new Philips gaming display has quick access OSD fine tuned for gamers, offering you


multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts display with fastest response time, high color, along with image adjustments. "RTS" mode (Real time strategy) has a special SmartFrame mode which enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customized settings based on different games, ensuring best performance.

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

LowBlue Mode

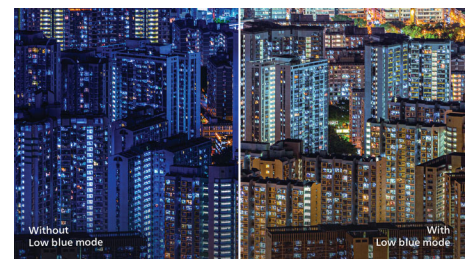

Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.



4-sided Frameless



Wide Viewing Angle



Quad HD



SmartContrast



AMD FreeSync



Fast Response 1ms MPRT



SmartImage Game



Flicker-free



LowBlue Mode



EasySelect

Specifications

Picture/Display

- LCD panel type: IPS technology
- Backlight type: W-LED system
- Panel Size: 27 inch / 68.6 cm
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- Effective viewing area: 596.74 (H) x 335.66 (V) mm
- Aspect ratio: 16:9
- Maximum resolution: 2560 x 1440 @ 75 Hz*
- Pixel Density: 109 PPI
- Response time (typical): 4 ms (Grey to Grey)*
- MPRT: 1 ms
- Brightness: 350 cd/m²
- Contrast ratio (typical): 1000:1
- SmartContrast: Mega Infinity DCR
- Pixel pitch: 0.2331 x 0.2331 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Picture enhancement: SmartImage game
- Color gamut (typical): NTSC 101.6%*, sRGB 115.6%*
- Display colors: 16.7 M
- Scanning Frequency: 30 - 144 kHz (H) / 48 - 75 Hz (V)
- sRGB
- Flicker-free
- LowBlue Mode
- EasyRead
- AMD FreeSync™ technology

Connectivity

- Signal Input: DisplayPort x 1, HDMI x 2
- Sync Input: Separate Sync
- Audio (In/Out): Audio out

Convenience

- Built-in Speakers: 3 W x 2
- User convenience: Power On/Off, Menu, Volume, Input, SmartImage Game
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7

Stand

- Height adjustment: 100 mm
- Tilt: -5/20 degree

Power

- On mode: 18.55 W (typ.) (EnergyStar test method)
- Standby mode: 0.5 W (typ.)
- Off mode: 0.3 W (typ.)
- Energy Label Class: F
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: External, 100-240VAC, 50-60Hz

Dimensions

- Product with stand(max height): 614 x 475 x 234 mm
- Product without stand (mm): 614 x 354 x 38 mm
- Packaging in mm (WxHxD): 678 x 504 x 153 mm

Weight

- Product with stand (kg): 5.23 kg
- Product without stand (kg): 3.43 kg
- Product with packaging (kg): 7.59 kg

Operating conditions

- Temperature range (operation): 0 to 40 °C
- Temperature range (storage): -20 to 60 °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF: 50,000 hrs (excluding backlight) hour(s)

Sustainability

- Environmental and energy: EnergyStar 8.0, TCO Certified, RoHS, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: EPA, CB, TUV/ISO9241-307, TUV-BAUART, CU-EAC, EAEU RoHS, CE Mark, FCC Class B, ICES-003

Cabinet

- Color: Black
- Finish: Textured

What's in the box?

- Monitor with stand
- Cables: HDMI cable, Power cable
- User Documentation



Issue date 2023-09-13

Version: 5.0.1

12 NC: 8670 001 67754
EAN: 87 12581 76765 5

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
* The maximum resolution works for either HDMI input or DP input.
* NTSC Area based on CIE1976
* sRGB Area based on CIE1931
* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.
* The monitor may look different from feature images.