

Philips  
LCD monitor with USB-C

### B Line

24 (23.8" / 60.5 cm diag.)  
1920 x 1080 (Full HD)

243B1



## Simplify your connections

with USB-C docking monitor

The Philips USB-C monitor replaces cable clutter. View FHD image and re-charge a laptop, all at the same time with a single USB-C cable. Features like Daisy chain for multi-display setup, Eye comfort with TUV certified to reduce eye fatigue

#### Designed for the way you work

- Built-in stereo speakers for multimedia
- SmartErgoBase enables people-friendly ergonomic adjustments
- DisplayPort connection for maximum visuals
- HDMI ensures universal digital connectivity
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity
- TUV Eye Comfort certified to reduce eye fatigue

#### Single cable USB-C connection

- Connect your notebook with one USB-C cable
- Power and re-charge compatible notebook from the monitor
- USB 3.2 high speed data transfer

#### Designed for sustainability

- LightSensor for the perfect brightness with minimal power
- PowerSensor saves up to 70% energy costs

# PHILIPS

LCD monitor with USB-C  
B Line 24 (23.8" / 60.5 cm diag.), 1920 x 1080 (Full HD)

243B1/27

# Highlights

## USB-C connection



This Philips display features a USB type-C connector with power delivery. With intelligent and flexible power management, you can power charge your compatible device directly. Its slim, reversible USB-C allows for easy, one-cable connection. You can watch high resolution video and transfer data at a super-speed, while powering up and re-charging your compatible device at the same time.

## Power & re-charge notebook

This monitor features a built in USB-C connector which meets USB Power Delivery standard. With intelligent and flexible power management, you can now power up and or re-charge your compatible\* Notebook directly from the Monitor using a single USB-C cable.

## TUV Rheinland Eye Comfort



Philips display meet TUV Rheinland Eye Comfort standard to prevent eye strain caused by prolonged computer use. With TUV Eye Comfort certification, Philips displays ensure

flicker-free, low blue mode, no disturbing reflections, wide viewing angle and less reduction of image quality from different angles and ergonomic stand designs for ideal viewing experience. Keep your eyes healthy and boost work productivity.

## Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

## LowBlue Mode




Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

## HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

## SmartErgoBase

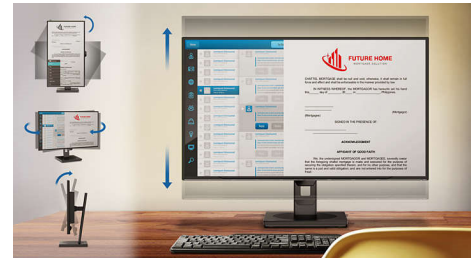

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height adjustable stand guarantees the optimal viewing level, reducing the physical strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.



USB-C



Flicker-free



LowBlue Mode



HDMI



SmartErgo Base



Built-in Speaker



PowerSensor



LightSensor



# Specifications

## Picture/Display

- Panel Size: 23.8 inch / 60.5 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.2745 x 0.2745 mm
- Brightness: 300 cd/m<sup>2</sup>
- Display colors: 16.7M
- Color gamut (typical): NTSC 91%\*, sRGB 107%\*
- Contrast ratio (typical): 1000:1
- SmartContrast: 50,000,000:1
- Response time (typical): 4 ms (Gray to Gray)\*
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Maximum resolution: 1920 x 1080 @ 75 Hz\*
- Effective viewing area: 527.04 (H) x 296.46 (V)
- Scanning Frequency: 30 - 85 kHz (H) / 48 - 75 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 93 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- EasyRead

## Connectivity

- Signal Input: DisplayPort 1.4 x 1, HDMI 1.4 x 1, USB-C 3.2 Gen 2 x 1 (upstream, power delivery up to 90 W)
- Sync Input: Separate Sync
- Audio (In/Out): Audio out
- RJ45: Ethernet LAN up to 1G\*, Wake On Lan
- Signal Output: DisplayPort out\* (DP / USB-C)
- USB:: USB 3.2 Gen 2 x 1 (upstream), USB 3.2 x 4 (downstream with 1 fast charge B.C 1.2)
- HDCP: HDCP 1.4 (HDMI/DP/USB-C)
- HBR3

## USB

- Power delivery: USB PD version 3.0
- Super speed: Data and Video transfer
- DP: Built-in Display Port Alt mode

- USB-C max. power delivery: Up to 90W (5V/3A; 7V/3A; 9V/3A; 10V/3A; 12V/3A; 15V/3A; 20V/4.5A)
- USB-C: Reversible plug connector

## Convenience

- Built-in Speakers: 2 W x 2
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: SmartImage, Input, PowerSensor, Menu, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Control software: SmartControl

## Stand

- Height adjustment: 150 mm
- Pivot: +/- 90 degree
- Swivel: +/- 180 degree
- Tilt: -5 ~ 35 degree

## Power

- ECO mode: 12.6 W (typ.)
- Power supply: Built-in, 100-240VAC, 50-60Hz
- Off mode: Zero watts with Zero switch
- On mode: 15.2 W (typ.) (EnergyStar test method)
- Standby mode: < 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Packaging in mm (WxHxD): 730 x 450 x 139 mm
- Product without stand (mm): 540 x 323 x 51 mm
- Packaging in inch (WxHxD): 28.7 x 17.7 x 5.5 inch
- Product without stand in inch: 21.3 x 12.7 x 2.0 inch
- Product with stand(max height): 540 x 501 x

- 205 mm
- Product with stand(max height): 21.3 x 19.7 x 8.1 inch

## Weight

- Product with packaging (kg): 7.66 kg
- Product with stand (kg): 4.98 kg
- Product with packaging (lb): 16.85 lb
- Product with stand (lb): 10.96 lb
- Product without stand (kg): 3.40 kg
- Product without stand (lb): 7.48 lb

## Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40°C °C
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C
- MTBF (demonstrated): 70,000 hrs (excluded backlight)

## Sustainability

- Environmental and energy: PowerSensor, LightSensor, EnergyStar 8.0, EPEAT\*, RoHS, TCO Certified Edge, WEEE
- Post consumer recycled plastic: 85%
- Recyclable packaging material: 100 %
- Specific Substances: PVC / BFR free housing, Mercury free

## Compliance and standards

- Regulatory Approvals: CE Mark, FCC Class B, SEMKO, CU-EAC, EAEU RoHS, TUV/GS, TUV Ergo, UKRAINIAN, ICES-003, CB, TUV Eye Comfort certified

## Cabinet

- Finish: Texture
- Foot: Black
- Front bezel: Black
- Rear cover: Black

# Specifications

## What's in the box?

- Cables: HDMI cable, DP cable, USB-C/A Y cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-10-28

Version: 6.6.1

UPC: 6 09585 25370 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

- \* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
- \* The maximum resolution works for either USB-C, DP or HDMI input.
- \* Response time value equal to SmartResponse
- \* NTSC Area based on CIE1976
- \* sRGB Area based on CIE1931
- \* DisplayPort out works only under either DP in or USB-C in.
- \* Maximum number of external displays that can be supported: 1 by using USB-C, 3 by using DP
- \* If your Ethernet connection seems slow, please enter OSD menu and select USB 3.0 or higher version which can support the LAN speed to 1G.
- \* Activities such as screen sharing, on-line streaming video and audio over the Internet can impact your network performance. Your hardware, network bandwidth and its performance will determine overall audio and video quality.
- \* For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
- \* For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
- \* EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.
- \* The monitor may look different from feature images.