



Philips  
LCD monitor with  
SmartControl Lite

**V Line**  
24 (23.8"/60.5 cm diag.)

**240V5QDSB**

## Great LED images in vivid colours

Enjoy vibrant pictures on this Philips display. Equipped with HDMI and SmartControl lite, it's a great choice!

### **Experience multimedia**

- HDMI-ready for Full HD entertainment

### **Great choice**

- Compact design saves space
- Mercury Free eco-friendly display
- VESA mount allows for flexibility

### **Vivid pictures every time**

- Easy display performance tuning with SmartControl Lite
- SmartContrast for rich black details
- 16:9 Full HD display for crisp, detailed images
- IPS-ADS wide-view technology for image and colour accuracy


# PHILIPS

LCD monitor with SmartControl Lite  
V Line 24 (23.8"/60.5 cm diag.)

240V5QDSB/00


# Highlights

## IPS-ADS technology

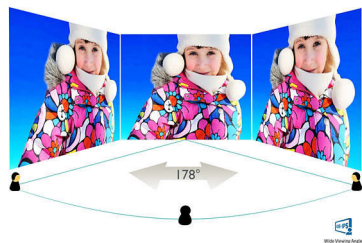

IPS-ADS displays use an advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS-ADS displays give you remarkably crisp images with vivid colours, making them ideal not only for Photos, movies and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.


## 16:9 Full HD display

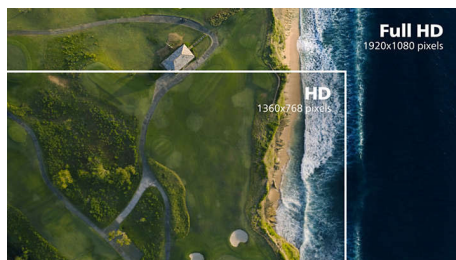

Picture quality matters. Regular displays deliver quality, but you expect more. This display

features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colours, expect a true-to-life picture.

## SmartContrast

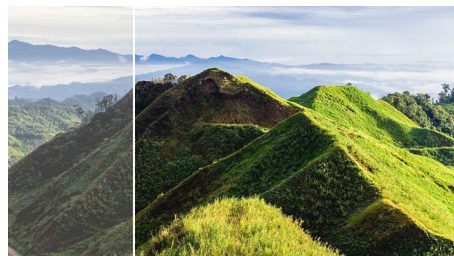

SmartContrast is a Philips technology that analyses the contents you are displaying, automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

## SmartControl Lite

SmartControl Lite is the next generation 3D icon-based GUI monitor control software. This allows the user to fine-tune most parameters of the monitor like Colour, Brightness, screen calibration, Multimedia, ID management etc. with the mouse.

## HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality digital video and audio to be transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

## Mercury Free

Philips monitors with LED backlighting are free from Mercury, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its lifecycle, from manufacturing to disposal.

## Compact design saves space

Compact design saves space

## VESA mount

VESA mount allows for flexibility



# Specifications

## Connectivity

- Signal Input: VGA (Analogue), DVI-D (digital, HDCP), HDMI (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

## Picture/Display

- Panel Size: 23.8 inch/60.5 cm
- Aspect ratio: 16:9
- LCD panel type: IPS-ADS LCD
- Backlight type: W-LED system
- Pixel pitch: 0.275 x 0.275 mm
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colours: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 10,000,000:1
- Response time (typical): 5 ms (GtG)\*
- Viewing angle: 178° (H)/178° (V), @ C/R > 10
- Effective viewing area: 527.04 (H) x 296.46 (V)
- Scanning Frequency: 30–83 kHz (H)/56–76 Hz (V)
- sRGB

## Convenience

- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7, Windows 8.1
- User convenience: Power On/Off, Menu/OK, Brightness/Back, 4:3 Wide/Up, Auto/Down
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)

## Stand

- Tilt: -5/20 degree

## Power

- Power supply: Built-in, 100–240 VAC, 50–60 Hz
- Off mode: 0.5 W (typ.)
- On mode: 19.23 W (typ.) (EnergyStar 6.0 test

method)

- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)

## Dimensions

- Product with stand (mm): 553 x 420 x 219 mm
- Packaging in mm (W x H x D): 600 x 415 x 118 mm
- Product without stand (mm): 553 x 343 x 55 mm

## Weight

- Product with packaging (kg): 5.36 kg
- Product with stand (kg): 4.09 kg
- Product without stand (kg): 3.69 kg

## Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 50 000 (Excluded backlight) hour(s)
- Relative humidity: 20–80% %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: EnergyStar 6.0, RoHS, Mercury Free
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: CE Mark, FCC Class B, TCO Certified, cETLus, TUV/ISO9241-307, BSMI, PSB, C-tick, UKRAINIAN, EPA

## Cabinet

- Colour: Black
- Finish: Hairline (front bezel)/Texture (rear cover)

## What's in the box?

- Cables: VGA, Power
- Monitor with stand
- User Documentation



Issue date 2024-04-24

Version: 4.0.1

EAN: 87 12581 73241 7

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* "IPS" word mark / trademark and related patents on technologies  
belong to their respective owners.  
\* HDMI cables vary depending on region and models.  
\* Response time value equal to SmartResponse